

GEOM

AERO

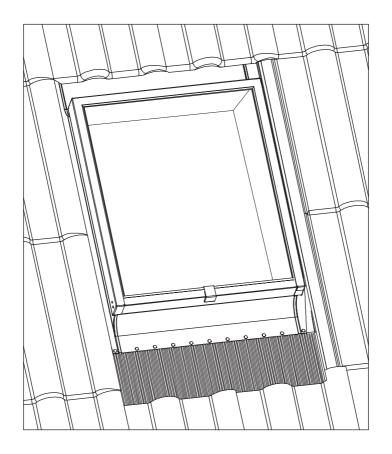

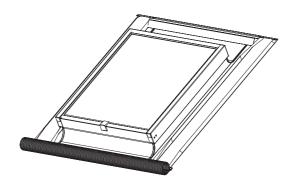



 


[02] x2





H=max. 50mm



H=max. 8mm

GEOM


AERO




04

Installation

12

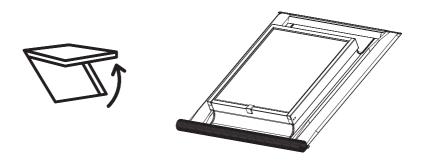

Record from packaging - Barcode

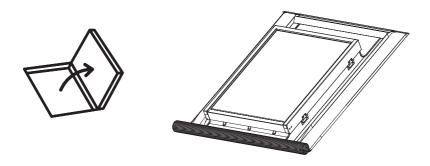

Record from packaging - Barcode



Let's get started...

These instructions are for your safety. Please read through them thoroughly before use and retain them for future reference.

(P)	Getting started Before you start Safety	05 06 07
	In more detail Detailed blueprint Care and maintenance Technical and legal information	08 09 10

Installation

GB IE

Your product

 
Installation instruction located at the end of the instruction manual



You will need

To install your window (items not supplied)















4x30mm x8













Check that you have noted all the following instructions:



Carry out the installation from the inside of the building.



Never leave any object resting on the external face of the roof and section off the area below.



Ensure installation meets the requirements of Building Regulations and does not compromise the structural integrity of the roof.



Protect hands during installation.



Protect glass from damage when handling and during installation



Read the instruction manual completely and carefully before commencing installation.



Wear suitable protective equipment during installation.





It is recommended that you wear safety masks and goggles, when cutting any internal materials in the roof or when cutting tiles.


It is strongly recommended that a qualified professional undertakes the installation of this product.



In more detail...

Detailed blueprint	09
Care and maintenance	10
Technical and legal information	11



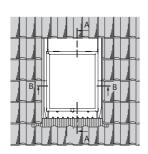

- A A: Vertical cross-section: skylight in the roof B B: Horizontal cross-section: skylight in the roof
- A-A


 130-135mm distance between roof tiles and skylight

 Roof pitch suitable for your skylight

 H + 10mm

 H length of skylight


 H+10mm distance between battens

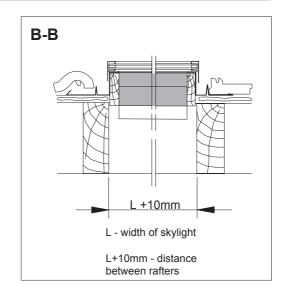

Golden rules for care


- 1 Ensure adequate ventilation to minimise condensation.
- Remove dust and dirt with a soft cloth using a mild detergent and water solution.
- 3 Lubricate hinges every year.
- At least every 4 years apply a suitable primer and varnish to the timber frame.


Operation and ventilation

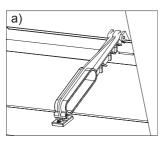

The handle can be set in 4 positions:

 - a) permanent ventilation for draught-free, even ventilation
- b) microventilation 2 positions
- c) closed.

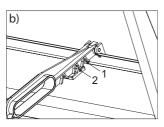



Technical specifications



B&Q plc, Chandlers Ford Hampshire SO53 3LE 13

EN 14351-1:2006 + A1 DoP No. BQDP-0016-CPR02042013

Geom Aero Skylight intended to be used in non heated domestic locations

Resistance to wind load - Test pressure: Class 3
Resistance to wind load - Frame pressure:

Class C/B

Resistance to snowload: 3-9-3 Reaction to fire: C-s2.d0

External fire performance: Broof(t1)
Watertightness - Non-shielded (A): 4A

Watertightness - Shielded (B): npd

Impact resistance: Class 2

Load-bearing capacity of safety device: npd

Acoustic performance: npd
Thermal transmittance: npd

Radiation properties - Solar factor: 0,79 Radiation properties - Light transmittance: 0,82

Air permeability: Class 2

Imported for: B&Q plc, Chandlers Ford Hants,

SO53 3LE United Kingdom

 
Commercial brand: GEOM


www.diy.com

B&Q plc, Chandlers Ford, Hampshire, SO53 3LE.

+44 (0) 178 855 8660 Monday to Friday 8:30am to 5pm Great Britain & Ireland


Installation




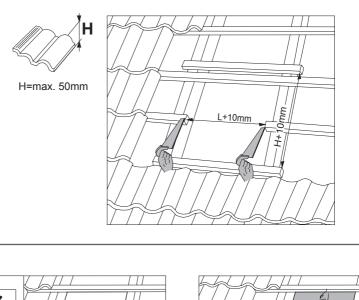





L=75mm x4

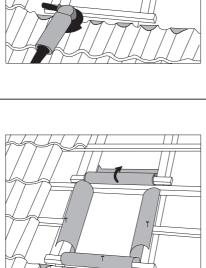

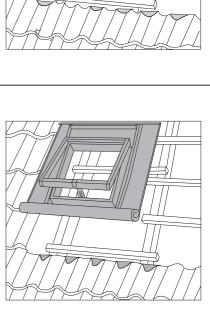


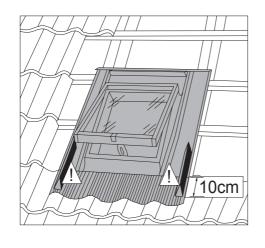




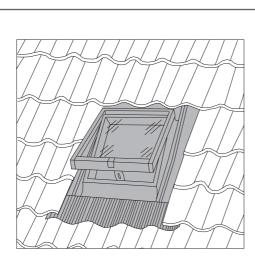 




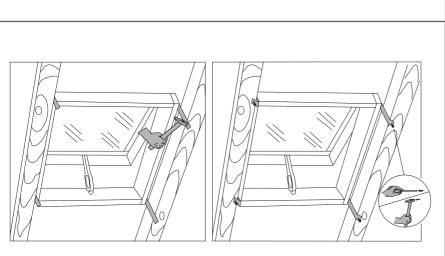





H=max. 8mm

 
Installation

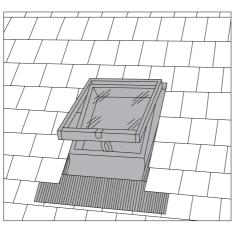

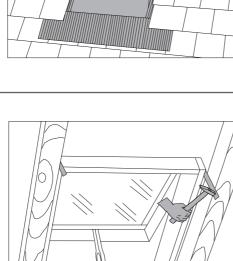



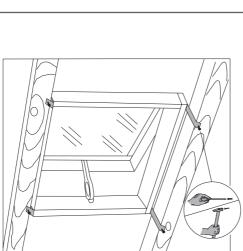







GB IE B&Q plc

Chandlers Ford, Hants, SO53 3LE United Kingdom www.diy.com