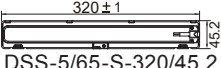


Once the electrical connection point and routing of the mains cable is established ensure that any excess cable is secured in such a way to prevent it falling into the motor housing and damaging the appliance.

Technical Data

Supply voltage	220-240 V~ 50 Hz
Power consumption - Fan	160 W
Power consumption - Cooking Light	2 x 3.5 W
Power consumption - Total	167 W
Protection class	Class I
ILCOSD Code - Cooking Light	 DSS-5/65-S-320/45.2

Information for EU No. 66/2014 and No. 65/2014

A. Information of the cooker hood (www.diy.com)

Description	Symbol	Value	Unit
Model identification	GHISL90EU / CLISL90EU		
Annual Energy Consumption	AEC_{hood}	22.8	kWh/a
Time increase factor	f	0.6	-
Fluid Dynamic Efficiency	FDE_{hood}	37.6	-
Energy Efficiency Index	EEI_{hood}	36.2	-
Measured air flow rate at best efficiency point	Q_{BEP}	324.6	m ³ /h
Measured air pressure at best efficiency point	P_{BEP}	330	Pa
Maximum air flow	Q_{max}	640.7	m ³ /h
Measured electric power input at best efficiency point	W_{BEP}	79.2	W
Nominal power of the lighting system	W_L	7.5	W

Description	Symbol	Value	Unit
Average illumination of the lighting system on the cooking surface	E_{middle}	290	lux
Measured power consumption in standby mode	P_s	N/A	W
Measured power consumption off mode	P_o	0.50	W
Sound power level	L_{WA}	65	dB
Energy Efficiency Index	EEI_{hood}	36.2	-
Energy Efficiency Class	-	A++	-
Fluid Dynamic Efficiency	FDE_{hood}	37.6	-
Fluid Dynamic Efficiency Class	-	A	-
Lighting Efficiency	LE_{hood}	39	-
Lighting Efficiency Class	-	A	-
Grease Filtering Efficiency	GFE_{hood}	75.2	%
Grease Filtering Efficiency Class	-	C	-

The measurement and calculation method of the above table was done in accordance with Commission Delegated Regulation (EU) No 65/2014 & Commission Regulation (EU) No 66/2014.

B. The following shows how to reduce total environmental impact (e.g. energy use) of the cooking process.

1. Install the cooker hood in a proper place where there is efficient ventilation.
2. Clean the cooker hood regularly so as not to block the airway.
3. Remember to switch off the cooker hood light after cooking.
4. Remember to switch off the cooker hood after cooking.

C. Information for dismantling.

This appliance cannot be dismantled by the user, other than that as shown in the original assembly of the user manual.

At the end of its useful life, the appliance should not be disposed of with household waste. Check with your local governmental authority, domestic waste disposal services or the retailer where the product was bought for recycling advice.

Disposal and Recycling



This symbol is known as the 'Crossed-out Wheelie Bin Symbol'. When this symbol is marked on a product or battery, it means that it should not be disposed of with your general household waste. Some chemicals contained within electrical/electronic products or batteries can be harmful to health and the environment. Only dispose of electrical/ electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment.