

Safety Instructions

Before first use of the machine, read the instructions and safety instructions for later use.
 Safety instructions marked with this symbol must be observed to prevent personal injury or serious damage to property.

The instruction consists of 3 parts: Part 1:3 Safety Instructions, Part 2:3 Serial specific User Guide, Part 3:3 Serial specific Technical Data and Declaration.

Warnings: This machine has been designed for use with cleaning agents supplied or recommended by Nilfisk. The use of other cleaning agents or chemicals may adversely affect the safety of the machine. All high pressure jets can be dangerous if subject to misuse. The jet must not be directed at persons, live electrical equipment or the machine itself. Do not use the machine without wearing protective clothes. Do not direct the jet against yourself or others in order to clean footwear.
 Risk of explosion – Do not spray flammable liquids. All high pressure washers shall not be used by children or untrained personnel. All high pressure hoses, fittings and couplings are important for the safety of the machine. Use only those hoses, fittings and couplings recommended by Nilfisk. All to ensure machine safety, use only original spare parts recommended by Nilfisk. All water that flows through back-flow preventers is considered to be non-potable. Do not use the machine if a supply cord or important parts of the machine are damaged, e.g. a safety device, high pressure hoses, trigger gun, gun. Inadequate extensions can be dangerous. If an extension cord is used, it shall be suitable for outdoor use, and the connection has to be kept dry and off the ground. It is recommended that this is accomplished by a cord reel which keeps the socket at least 60 mm above the ground. Switch off and unplug the machine when leaving it unattended, when finished using it when converting to a different function, when doing repair and maintenance. All during use of machine, high pressure hoses, aerosols may be formed. Inhalation of aerosols can be hazardous to health, for the protection against aerosols a respiratory mask of class FFP 2 or equivalent may be needed, depending on the cleaning environment.

Intended Use and Terms of Liability C, D, E, P and Core-H series have been developed for domestic cleaning purposes only and for use in an upright position. Any other use is considered as improper use. A high pressure washer operates with different levels of pressure and cleaning detergents for various cleaning tasks and results. Always follow instructions on detergents for use, emergency and disposal. Do not operate the machine at temperatures above 50°C. Never use a frozen machine or use it indoors and never over 10 min. This is considered improper and wrongful use. Use of wrongful pressure, material and/or applications may cause damage to machine, surfaces, materials and devices. All of the above is considered improper and wrongful use. Nilfisk accepts no liability for any damage resulting from any improper or wrongful use. Please refer to our website at www.get-started.nilfisk.com for further instructions and information on use, emergency and disposal.

Safety devices and their functioning The machine automatically stops when releasing the trigger. The machine will start again when reactivating the trigger. The spray handle features a locking device. When activated, the spray handle cannot be operated. The machine has an automatic self-resetting thermal protector. If the machine is overheated, the thermal protector will shut down the power supply. In this case, wait for the machine to cool down. An integrated hydraulic safety valve protects the system from excessive pressure.

Precautions: The electric supply connection shall be made by a qualified electrician and comply with IEC 60364-1. It is recommended that the electric supply to this machine include either a residual current device that will interrupt the supply if the leakage current to earth exceeds 30 mA for 30 ms or a device that will prove earth circuit. Use motor started versions with characteristic C or D according to IEC 60898-1 / IEC 947-2 or corresponding standards outside IEC. If the supply cord is damaged, it must be replaced by an authorized Nilfisk distributor or similar qualified person in order to avoid a hazard. No actions needed for adjusting machines marked with dual voltage and frequency. Supervise children not to play with the machine. The operator and any one in the immediate vicinity of the site for cleaning should take action to protect oneself from being struck by debris dislodged during operation. Always wear safety boots, respiratory mask, ear protection, goggles and protective clothing during operation. The high pressure generated by the machine is a particular source of danger. Hold the spray lance firmly with both hands. The spray lance is affected by a kickback force and a sudden torque during operation. See PART 3:3 for the actual size of the kickback force. During transportation: Position the machine horizontally on the backside and secure with straps.

Within EU: High pressure washers shall not be used nor maintained by children or untrained people or people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if given supervision or instructions concerning use of the machine in a safe way and understands the hazards involved.

Outside EU: High pressure washers shall not be used nor maintained by children or untrained people or people with reduced physical, sensory or mental capabilities or lack of experience and knowledge.

Part 2: provides a general overview of the machine and operation elements along with illustrated sections on preparation, operation, water connection, storage, and user maintenance.

Unpacking and preparing for use. Follow illustrations in A.

Connection to potable water mains: All high pressure washers are not suitable for connection to the potable water mains. Always check national regulations before connecting the machine to potable water mains and use a back-flow preventer if required. Use ½" garden hose, 10-25 m • Follow illustrations in B.

Connection to other water sources: You can connect the machine to e.g. rain water vessels, rivers, lakes and streams etc. and connect it in such a manner. Follow illustrations in C.

Pairing of spray handle and machine: C-PG, D-PG and Core-H series. After battery insert, you have 2 min. to pair spray handle and machine. The light will flash orange when searching for the machine. When paired, the light will turn off. Power regulation is indicated by green light.

Leaving the machine unattended > 5 min.: See listed warnings. Follow the illustrations in D.

After use and storage: After use always: Turn off the machine. Empty machine and accessories of water to avoid frost damage. Remove the plug from socket. Disconnect water inlet hose. Wind up electrical cable and high pressure hose to avoid damage of cable, high pressure hose and fittings. Storage of machine shall be frost free. See • Follow illustrations in F.

Maintenance, inspection and repair: Maintenance of the machine should always be done when starting up after long time of storage. Before use, always inspect the machine and equipment for damages. In case of damages, act according to listed warnings. Do not attempt any maintenance not described in the instructions. If the machine refuses to start, stops, pulsates, pressure fluctuates, motor buzzes, tube flows or no water comes out, check the trouble shooting diagram at our website www.get-started.nilfisk.com. Any repair should always be made by Nilfisk authorized workshop with original Nilfisk spare parts. Use maintenance according to illustrations in G.

Correct disposal of this product: This marking indicates that this product should not be disposed with other household waste throughout the EU. To prevent possible harm to the environment or human health from unreasonable waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used product, please use the product and/or packaging return label or contact the retailer where the product was purchased. They can take this product for environmental waste recycling.

Sikkerhedsinstruktioner

Les disse instruktioner omhyggeligt, for maskinen langes brug første gang. Gem instruktionerne til senere brug. Sikkerhedsinstruktioner markeret med dette symbol skal overholdes for at forhindre personskader og alvorlige skader.

Leaving the machine unattended > 5 min.: See listed warnings. Follow the illustrations in D.

After use and storage: After use always: Turn off the machine. Empty machine and accessories of water to avoid frost damage. Remove the plug from socket. Disconnect water inlet hose. Wind up electrical cable and high pressure hose to avoid damage of cable, high pressure hose and fittings. Storage of machine shall be frost free. See • Follow illustrations in F.

Maintenance, inspection and repair: Maintenance of the machine should always be done when starting up after long time of storage. Before use, always inspect the machine and equipment for damages. In case of damages, act according to listed warnings. Do not attempt any maintenance not described in the instructions. If the machine refuses to start, stops, pulsates, pressure fluctuates, motor buzzes, tube flows or no water comes out, check the trouble shooting diagram at our website www.get-started.nilfisk.com. Any repair should always be made by Nilfisk authorized workshop with original Nilfisk spare parts. Use maintenance according to illustrations in G.

Correct disposal of this product: This marking indicates that this product should not be disposed with other household waste throughout the EU. To prevent possible harm to the environment or human health from unreasonable waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used product, please use the product and/or packaging return label or contact the retailer where the product was purchased. They can take this product for environmental waste recycling.

Sikkerhedsinstruktioner

Les disse instruktioner omhyggeligt, for maskinen langes brug første gang. Gem instruktionerne til senere brug. Sikkerhedsinstruktioner markeret med dette symbol skal overholdes for at forhindre personskader og alvorlige skader.

Leaving the machine unattended > 5 min.: See listed warnings. Follow the illustrations in D.

After use and storage: After use always: Turn off the machine. Empty machine and accessories of water to avoid frost damage. Remove the plug from socket. Disconnect water inlet hose. Wind up electrical cable and high pressure hose to avoid damage of cable, high pressure hose and fittings. Storage of machine shall be frost free. See • Follow illustrations in F.

Maintenance, inspection and repair: Maintenance of the machine should always be done when starting up after long time of storage. Before use, always inspect the machine and equipment for damages. In case of damages, act according to listed warnings. Do not attempt any maintenance not described in the instructions. If the machine refuses to start, stops, pulsates, pressure fluctuates, motor buzzes, tube flows or no water comes out, check the trouble shooting diagram at our website www.get-started.nilfisk.com. Any repair should always be made by Nilfisk authorized workshop with original Nilfisk spare parts. Use maintenance according to illustrations in G.

Correct disposal of this product: This marking indicates that this product should not be disposed with other household waste throughout the EU. To prevent possible harm to the environment or human health from unreasonable waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used product, please use the product and/or packaging return label or contact the retailer where the product was purchased. They can take this product for environmental waste recycling.

maskinen producerer, er en særlig farekilde. Hold lansen godt fast med begge hænder. Lansen bør altid være retturkørt og afslå kraftigt under brug. • Se DEL 3:3 med hensyn til faktisk retturkørt. • Under transport: Plaster maskinen horisontalt på enden og fest den med stropper.

Imen EU: Høghytryksskiver skal ikke bruges eller vedholdes af barn. Maskinen kan bruges af personer med reducerede fysiske, sensoriske eller mentale evner eller manglende erfaring og kunskaip, hvis de er under opsyn eller har fået vejledning i hvordan maskinen skal bruges på en forsvarlig måde og forstår hvilke farer det indebærer.

Part 2: indeholder en generel oversigt over maskinen og betjeningsprocedurerne sammen med en illustreret del om omhandler klargøring, brug, tilkobling af vann, opbevaring og vedholdelse som brugen selv kan udføre.

Unpacking and klargøring for brug: Følg illustrationerne i A.

Tilkobling til drøksvandsforsyning: Høghytryksskiverne er ikke beregnet for tilkobling til drøksvandsforsyning. Skift altid nasjonale bestemmelser for maskinen kobles til drøksvandsforsyning, 10-25 m • Følg illustrationerne i B.

Tilkobling til andre værnemidler: Maskinen kan kobles til trykbeholdere, elver, insjører og systerer m.m. og bruges i sagnområde. Følg illustrationerne i C.

Pairing af sprøjtehåndtag og maskine: Serien C-PG, D-PG og Core-H-serien. Efter at batteriet er sat, har du to minutter på dig til at pare sprøjtehåndtag og maskine. Lyset blinker orange når du starter maskinen. Efter paringslinsen slukkes. Hvis paringen afbrydes, skal der foretages paring. Strykeregulering angives med grønt lys.

Ca. fire minutter inden tilm > 5 min.: Se advarsler. Følg illustrationerne i E.

Efter brug og opbevaring: Hus altid efter brug: Slå maskinen. Tøm maskinen og tilbehøret for vann for en ung frost skade. Træk stoppestil ud af stikkontakten. Koble fra vassnetilslutningen. Rull op ledningen og høghytryksslanger for en ung frost skade på ledningen, høghytryksslanger og tilbehør. Maskinen skal opbevares frostfrit. • Følg illustrationerne i F.

Vedholdelse, kontrol og reparasjon: Maskinen skal altid vedholdes for den tas i bruk igjen etter lengre tids opbevaring. • Førb bruk skal maskinen og tilbehør alltid kontrolleres med hensyn til skader. Oppfør i henhold til angitte advarsler i litlete skader. • Ikke forsøk å utføre vedholdelse som ikke er beskrevet i anvisningene. Hvis maskinen ikke vil starte, stopper, pulserer, trykkes svinger, motoren summer, skingeren går eller det ikke kommer vann, kontakt fagselskapsbetjener på vårt nettsted www.get-started.nilfisk.com. • Alle reparasjonar skal utføres ved et autorisert Nilfisk-senter eller et autorisert reparasjonssenter for Nilfisk. • Under transport: Anbring maskinen vandret på bagisiden og fastgjør med stropper.

Inden for EU: Høghytryksskiver må ikke benyttes eller vedholdes af barn. Maskinen kan benyttes af personer med fysisk eller psykisk handicap, hvis der foretages overvågning og vejledning i sikker brug af maskinen, og der forstår de farer, der er forbundet med maskinen.

Part 2: indeholder en generel oversigt over maskinen og dens betjeningsselementer sammen med illustrerede afsnit om klargøring, betjening, vandtilslutning, opbevaring og vedholdelse.

Unpacking and klargøring til brug: Følg illustrationerne i A.

Tilslutning til drøksvandsforsyning: Høghytryksskiverne er ikke egnet til tilslutning til drøksvandsforsyning. Kontroler altid pågældende regler og bestemmelser for tilslutning af maskinen til drøksvandsforsyning, 10-25 m • Følg illustrationerne i B.

Pairing af sprøjtehåndtag og maskine: Serien C-PG, D-PG og Core-H. Når batteriet er sat, har du 2 minutter til at parre sprøjtehåndtag og maskine. Lyset blinker orange under sugning efter maskinen. Efter paringslinsen slukkes. Hvis paringen afbrydes, skal der foretages paring. Strykeregulering angives med grønt lys.

Når maskinen forlader uden opsyn i mere end 5 min.: Se de advarte advarsler. Følg illustrationerne i E.

Efter brug og opbevaring: Efter brug skal følgende altid gøres: Sluk maskinen. Tøm maskinen og tilbehøret for vand for at undgå frostskader. Tag stikket ud af fjerningen. Frakobl vandledningslanger. Rul strømkablet og høghytryksslanger sammen for at undgå beskadigelse af kablet, høghytryksslange og koblinger. Maskinen skal opbevares frostfrit. • Følg illustrationerne i F.

Vedholdelse, inspektion og reparasjon: Der skal altid udføres vedholdelse ved start efter længere tids opbevaring. • Før brug skal maskinen og udstyret altid undersøges for skader. Følg de advarte advarsler i tilfælde af skader. • Forsøg ikke at udføre vedholdelse som ikke er beskrevet i instruktionerne. Hvis maskinen ikke starter, stopper, pulserer, trykkes svinger, motoren stopper, skingeren springer eller der ikke kommer vand ud, skal du kontrollere fejlfindingsdiagrammet på vores hjemmeside på www.get-started.nilfisk.com. Reparatører skal altid foretages på et Nilfisk-vekselsenter. • Brug vedholdelsesdiagnose fløje illustrationerne i G.

Korrekt bortskaffelse af dette produkt: Denne mærkning indikerer, at dette produkt ikke må bortskaffes med andet husholdningsaffald i hele EU. For at forhindre miljøskade på miljøet eller menneskers sundhed mod ukontrolleret bortskaffelse af affald, genbruges det ansvarlig for at fremme bæredygtig udvikling af materiale ressourcer. For at returnere brugt produkt skal du bruge retur- og indsamlingssystemerne eller kontakte forhandleren, hvor produktet blev købt, for at kan tage dette produkt til miljømæssig sikker genanvendelse.

Connection to potable water mains: All high pressure washers are not suitable for connection to the potable water mains. Always check national regulations before connecting the machine to potable water mains and use a back-flow preventer if required. Use ½" garden hose, 10-25 m • Follow illustrations in B.

Connection to other water sources: You can connect the machine to e.g. rain water vessels, rivers, lakes and streams etc. and connect it in such a manner. Follow illustrations in C.

Pairing of spray handle and machine: C-PG, D-PG and Core-H series. After battery insert, you have 2 min. to pair spray handle and machine. The light will flash orange when searching for the machine. When paired, the light will turn off. Power regulation is indicated by green light.

Leaving the machine unattended > 5 min.: See listed warnings. Follow the illustrations in D.

After use and storage: After use always: Turn off the machine. Empty machine and accessories of water to avoid frost damage. Remove the plug from socket. Disconnect water inlet hose. Wind up electrical cable and high pressure hose to avoid damage of cable, high pressure hose and fittings. Storage of machine shall be frost free. See • Follow illustrations in F.

Maintenance, inspection and repair: Maintenance of the machine should always be done when starting up after long time of storage. Before use, always inspect the machine and equipment for damages. In case of damages, act according to listed warnings. Do not attempt any maintenance not described in the instructions. If the machine refuses to start, stops, pulsates, pressure fluctuates, motor buzzes, tube flows or no water comes out, check the trouble shooting diagram at our website www.get-started.nilfisk.com. Any repair should always be made by Nilfisk authorized workshop with original Nilfisk spare parts. Use maintenance according to illustrations in G.

Correct disposal of this product: This marking indicates that this product should not be disposed with other household waste throughout the EU. To prevent possible harm to the environment or human health from unreasonable waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used product, please use the product and/or packaging return label or contact the retailer where the product was purchased. They can take this product for environmental waste recycling.

Leaving the machine unattended > 5 min.: See listed warnings. Follow the illustrations in D.

After use and storage: After use always: Turn off the machine. Empty machine and accessories of water to avoid frost damage. Remove the plug from socket. Disconnect water inlet hose. Wind up electrical cable and high pressure hose to avoid damage of cable, high pressure hose and fittings. Storage of machine shall be frost free. See • Follow illustrations in F.

Maintenance, inspection and repair: Maintenance of the machine should always be done when starting up after long time of storage. Before use, always inspect the machine and equipment for damages. In case of damages, act according to listed warnings. Do not attempt any maintenance not described in the instructions. If the machine refuses to start, stops, pulsates, pressure fluctuates, motor buzzes, tube flows or no water comes out, check the trouble shooting diagram at our website www.get-started.nilfisk.com. Any repair should always be made by Nilfisk authorized workshop with original Nilfisk spare parts. Use maintenance according to illustrations in G.

Correct disposal of this product: This marking indicates that this product should not be disposed with other household waste throughout the EU. To prevent possible harm to the environment or human health from unreasonable waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used product, please use the product and/or packaging return label or contact the retailer where the product was purchased. They can take this product for environmental waste recycling.

Leaving the machine unattended > 5 min.: See listed warnings. Follow the illustrations in D.

After use and storage: After use always: Turn off the machine. Empty machine and accessories of water to avoid frost damage. Remove the plug from socket. Disconnect water inlet hose. Wind up electrical cable and high pressure hose to avoid damage of cable, high pressure hose and fittings. Storage of machine shall be frost free. See • Follow illustrations in F.

Maintenance, inspection and repair: Maintenance of the machine should always be done when starting up after long time of storage. Before use, always inspect the machine and equipment for damages. In case of damages, act according to listed warnings. Do not attempt any maintenance not described in the instructions. If the machine refuses to start, stops, pulsates, pressure fluctuates, motor buzzes, tube flows or no water comes out, check the trouble shooting diagram at our website www.get-started.nilfisk.com. Any repair should always be made by Nilfisk authorized workshop with original Nilfisk spare parts. Use maintenance according to illustrations in G.

Correct disposal of this product: This marking indicates that this product should not be disposed with other household waste throughout the EU. To prevent possible harm to the environment or human health from unreasonable waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used product, please use the product and/or packaging return label or contact the retailer where the product was purchased. They can take this product for environmental waste recycling.

Leaving the machine unattended > 5 min.: See listed warnings. Follow the illustrations in D.

After use and storage: After use always: Turn off the machine. Empty machine and accessories of water to avoid frost damage. Remove the plug from socket. Disconnect water inlet hose. Wind up electrical cable and high pressure hose to avoid damage of cable, high pressure hose and fittings. Storage of machine shall be frost free. See • Follow illustrations in F.

Maintenance, inspection and repair: Maintenance of the machine should always be done when starting up after long time of storage. Before use, always inspect the machine and equipment for damages. In case of damages, act according to listed warnings. Do not attempt any maintenance not described in the instructions. If the machine refuses to start, stops, pulsates, pressure fluctuates, motor buzzes, tube flows or no water comes out, check the trouble shooting diagram at our website www.get-started.nilfisk.com. Any repair should always be made by Nilfisk authorized workshop with original Nilfisk spare parts. Use maintenance according to illustrations in G.

Correct disposal of this product: This marking indicates that this product should not be disposed with other household waste throughout the EU. To prevent possible harm to the environment or human health from unreasonable waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used product, please use the product and/or packaging return label or contact the retailer where the product was purchased. They can take this product for environmental waste recycling.

maskinen producerer, er en særlig farekilde. Hold lansen godt fast med begge hænder. Lansen bør altid være retturkørt og afslå kraftigt under brug. • Se DEL 3:3 med hensyn til faktisk retturkørt. • Under transport: Plaster maskinen horisontalt på enden og fest den med stropper.

Imen EU: Høghytryksskiver skal ikke bruges eller vedholdes af barn. Maskinen kan bruges af personer med reducerede fysiske, sensoriske eller mentale evner eller manglende erfaring og kunskaip, hvis de er under opsyn eller har fået vejledning i hvordan maskinen skal bruges på en forsvarlig måde og forstår hvilke farer det indebærer.

Part 2: indeholder en generel oversigt over maskinen og betjeningsprocedurerne sammen med en illustreret del om omhandler klargøring, brug, tilkobling af vann, opbevaring og vedholdelse som brugen selv kan udføre.

Unpacking and klargøring for brug: Følg illustrationerne i A.

Tilkobling til drøksvandsforsyning: Høghytryksskiverne er ikke beregnet for tilkobling til drøksvandsforsyning. Skift altid nasjonale bestemmelser for maskinen kobles til drøksvandsforsyning, 10-25 m • Følg illustrationerne i B.

Tilkobling til andre værnemidler: Maskinen kan kobles til trykbeholdere, elver, insjører og systerer m.m. og bruges i sagnområde. Følg illustrationerne i C.

Pairing af sprøjtehåndtag og maskine: Serien C-PG, D-PG og Core-H-serien. Efter at batteriet er sat, har du to minutter på dig til at pare sprøjtehåndtag og maskine. Lyset blinker orange når du starter maskinen. Efter paringslinsen slukkes. Hvis paringen brydes afbrydes, skal der udføres i henhold til illustrationerne. Hvis paringen brydes afbrydes, skal der udføres i henhold til illustrationerne. Hvis paringen brydes afbrydes, skal der udføres i henhold til illustrationerne.

Ca. fire minutter inden tilm > 5 min.: Se advarsler. Følg illustrationerne i E.

Efter brug og opbevaring: Hus altid efter brug: Slå maskinen. Tøm maskinen og tilbehøret for vann for en ung frost skade. Træk stoppestil ud af stikkontakten. Koble fra vassnetilslutningen. Rull opp ledningen og høghytryksslanger for en ung frost skade på ledningen, høghytryksslanger og tilbehør. Maskinen skal opbevares frostfrit. • Følg illustrationerne i F.

Vedholdelse, kontrol og reparasjon: Maskinen skal alltid vedholdes for den tas i bruk igjen etter lengre tids opbevaring. • Førb bruk skal maskinen og tilbehør alltid kontrolleres med hensyn til skader. Oppfør i henhold til angitte advarsler i litlete skader. • Ikke forsøk å utføre vedholdelse som ikke er beskrevet i anvisningene. Hvis maskinen ikke vil starte, stopper, pulserer, trykkes svinger, motoren summer, skingeren går eller det ikke kommer vann, kontakt fagselskapsbetjener på vårt nettsted www.get-started.nilfisk.com. • Alle reparasjonar skal utføres ved et autorisert Nilfisk-senter eller et autorisert reparasjonssenter for Nilfisk. • Under transport: Anbring maskinen vandret på bagisiden og fastgjør med stropper.

Inden for EU: Høghytryksskiver må ikke benyttes eller vedholdes af barn. Maskinen kan benyttes af personer med fysisk eller psykisk handicap, hvis der foretages overvågning og vejledning i sikker brug af maskinen, og der forstår de farer, der er forbundet med maskinen.

Part 2: indeholder en generel oversigt over maskinen og dens betjeningsselementer sammen med illustrerede afsnit om klargøring, betjening, vandtilslutning, opbevaring og vedholdelse.

Unpacking and klargøring til brug: Følg illustrationerne i A.

Tilslutning til drøksvandsforsyning: Høghytryksskiverne er ikke egnet til tilslutning til drøksvandsforsyning. Kontroler altid pågældende regler og bestemmelser for tilslutning af maskinen til drøksvandsforsyning, 10-25 m • Følg illustrationerne i B.

Pairing af sprøjtehåndtag og maskine: Serien C-PG, D-PG og Core-H. Når batteriet er sat, har du 2 minutter til at parre sprøjtehåndtag og maskine. Lyset blinker orange under sugning efter maskinen. Efter paringslinsen slukkes. Hvis paringen afbrydes, skal der foretages paring. Strykeregulering angives med grønt lys.

Når maskinen forlader uden opsyn i mere end 5 min.: Se de advarte advarsler. Følg illustrationerne i E.

Efter brug og opbevaring: Efter brug skal følgende altid gøres: Sluk maskinen. Tøm maskinen og tilbehøret for vand for at undgå frostskader. Tag stikket ud af fjerningen. Frakobl vandledningslanger. Rul strømkablet og høghytryksslanger sammen for at undgå beskadigelse af kablet, høghytryksslange og koblinger. Maskinen skal opbevares frostfrit. • Følg illustrationerne i F.

Vedholdelse, inspektion og reparasjon: Der skal altid udføres vedholdelse ved start efter længere tids opbevaring. • Før brug skal maskinen og udstyret altid undersøges for skader. Følg de advarte advarsler i tilfælde af skader. • Forsøg ikke at udføre vedholdelse som ikke er beskrevet i instruktionerne. Hvis maskinen ikke starter, stopper, pulserer, trykkes svinger, motoren stopper, skingeren springer eller der ikke kommer vand ud, skal du kontrollere fejlfindingsdiagrammet på vores hjemmeside på www.get-started.nilfisk.com. Reparatører skal altid foretages på et Nilfisk-vekselsenter. • Brug vedholdelsesdiagnose fløje illustrationerne i G.

Korrekt bortskaffelse af dette produkt: Denne mærkning indikerer, at dette produkt ikke må bortskaffes med andet husholdningsaffald i hele EU. For at forhindre miljøskade på miljøet eller menneskers sundhed mod ukontrolleret bortskaffelse af affald, genbruges det ansvarlig for at fremme bæredygtig udvikling af materiale ressourcer. For at returnere brugt produkt skal du bruge retur- og indsamlingssystemerne eller kontakte forhandleren, hvor produktet blev købt, for at kan tage dette produkt til miljømæssig sikker genanvendelse.

Connection to potable water mains: All high pressure washers are not suitable for connection to the potable water mains. Always check national regulations before connecting the machine to potable water mains and use a back-flow preventer if required. Use ½" garden hose, 10-25 m • Follow illustrations in B.

Connection to other water sources: You can connect the machine to e.g. rain water vessels, rivers, lakes and streams etc. and connect it in such a manner. Follow illustrations in C.

Pairing of spray handle and machine: C-PG, D-PG and Core-H series. After battery insert, you have 2 min. to pair spray handle and machine. The light will flash orange when searching for the machine. When paired, the light will turn off. Power regulation is indicated by green light.

Leaving the machine unattended > 5 min.: See listed warnings. Follow the illustrations in D.

After use and storage: After use always: Turn off the machine. Empty machine and accessories of water to avoid frost damage. Remove the plug from socket. Disconnect water inlet hose. Wind up electrical cable and high pressure hose to avoid damage of cable, high pressure hose and fittings. Storage of machine shall be frost free. See • Follow illustrations in F.

Maintenance, inspection and repair: Maintenance of the machine should always be done when starting up after long time of storage. Before use, always inspect the machine and equipment for damages. In case of damages, act according to listed warnings. Do not attempt any maintenance not described in the instructions. If the machine refuses to start, stops, pulsates, pressure fluctuates, motor buzzes, tube flows or no water comes out, check the trouble shooting diagram at our website www.get-started.nilfisk.com. Any repair should always be made by Nilfisk authorized workshop with original Nilfisk spare parts. Use maintenance according to illustrations in G.

Correct disposal of this product: This marking indicates that this product should not be disposed with other household waste throughout the EU. To prevent possible harm to the environment or human health from unreasonable waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used product, please use the product and/or packaging return label or contact the retailer where the product was purchased. They can take this product for environmental waste recycling.

Leaving the machine unattended > 5 min.: See listed warnings. Follow the illustrations in D.

After use and storage: After use always: Turn off the machine. Empty machine and accessories of water to avoid frost damage. Remove the plug from socket. Disconnect water inlet hose. Wind up electrical cable and high pressure hose to avoid damage of cable, high pressure hose and fittings. Storage of machine shall be frost free. See • Follow illustrations in F.

Maintenance, inspection and repair: Maintenance of the machine should always be done when starting up after long time of storage. Before use, always inspect the machine and equipment for damages. In case of damages, act according to listed warnings. Do not attempt any maintenance not described in the instructions. If the machine refuses to start, stops, pulsates, pressure fluctuates, motor buzzes, tube flows or no water comes out, check the trouble shooting diagram at our website www.get-started.nilfisk.com. Any repair should always be made by Nilfisk authorized workshop with original Nilfisk spare parts. Use maintenance according to illustrations in G.

Correct disposal of this product: This marking indicates that this product should not be disposed with other household waste throughout the EU. To prevent possible harm to the environment or human health from unreasonable waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used product, please use the product and/or packaging return label or contact the retailer where the product was purchased. They can take this product for environmental waste recycling.

Leaving the machine unattended > 5 min.: See listed warnings. Follow the illustrations in D.

After use and storage: After use always: Turn off the machine. Empty machine and accessories of water to avoid frost damage. Remove the plug from socket. Disconnect water inlet hose. Wind up electrical cable and high pressure hose to avoid damage of cable, high pressure hose and fittings. Storage of machine shall be frost free. See • Follow illustrations in F.

Maintenance, inspection and repair: Maintenance of the machine should always be done when starting up after long time of storage. Before use, always inspect the machine and equipment for damages. In case of damages, act according to listed warnings. Do not attempt any maintenance not described in the instructions.

