

IMPORTANT SAFETY INSTRUCTIONS

**RETAIN THIS INFORMATION FOR FUTURE REFERENCE:
READ CAREFULLY**

1. Do not use the appliance for other than its intended use. For domestic indoor use only.
2. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
3. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervised or instruction concerning use of the appliance by a responsible person for their safety.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. Ensure that the fan is switched off from the supply mains before removing the guard.
6. About the details regarding filling, cleaning please refer to

below sections.

7. Be aware that high humidity levels may encourage the growth of biological organisms in the environment.
8. Do not permit the area around the humidifier to become damp or wet. If dampness occurs, turn the output of the humidifier down. If the humidifier output volume cannot be turned down, use the humidifier intermittently. Do not allow absorbent materials, such as carpeting, curtains, drapes, or tablecloths, to become damp.
9. Unplug the appliance during filling and cleaning.
10. Never leave water in the reservoir when the appliance is not in use.
11. Empty and clean the humidifier before storage. Clean the humidifier before next use.
12. Warning: Micro-organisms that may be present in the water or in the environment where the appliance is used or stored, can grow in the water reservoir and be blown in the air causing very serious health risks when the water is not renewed and the tank is not cleaned properly every 3 days.
13. Clean the water tank every three days.
14. Place the appliance on a flat, stable, heat-resistant surface. Operating the product in any other position could cause a hazard.
15. Never insert anything into the grille when the appliance is