



KEMPER
G R O U P

1059 / 1059KIT



IT	BRUCIATORE MULTIUSO
FR	BRULEUR MULTI-USAGE
GB	MULTIPURPOSE TORCH
DE	MEHRZWECK-BRENNER
PL	WIELOFUNKCYJNY PALNIK
FI	MONIKÄYTTÖINEN KAASUPOLTIN
ES	QUEIMADOR MULTIUSO
NL	HOBBYBRANDER MET PIEZO
CZ	VÍCEUČELOVÝ HOŘÁK
PT	QUEIMADOR MULTIUSO
RU	МНОГОФУНКЦИОНАЛЬНАЯ ПАЯЛЬНАЯ ЛАМПА
LT	DAUGIAFUNKCIS SUVIRINIMO APARATAS
LV	DAUDZFUNKCIONĀLAIS METINĀŠANAS APARĀTS
GR	ΦΛΟΓΙΣΤΡΟ ΠΟΛΛΑΠΛΩΝ ΧΡΗΣΕΩΝ
BA	BVIŠE – FUNKCIONALNA LET LAMPA
EE	MITMEOTSTARBELINE KEEVITAJA





GB: ATTENTION: READ INSTRUCTION BEFORE USE. USED ONLY IN WELL VENTILATED AREA - CATEGORY: DIRECT PRESSURE BUTANE

Art		Nominale Rate:	Consumption	Category:	Ø injector
1059/1059KIT	Soldering Lamp	1 kW	73 g/h	Direct pressure BUTANE	0,23 mm

GB – ENGLISH

Thank you for purchasing one of our products. We recommend you carefully read this instruction manual: it contains important information regarding safety regulations for use and maintenance of the appliance. It is also recommended to keep this document carefully to consult in case of necessity.

SAFETY WARNINGS

Read carefully these instructions to familiarize yourself with the equipment before you assembling it to his gas recipient. Keep these instructions to read them again later. This device shall only be used with direct pressure butane cartridges Kemper mod. 577. It can be dangerous to try to use other gas cartridges. Use only in well-ventilated areas.

GENERAL INSTRUCTION

Check that seals (between the appliance and the gas container) are in place and in good condition before connecting to the gas container.

Do not use the appliance if it has damaged or worn seals.

Do not use a device that leakage, deteriorated or malfunctioning.

This appliance should be used in sufficiently aerated places in accordance with regulations in force. The volume of air needed for proper combustion and to prevent formation of dangerous unburned gas mixtures is 2 m³ / h per kW.

The appliance can operate in horizontal position or any inclination (360°)

The appliance should be operated away from flammable materials and at a distance of 70 cm from furniture, walls and ceilings.

Gas containers shall be changed in a well ventilated location, preferably outside, away from any sources of ignition, such as naked flames, pilots, electric fires and away from other people.

If there is a leak on your appliance (smell of gas), take it outside immediately into a well ventilated flame free location where the leak may be detected and stopped. If you wish to check for leaks on your appliance, do it outside. Do not try to detect leaks using a flame, use soapy water.

CAUTION: accessible parts may become very hot. Keep young children away from the appliance.

When the equipment is not in use must be stored upright, in suitable places, protecting it from degradation risks, the place must be well ventilated and kept away from children.

Smoking is prohibited during assembling operation and all operations of the unit.

IGNITION

Open the gas regulator a quarter of a turn (in the "ON" direction) and press the ignition button. If you notice anything unusual during operation, turn the device off immediately.

During long periods of operation, it is normal for the lower part of the cartridge to cool down.

Close the gas regulator (in the "OFF" direction) after using the device.

To regulate the rate, turn right (to decrease) or left (to increase) the handwheel of the burner.

Moreover, the rate can be regulated by turning (with only protecting gloves) the ring on the burner.

CARTRIDGE REPLACEMENT

The cartridge must be replaced in a ventilated area, preferably outside, away from open flames, pilot flames, electric and away from other people.

Make sure that the valve is closed and the burner is off and cold before removing the gas cartridge.

Screw on the cartridge and ensure the burner is blocked: a valve inside stops the gas leakages.

Screw the new cartridge only by hand for not damaging the thread.

Briefly open the gas regulator and check whether gas escapes.

Using the new cartridges in a cold device can cause the flame to change. It will soon return to its normal shape.

Check the good condition of the seals before using a new cartridge.

Proceed as described in paragraph "USER INSTRUCTION."

The cartridge must not be abandoned in the environment but in a safe place. Do not pierce the cartridge. Do not throw the empty cartridge into fire.

MAINTENANCE

To clean the body of your appliance, use a cotton wad soaked in warm water and soap. Never use abrasive products. To clean the burner, use a soft brush. Do not modify the appliance. It's dangerous to bring modification on device, remove or disassemble its components or use components which are not approved by the manufacturer, all of this causes the cancellation of warranty and manufacturer's responsibility.

Importato e distribuito da/ Imported and distributed: **Kemper Srl - Via Prampolini 1/Q – Lemignano di Collecchio (PR) Italia - Tel +39 0521 957111**
– Fax: +39 0521 957195 • www.kempergroup.it – info@kempergroup.it