



Instruction Manual

Instructions D'assemblage Abris en Métal


Montageanweisungen Metallgerätehäuser

Opbouwbeschrijving Metalen Bergingen

Istruzioni di montaggio

Instruções de montagem

Instrucciones de montaje

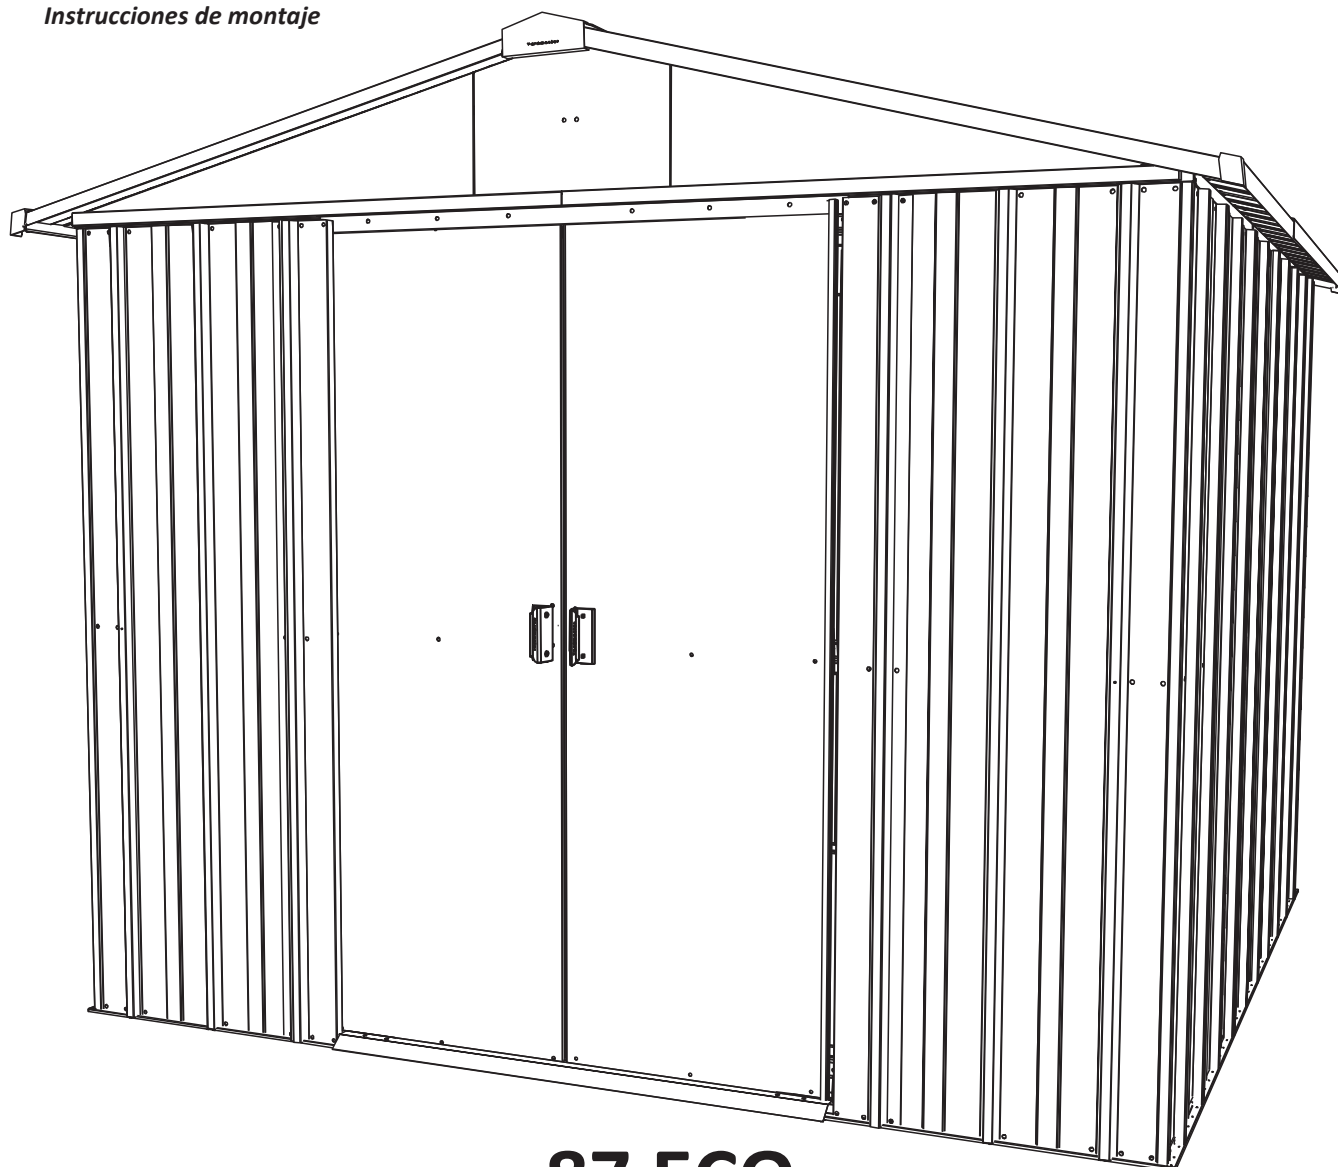

87 ECO

Please Direct Enquires To:


Yardmaster International
Cahore Road
Draperstown
BT45 7AP
Tel: 028 796 28449
Email: info@yardmaster.co.uk


Demandes de Renseignements á:

TRIGANO JARDIN
Service Commercial
Usine du Boulay
41170 Cormenon
Mondoubleau
Tel: (02) 54 73 55 55
Fax: (02) 54 73 55 61
Email: Sav.Amca@Trigano.Fr


Bitte alle Anfragen an:

Kaistraße 7-9
40221 Düsseldorf
Tel: 02505 / 939987
Email: service@yardmaster.co.uk

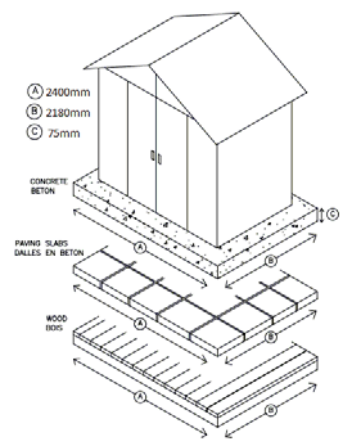


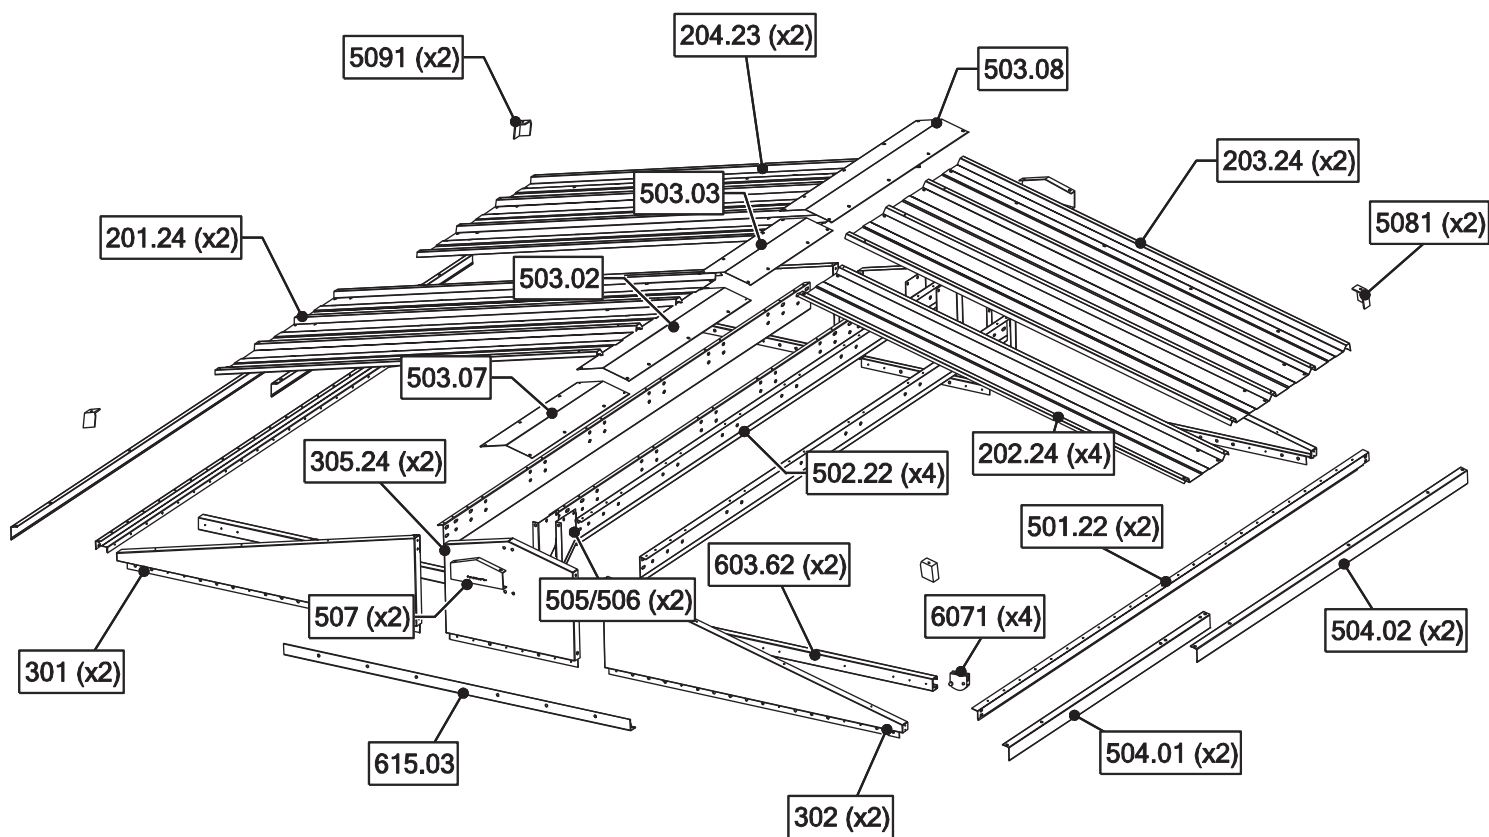


201.24	x2	1215mm		502.22	x4	2034mm		506	x2	145mm	
202.24	x4	1215mm		503.02	x1	615mm		507	x2	160mm	
203.23	x2	1215mm		503.03	x1	415mm		5081	x2	45mm	
204.23	x2	1215mm		503.07	x1	490mm		5091	x2	45mm	
301	x2	920mm		503.08	x1	690mm		603.62	x2	1090mm	
302	x2	920mm		504.01	x2	1015mm		615.03	x1	1064mm	
305.24	x2	395mm		504.02	x2	1365mm		6071	x4	30mm	
501.22	x2	2034mm		505	x2	145mm					

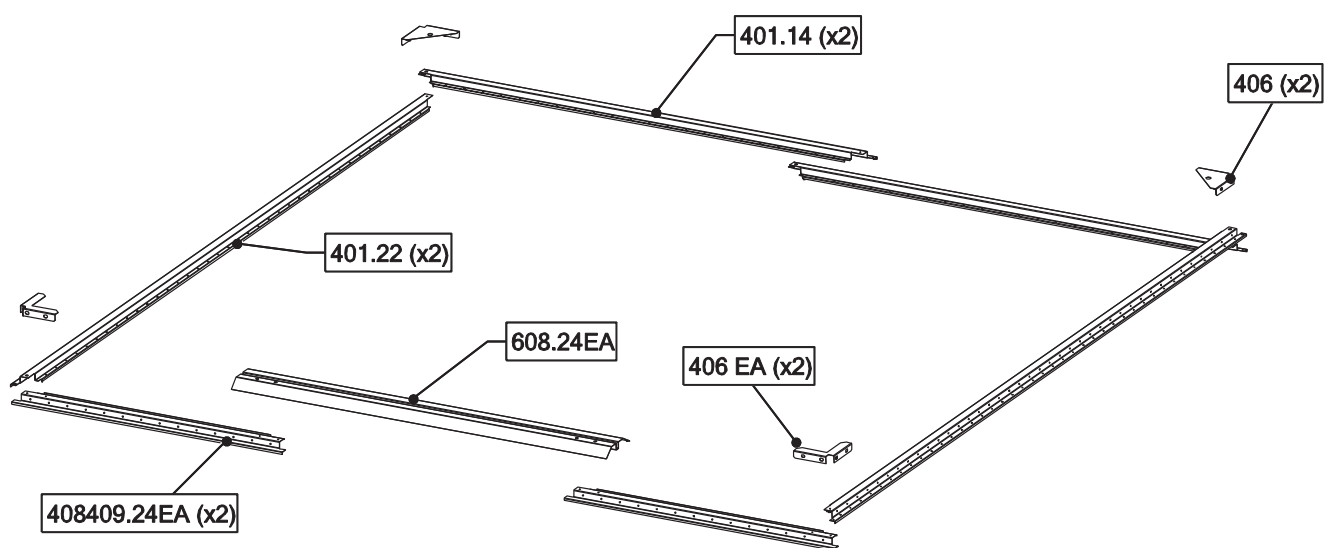


401.14	x2	1233mm		406EA	x2	86mm	
401.22	x1	2033mm		408409.24EA	x2	733mm	
406	x2	86mm		608.24EA	x1	1016mm	

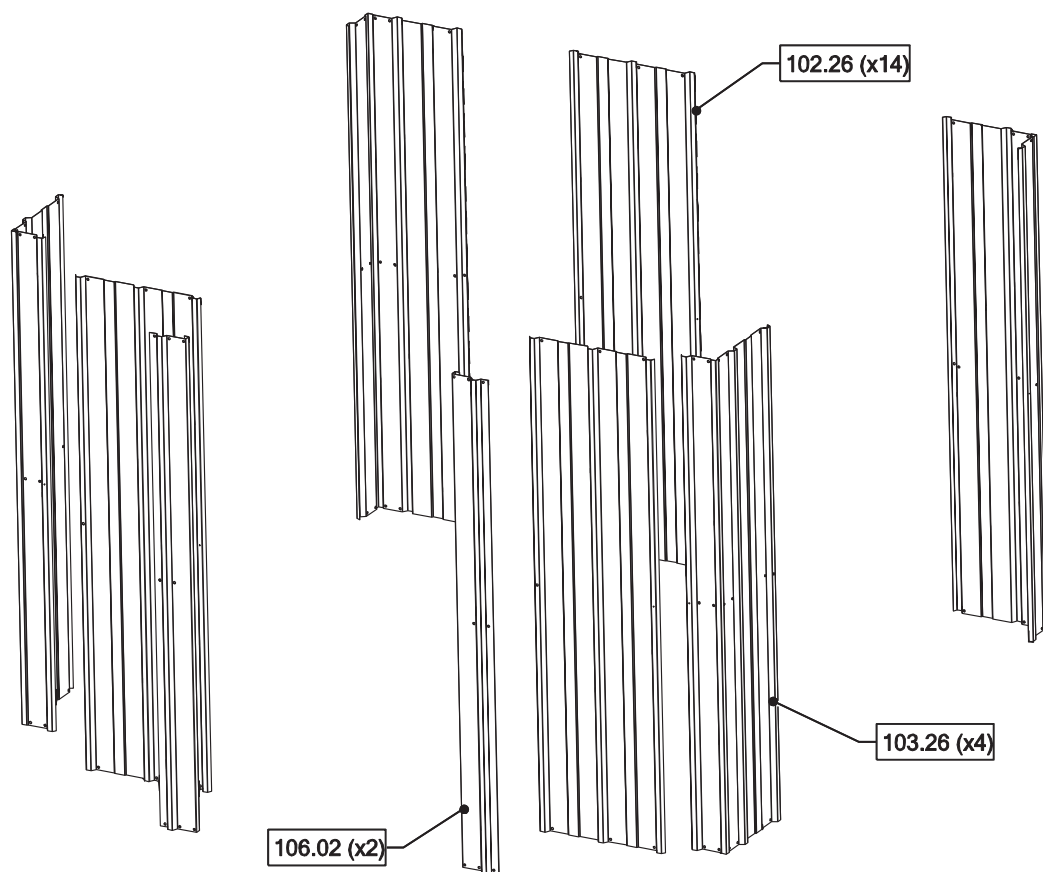


102.26	<i>x14</i>	1600mm		106.02	<i>x2</i>	1600mm	
103.26	<i>x4</i>	1600mm					

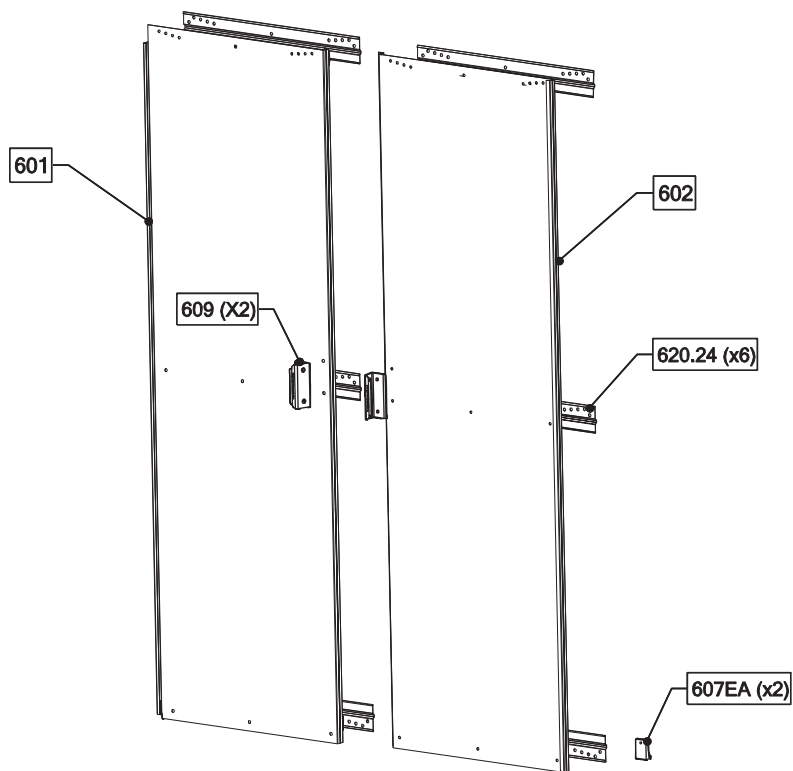


601	<i>x1</i>	1593mm		609	<i>x2</i>	100m	
602	<i>x1</i>	1593mm		620.24	<i>x6</i>	525mm	
607EA	<i>x2</i>	26mm					

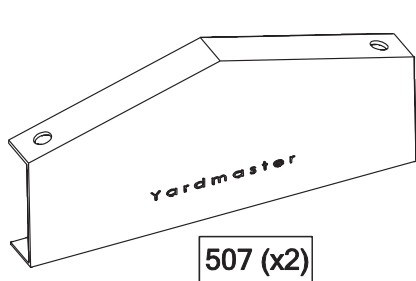


507 (x2)

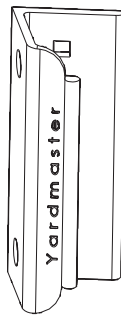


609 (x2)

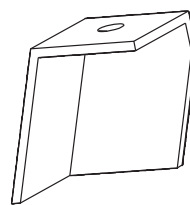


5081 (x2)

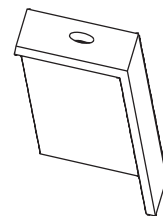


5091 (x2)

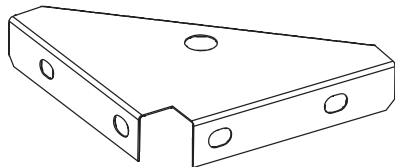


406 (x2)

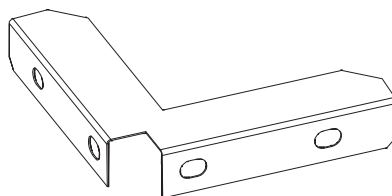


406EA (x2)

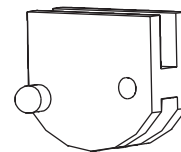


6071 (x4)

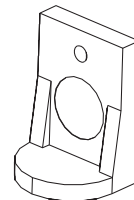

607EA (x2)

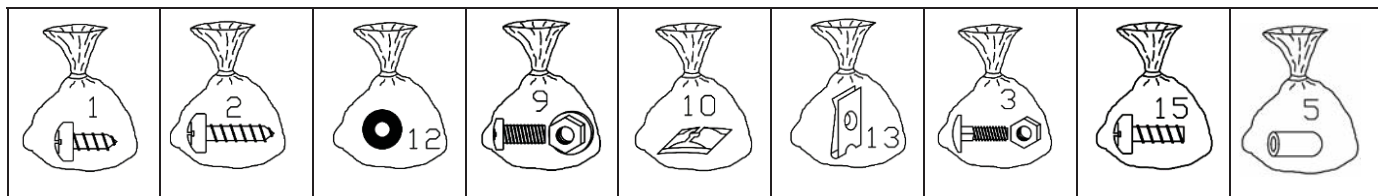


- Step
- Etape
- Schritt
- Stap
- Paso
- Passo

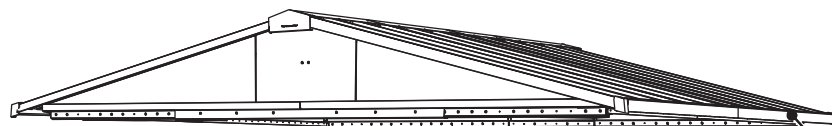





1


4

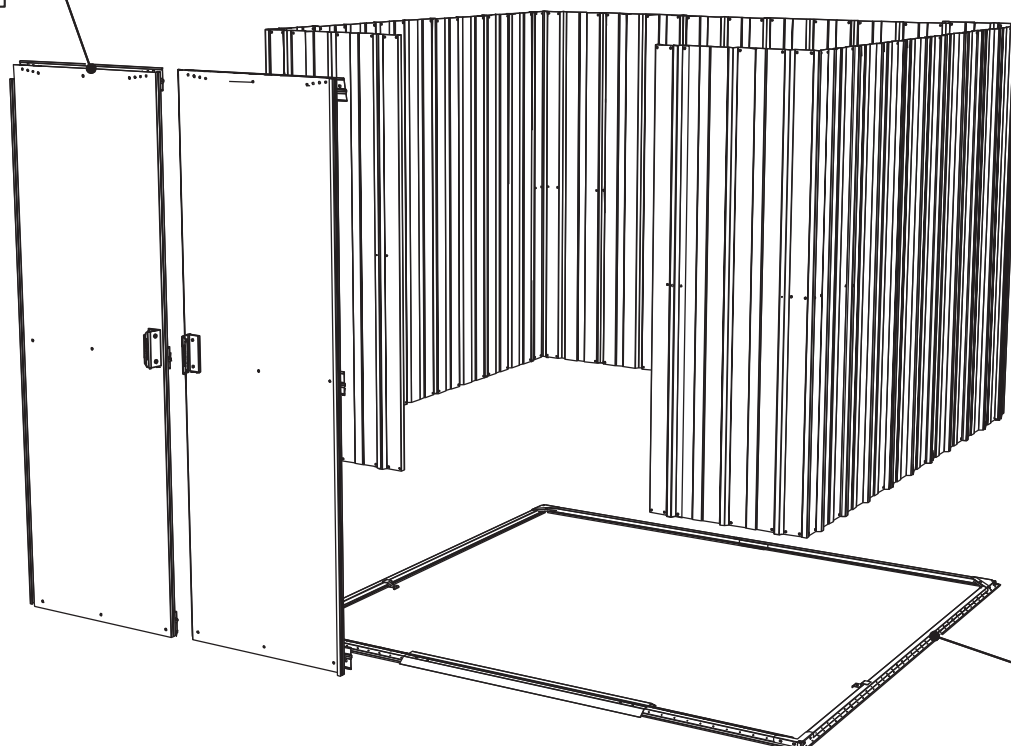





3



2

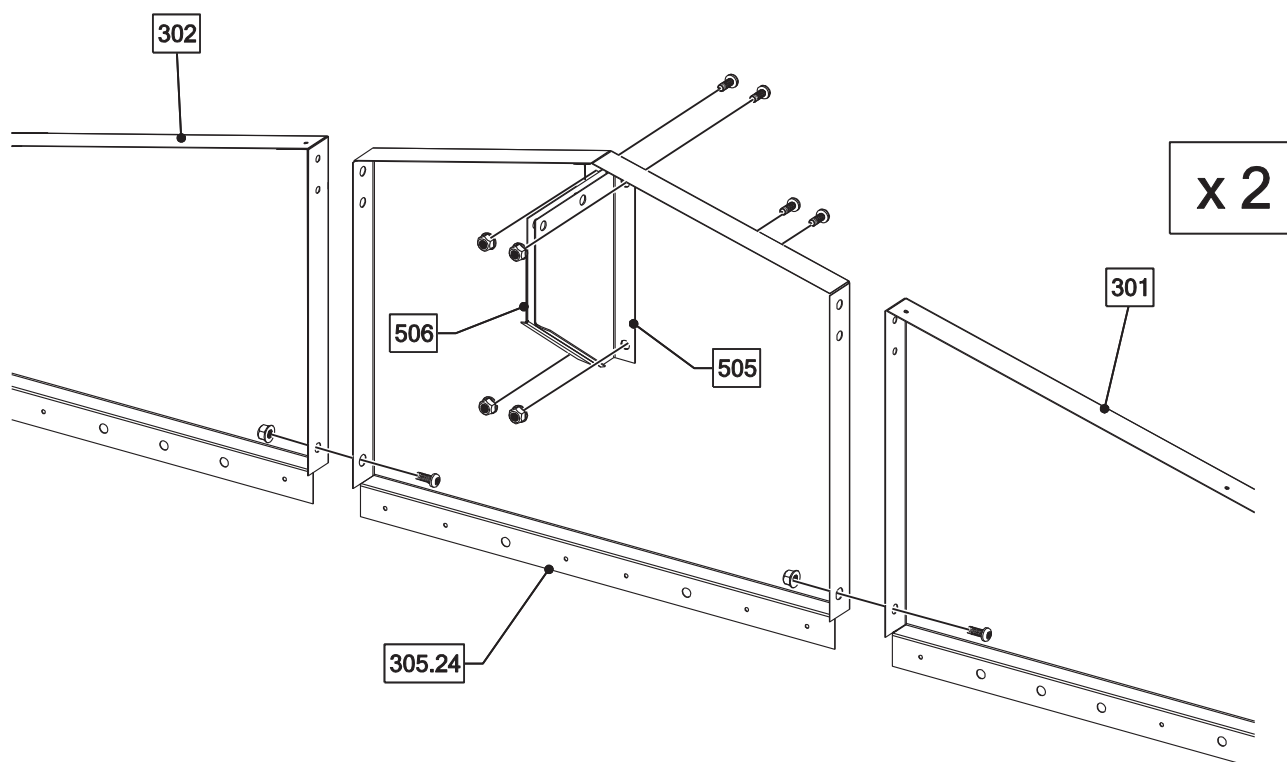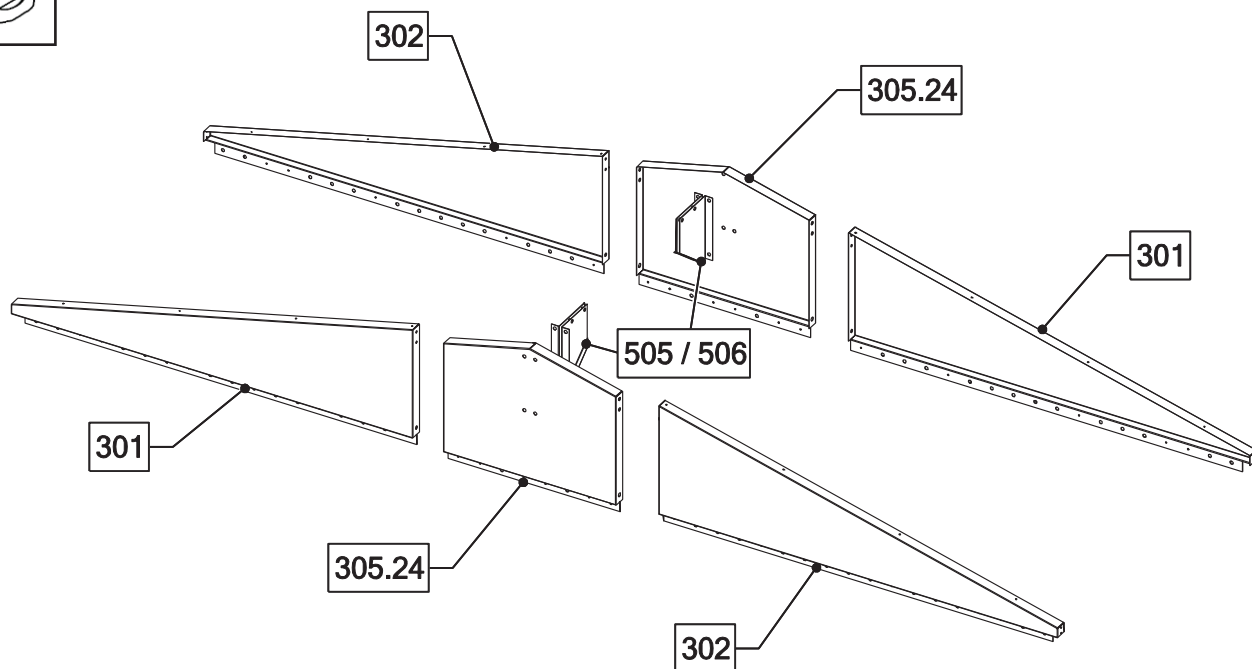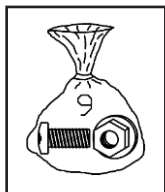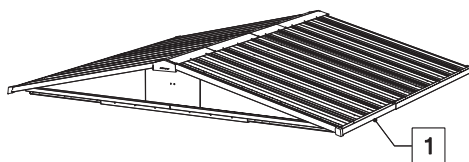

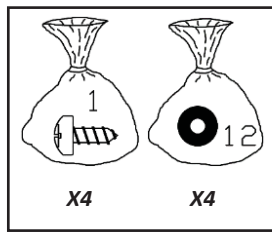


x 1

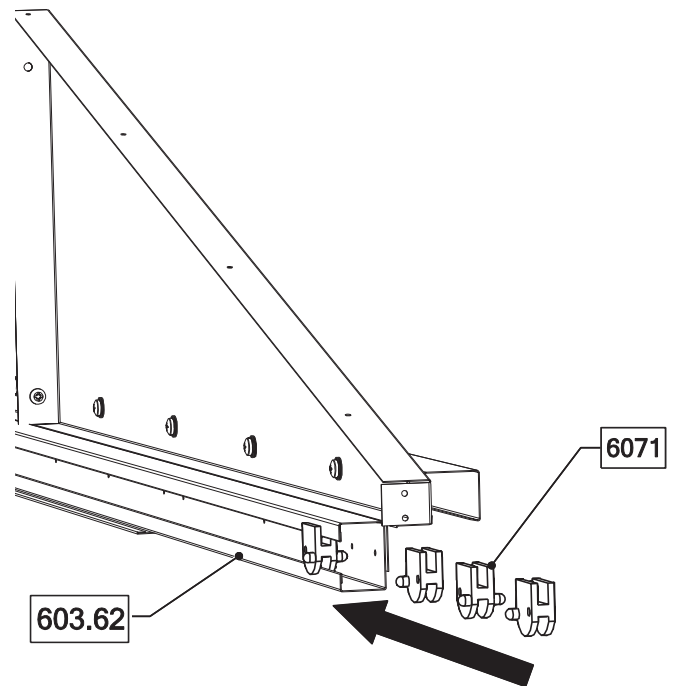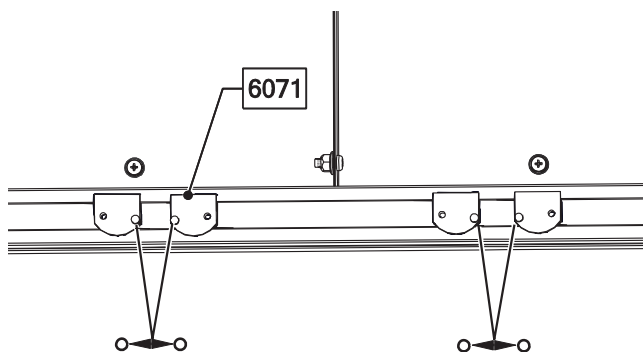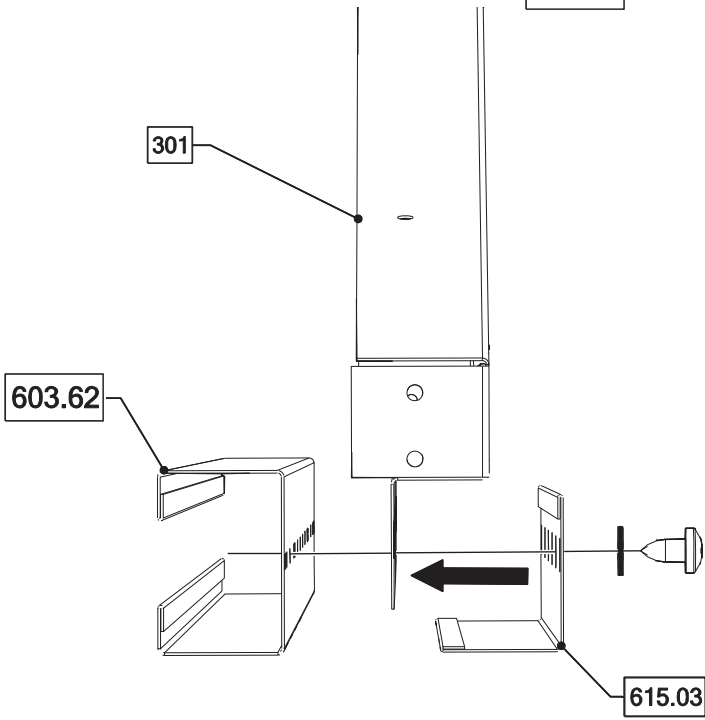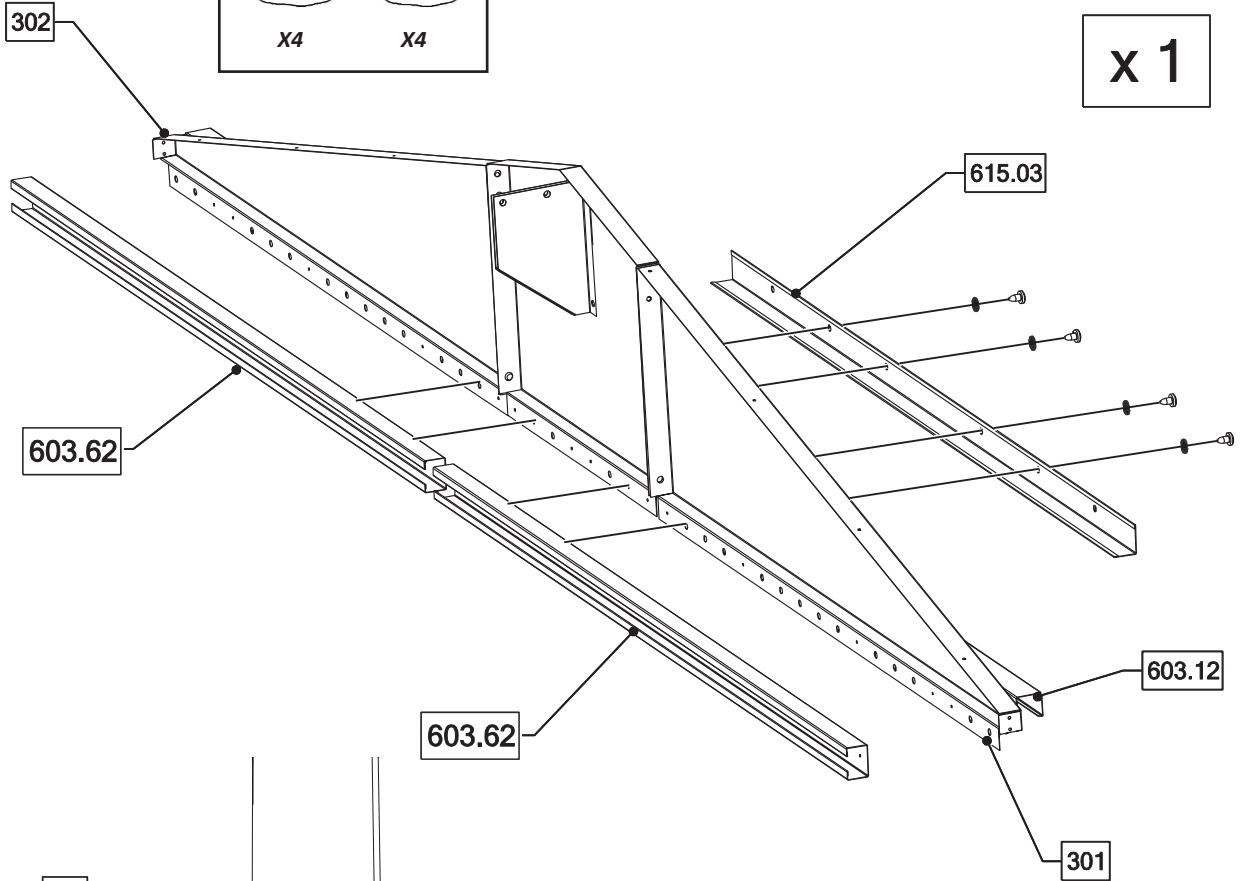


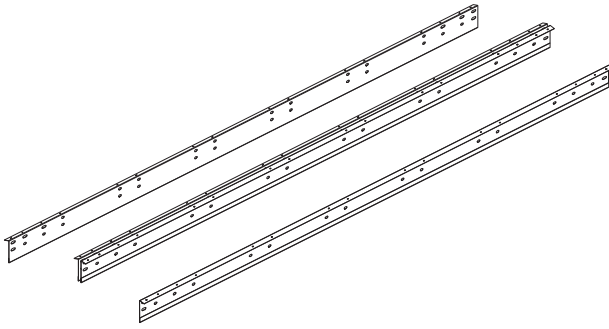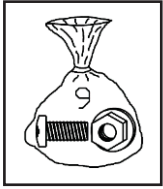

502.22

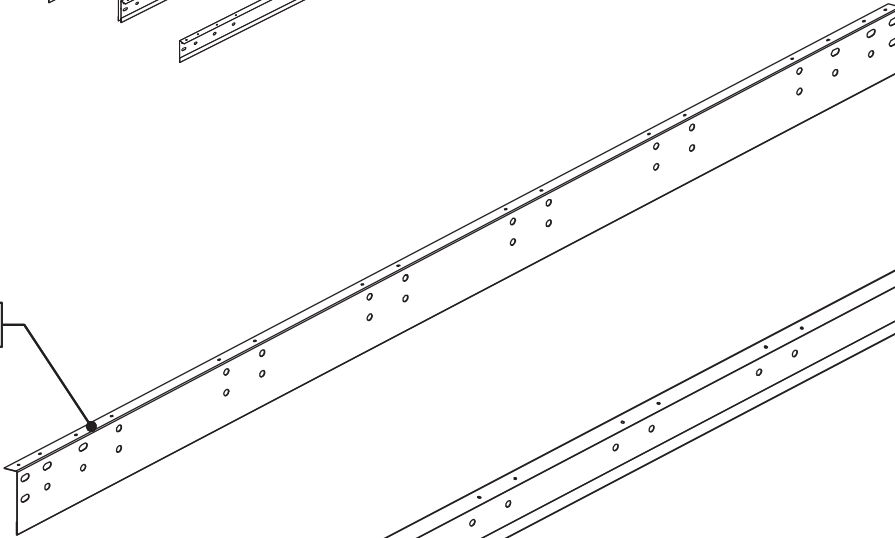


502.22





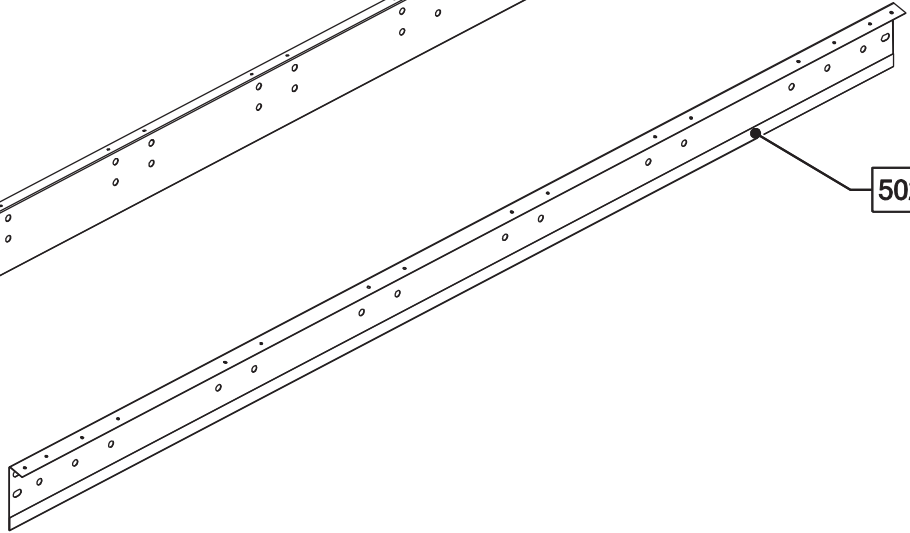






502.22





502.22


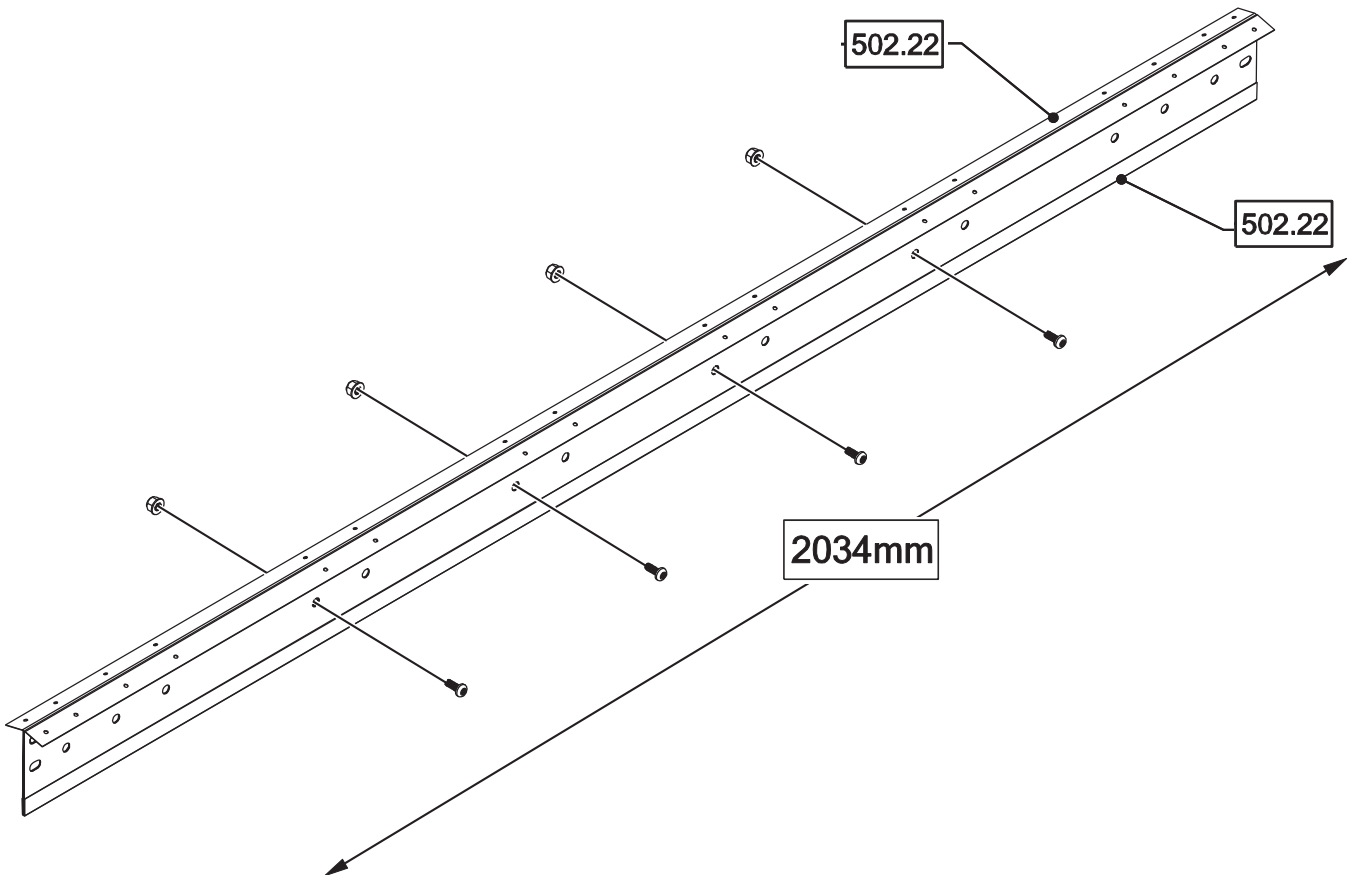








2034mm

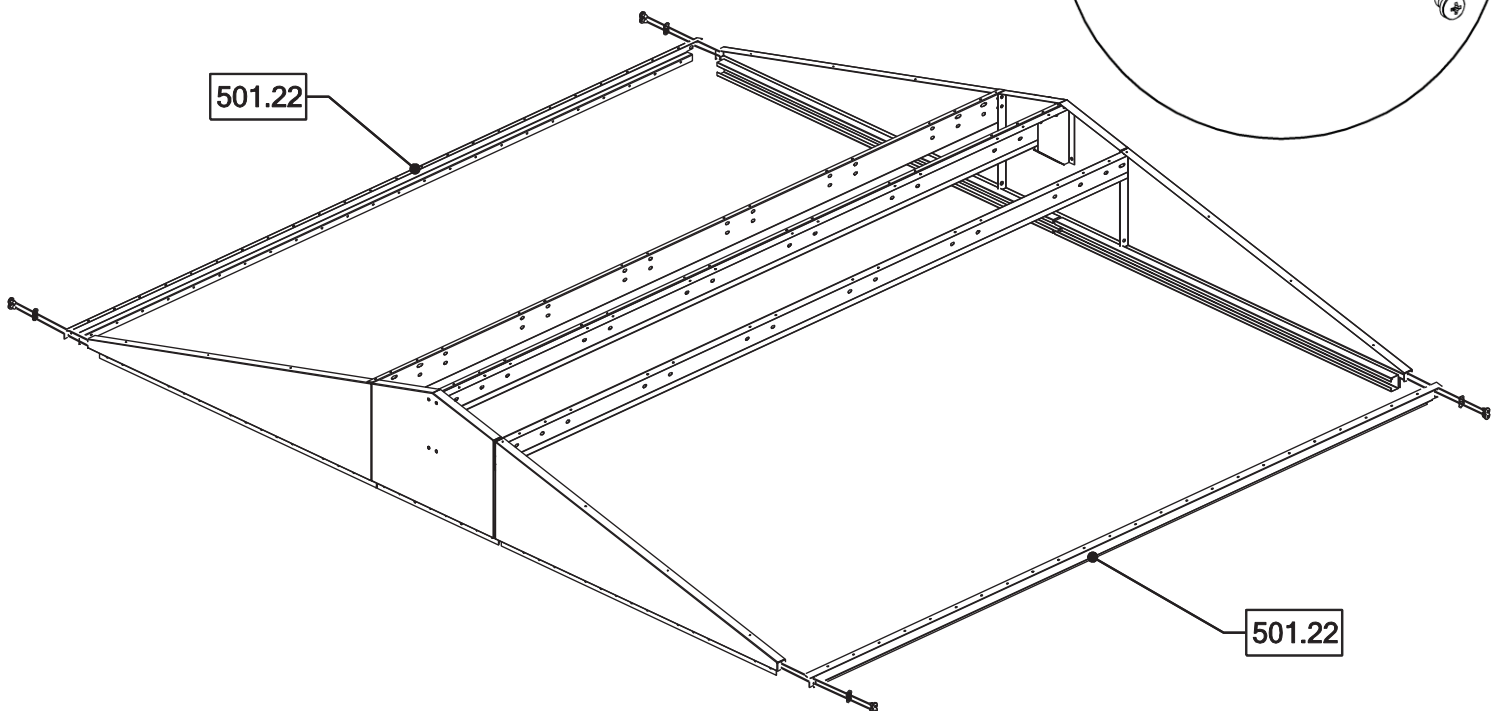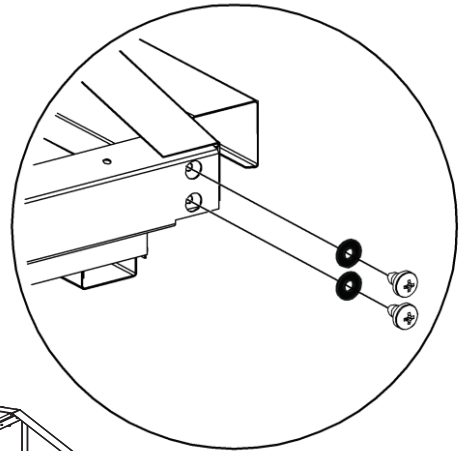
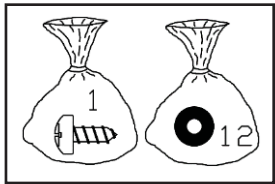
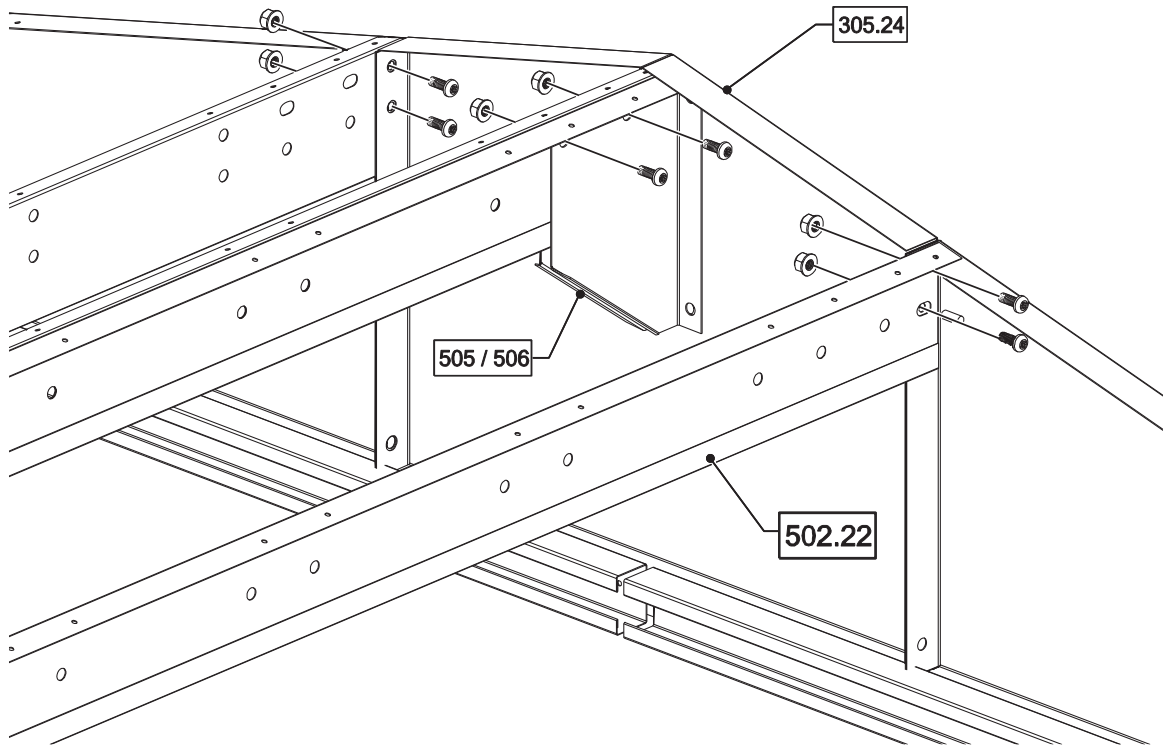
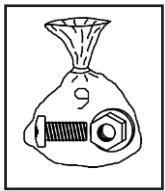


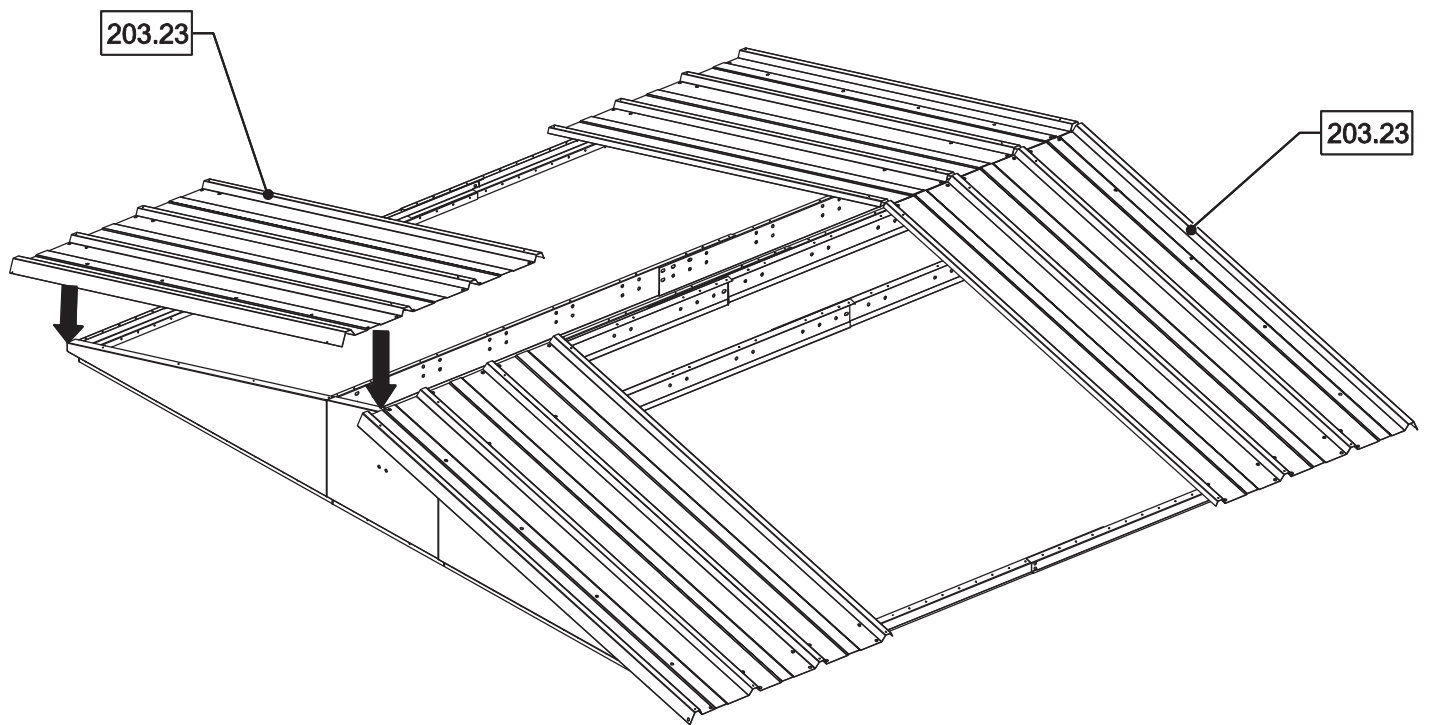
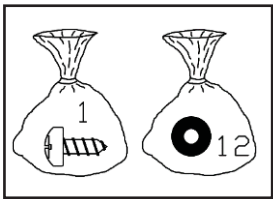
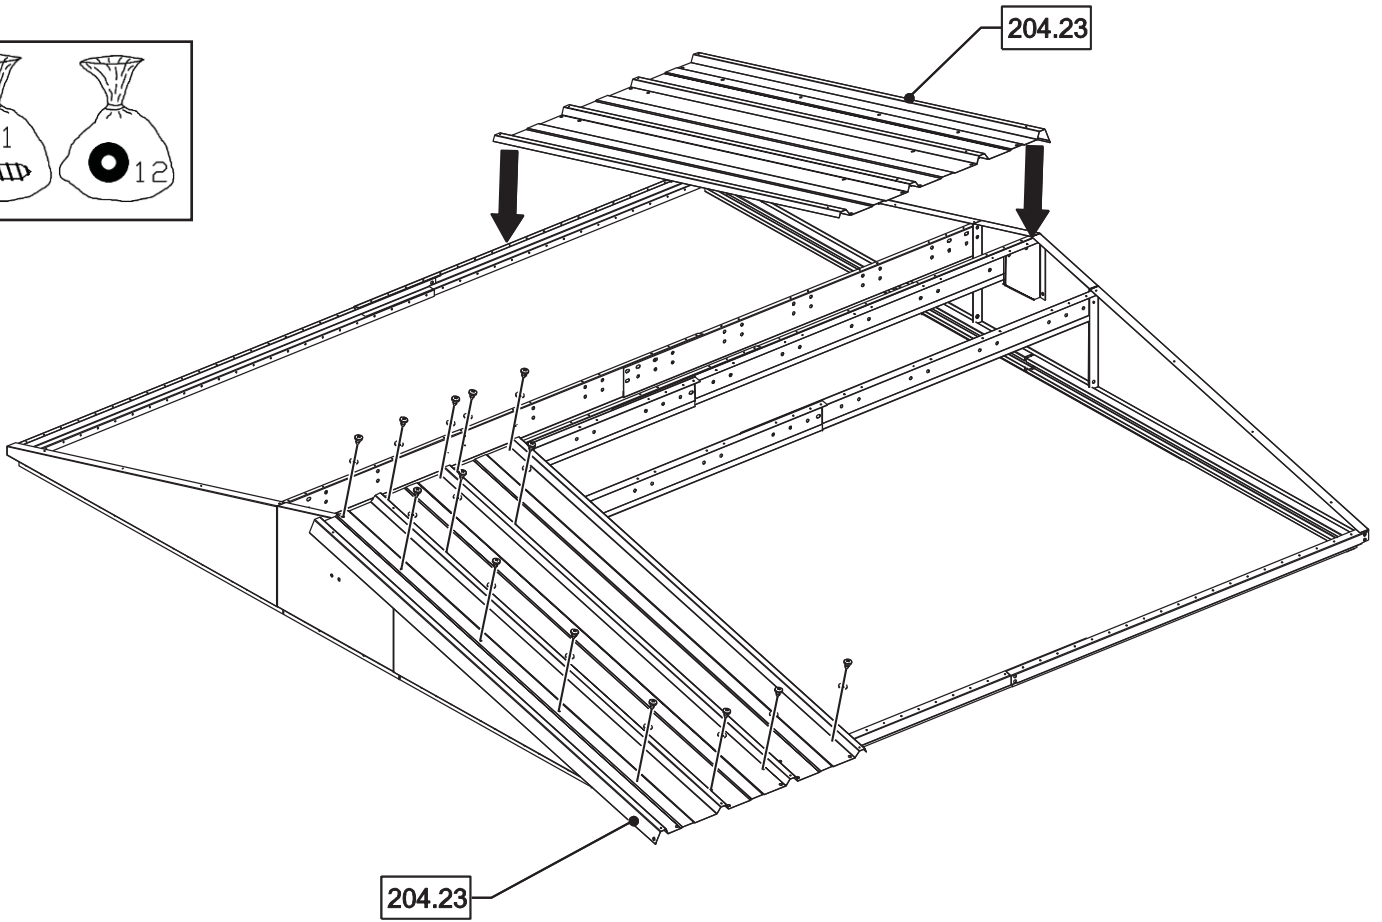
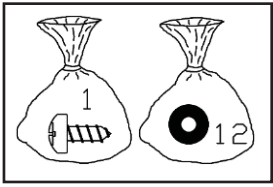


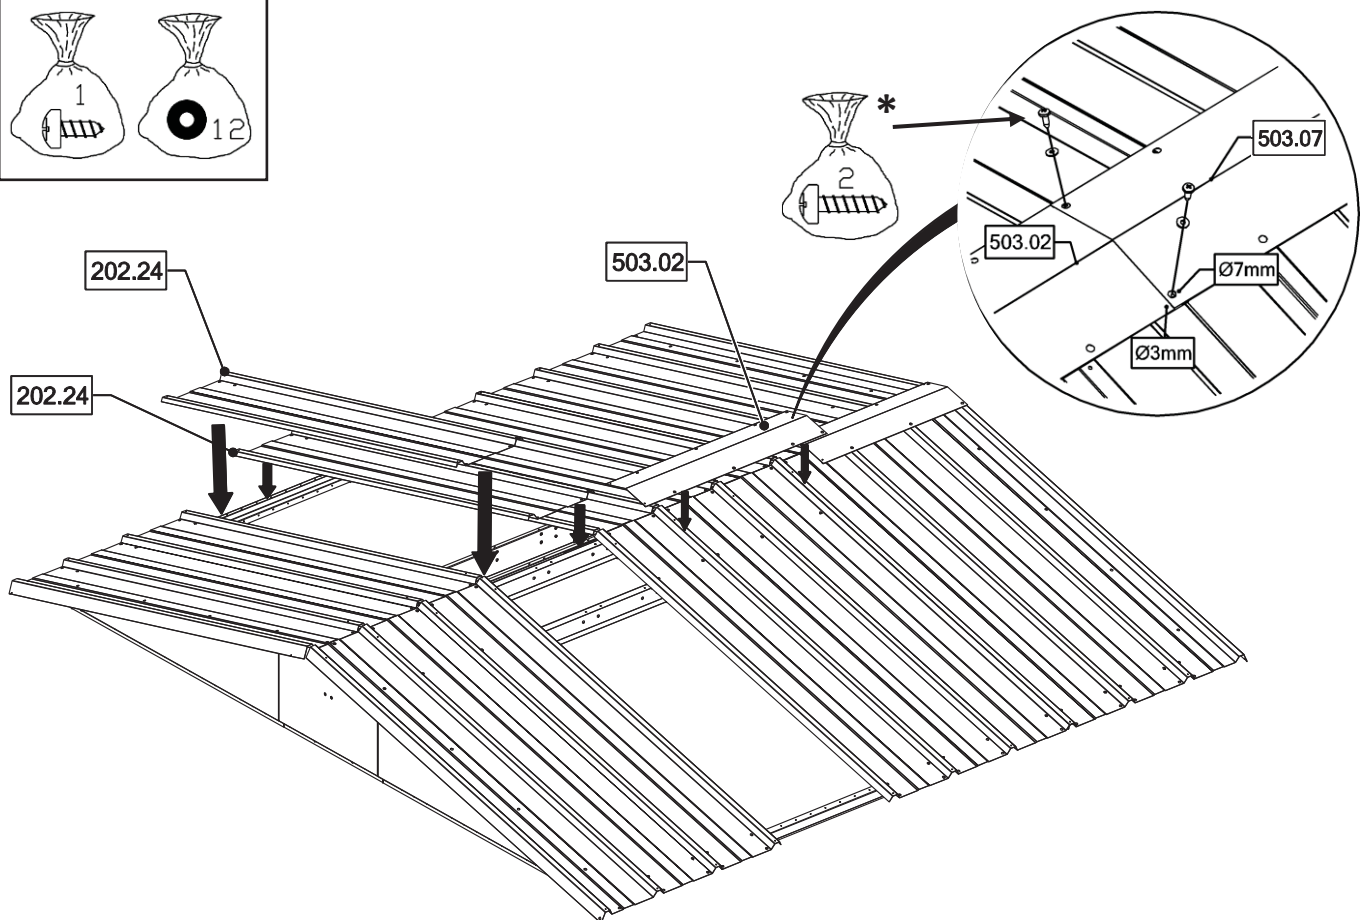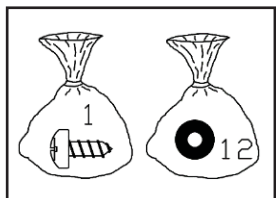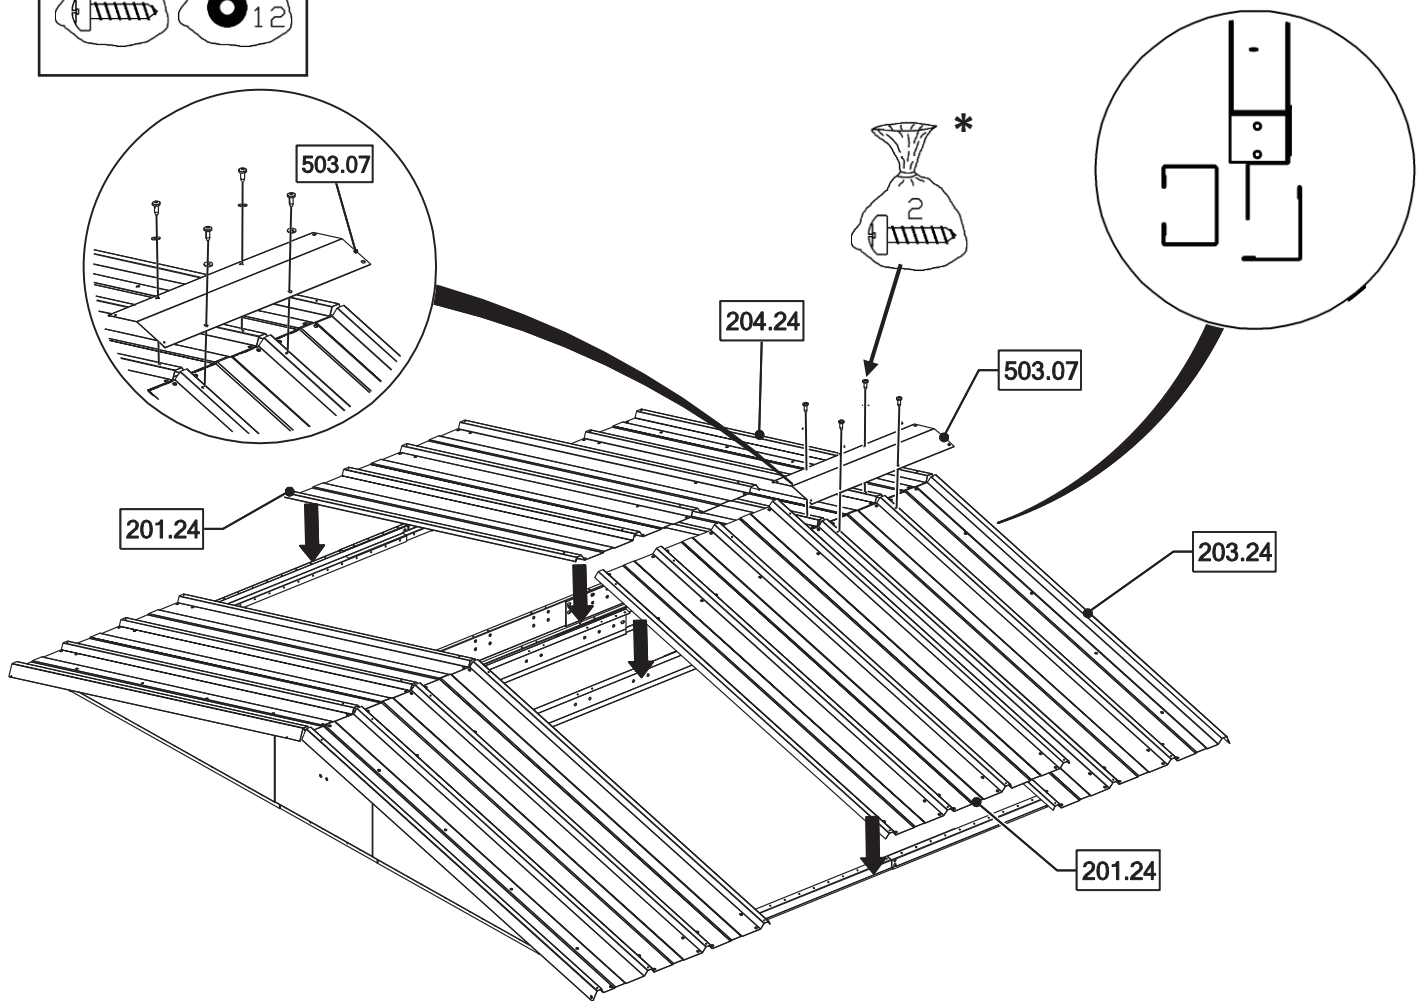
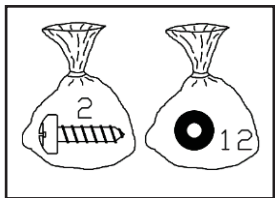




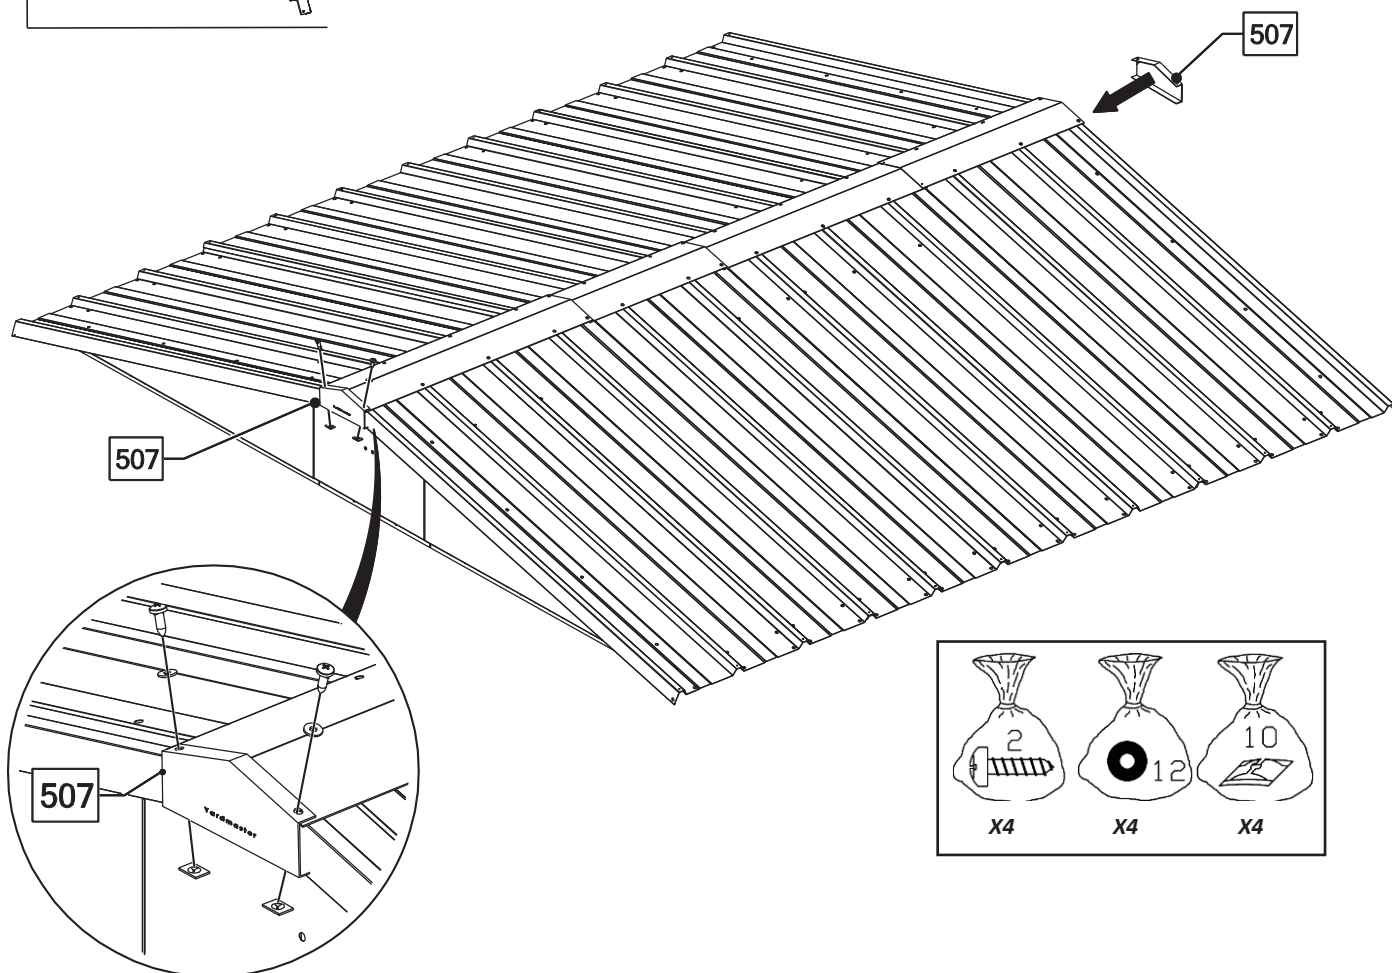
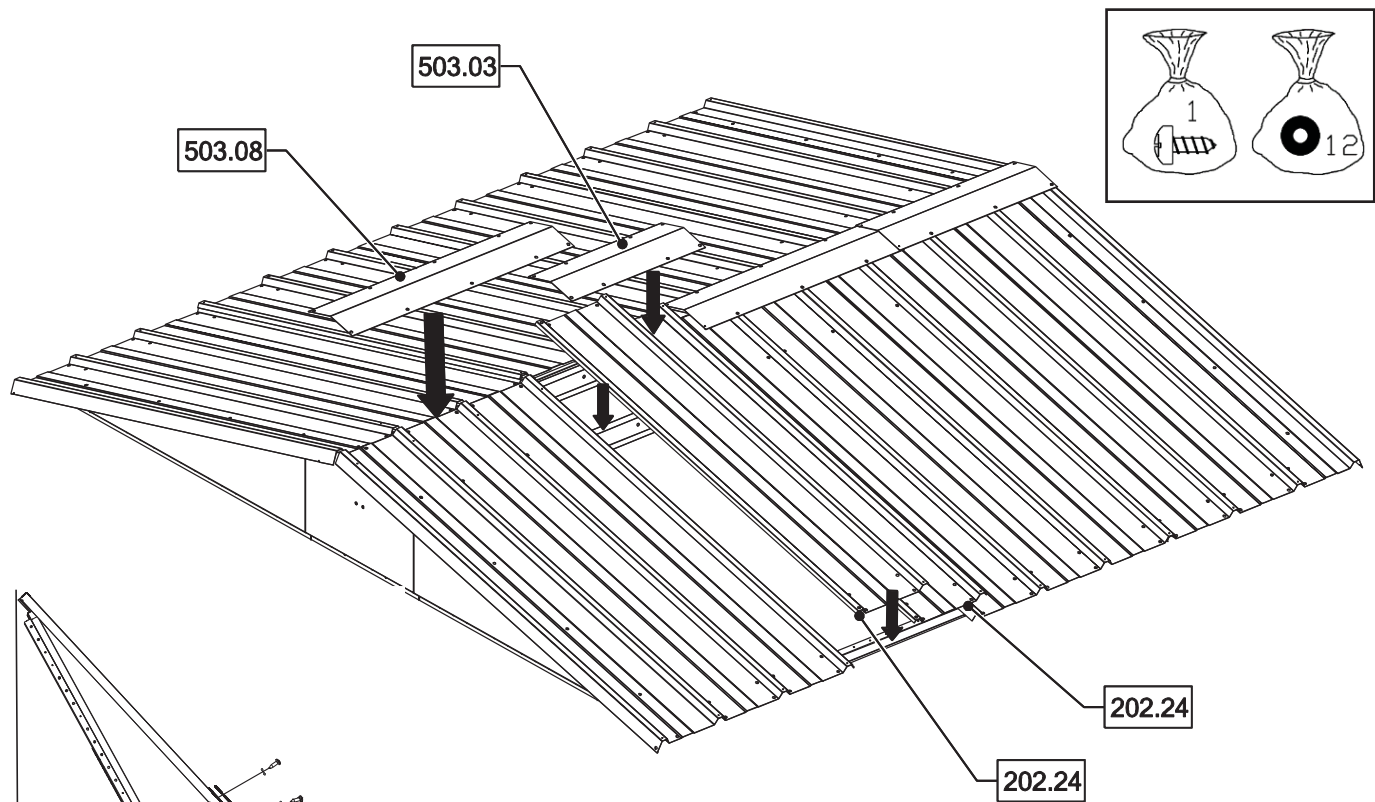


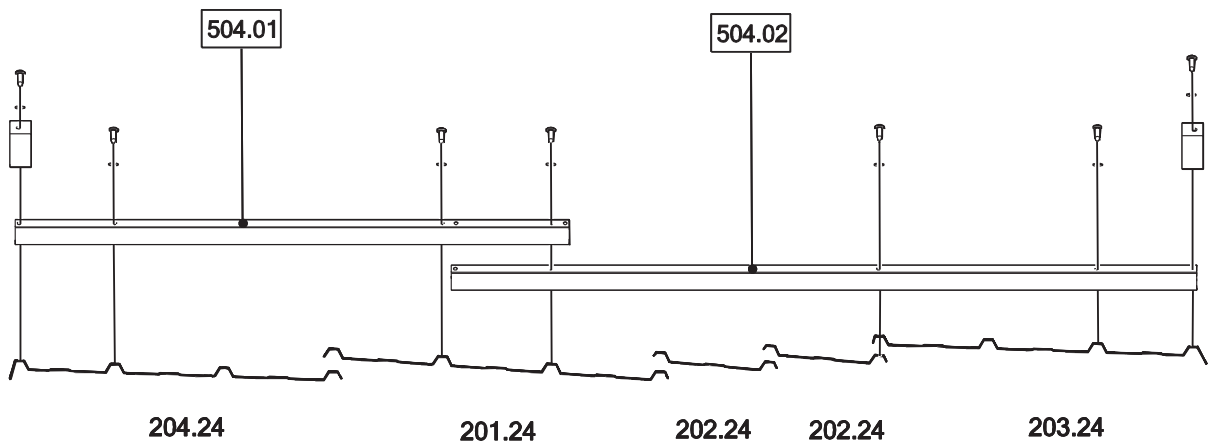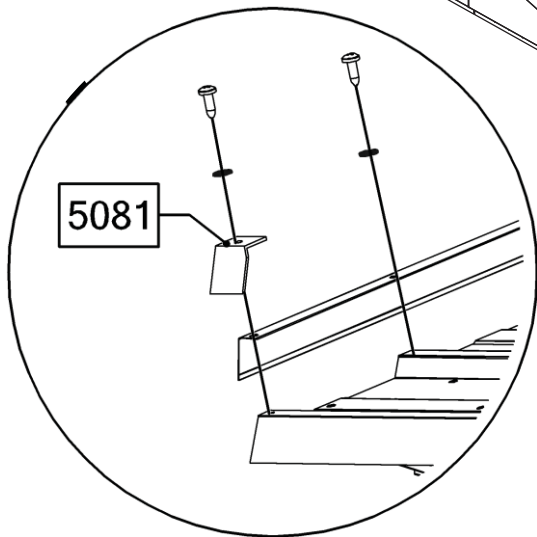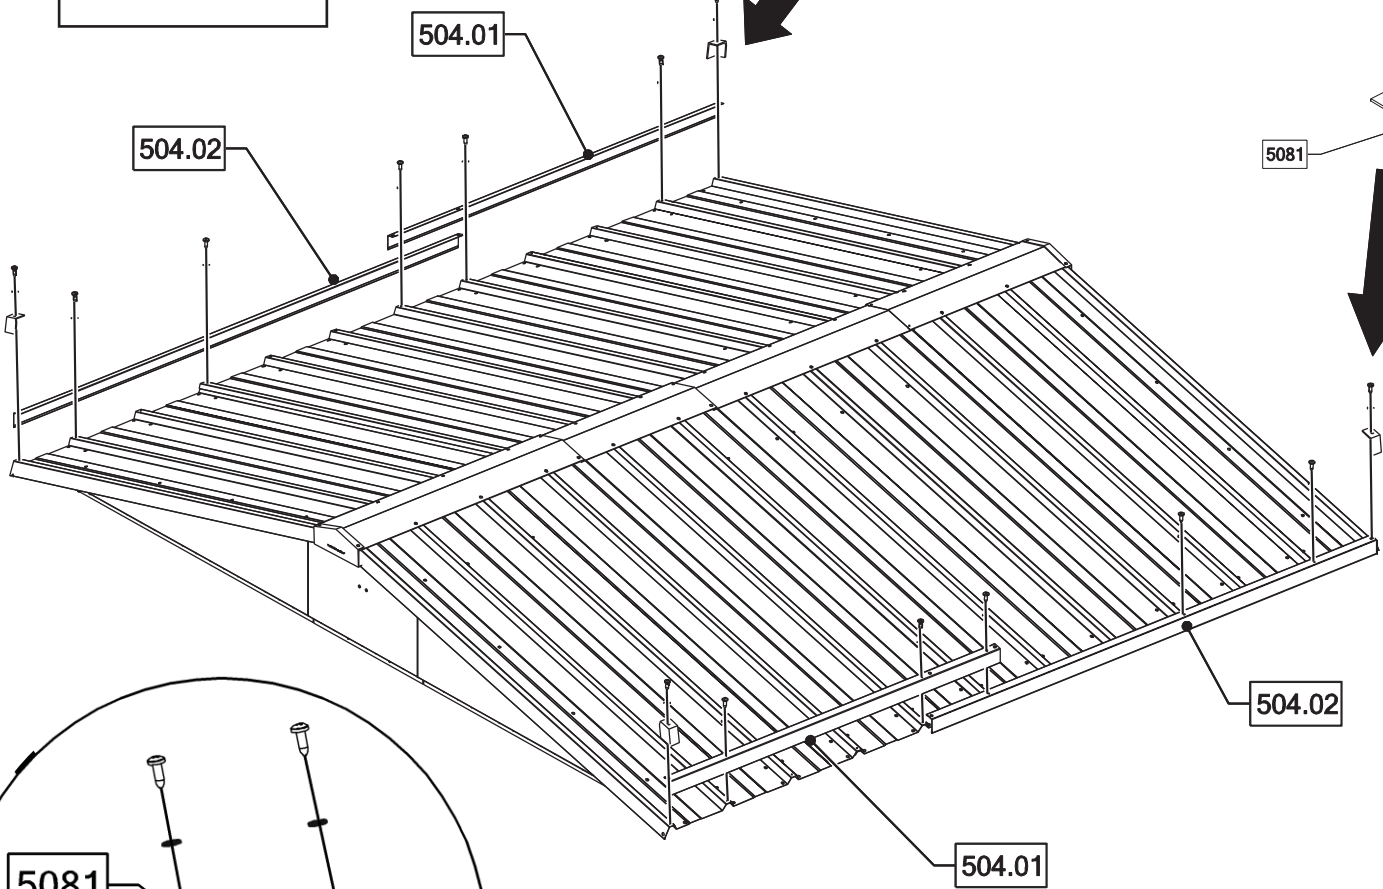
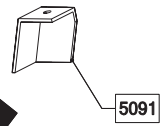
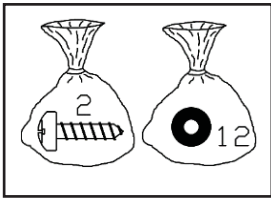




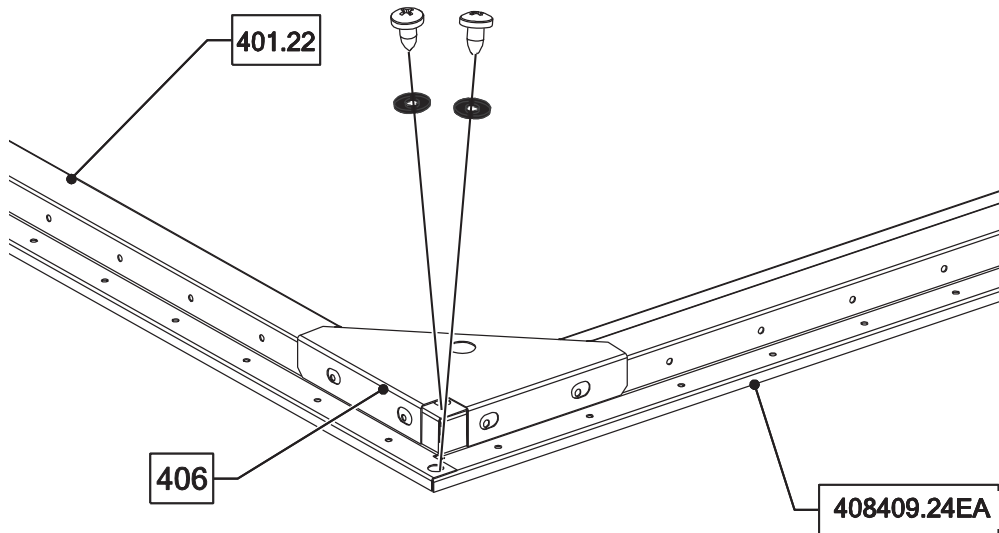
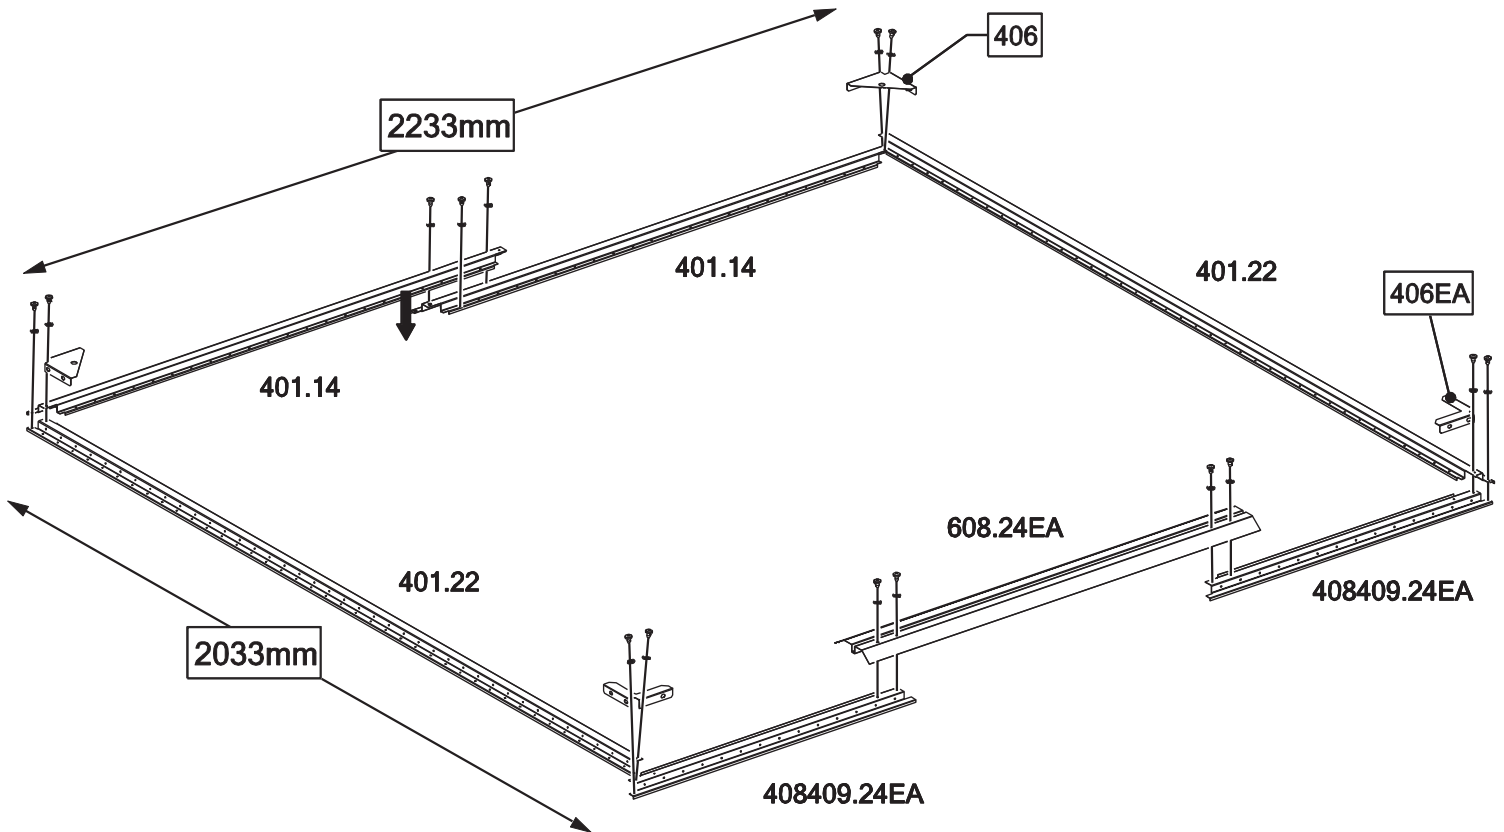
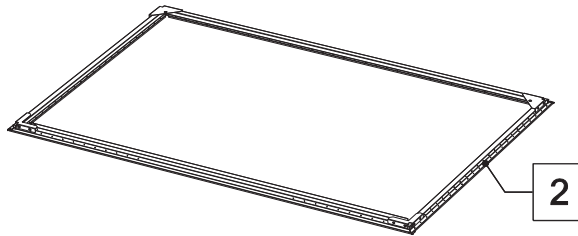
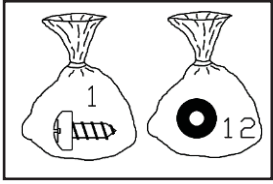


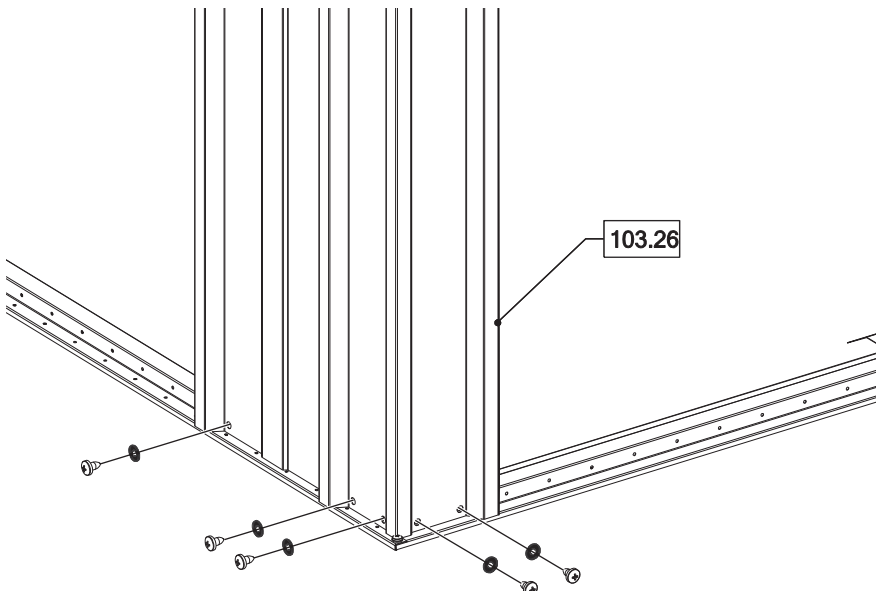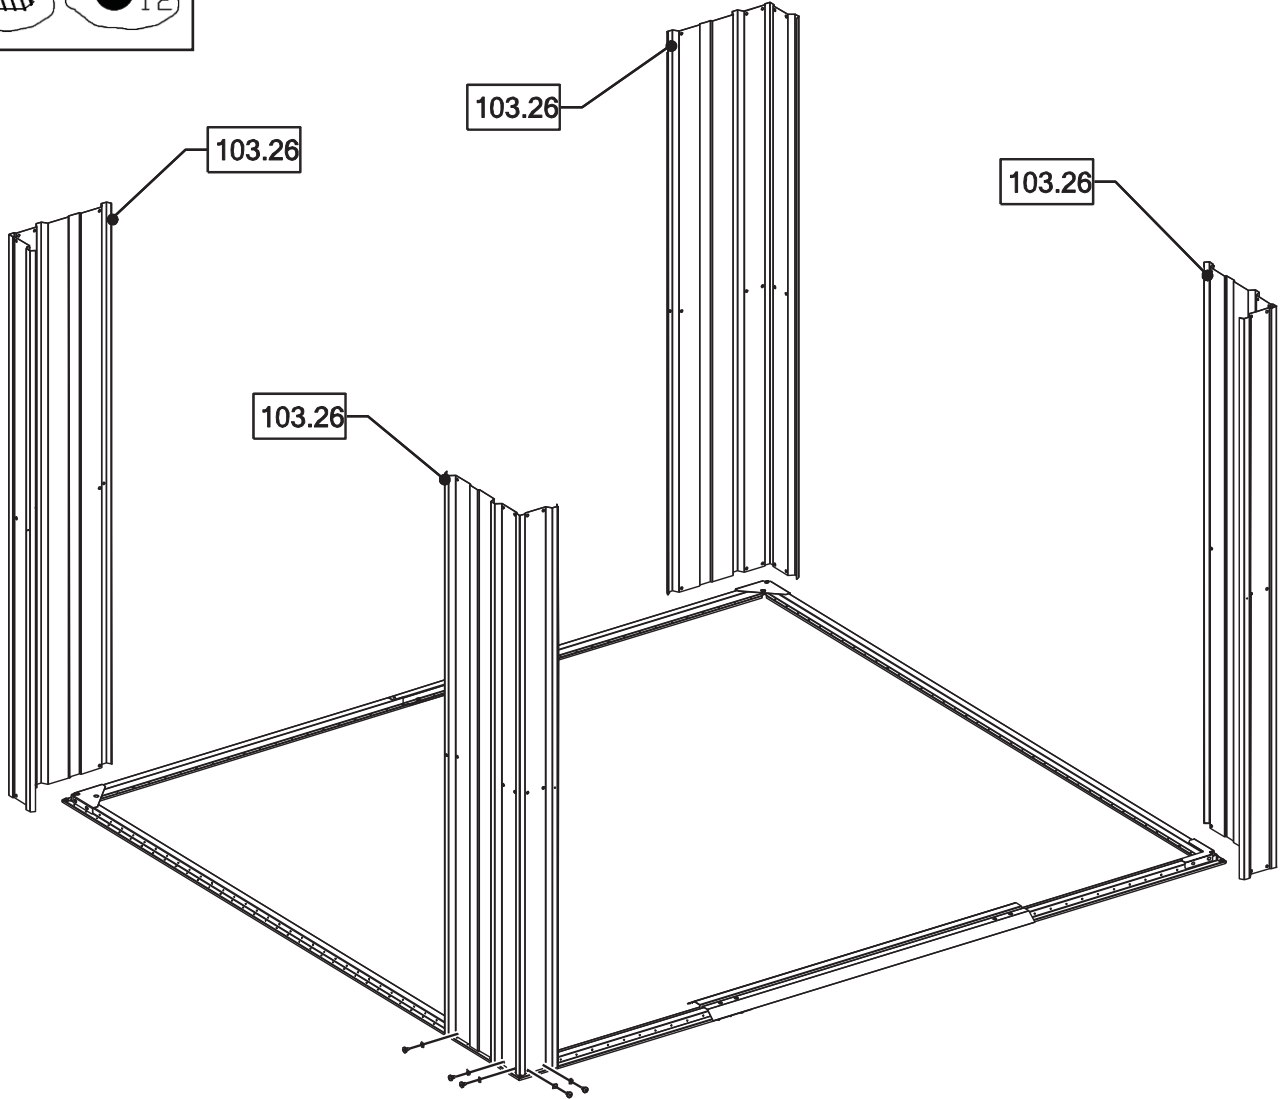
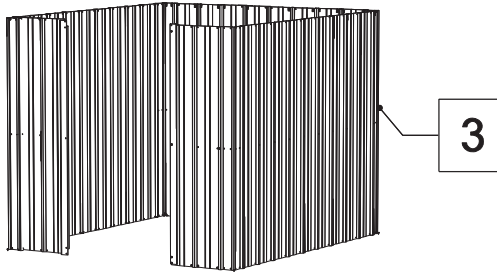
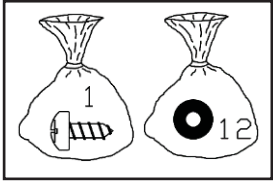




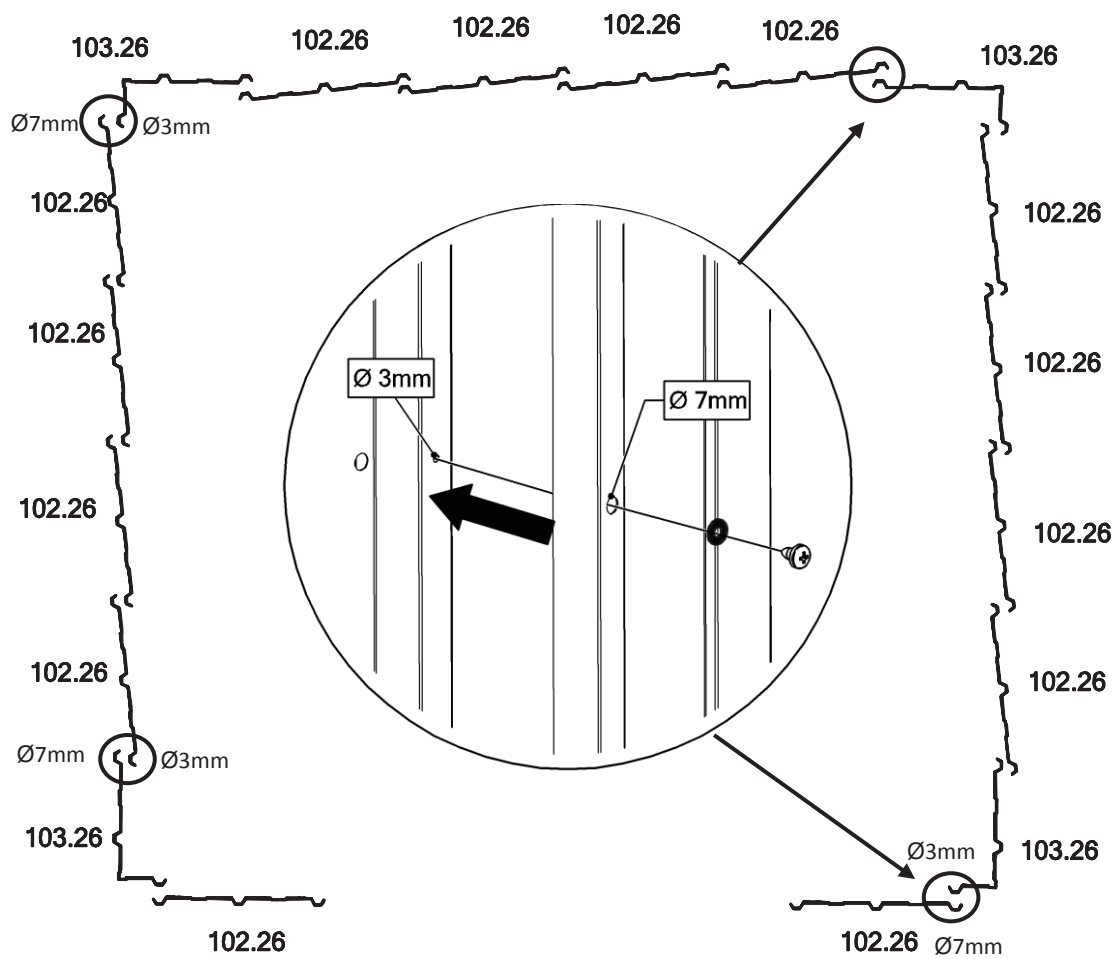
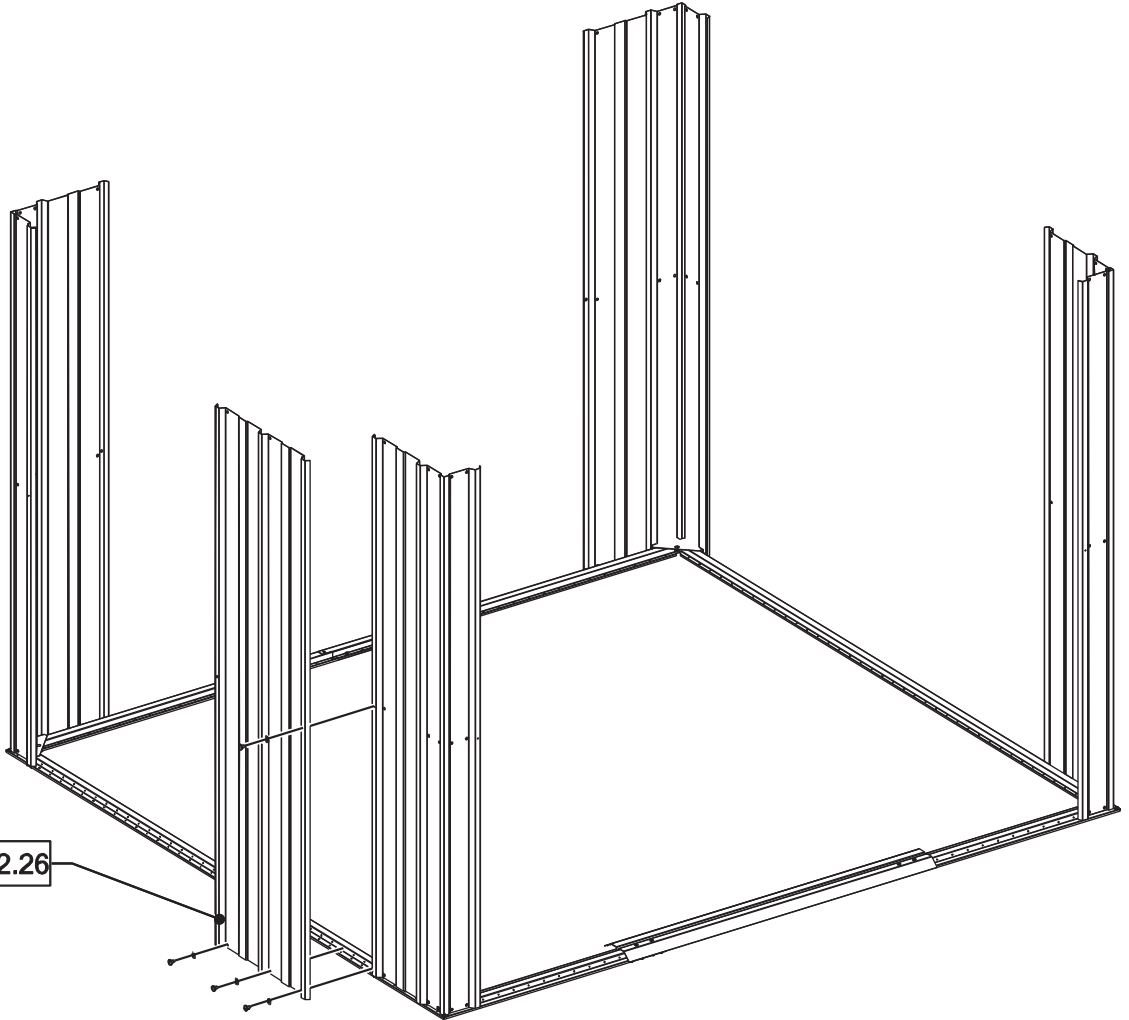


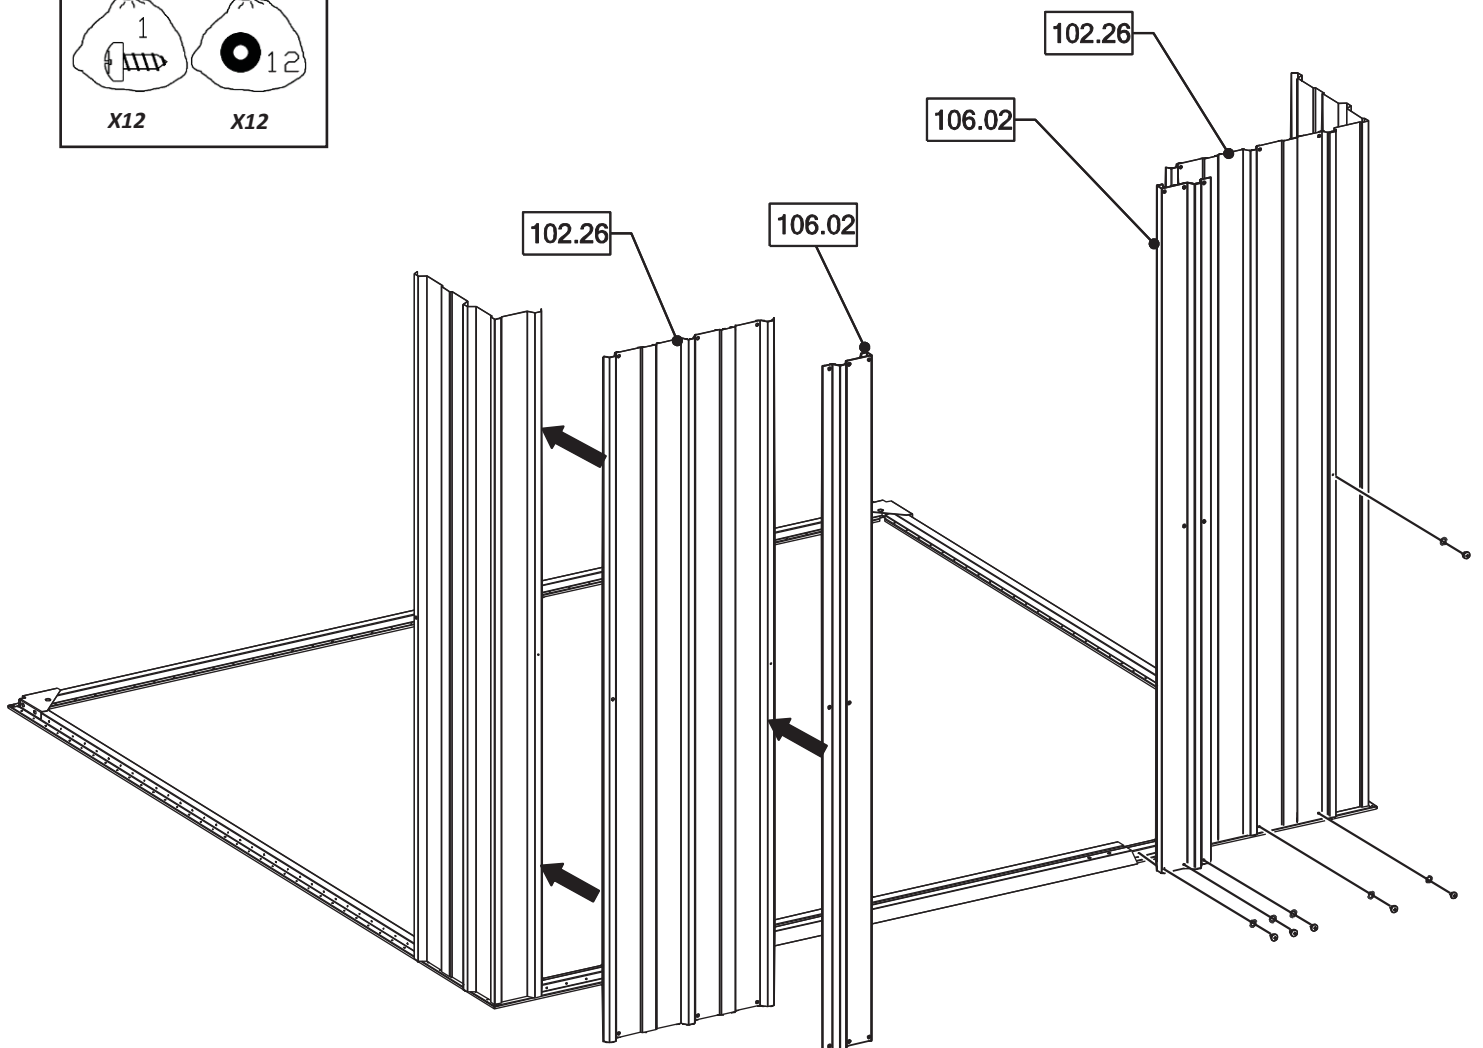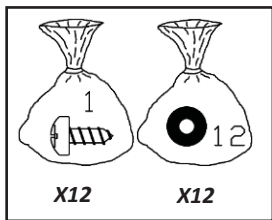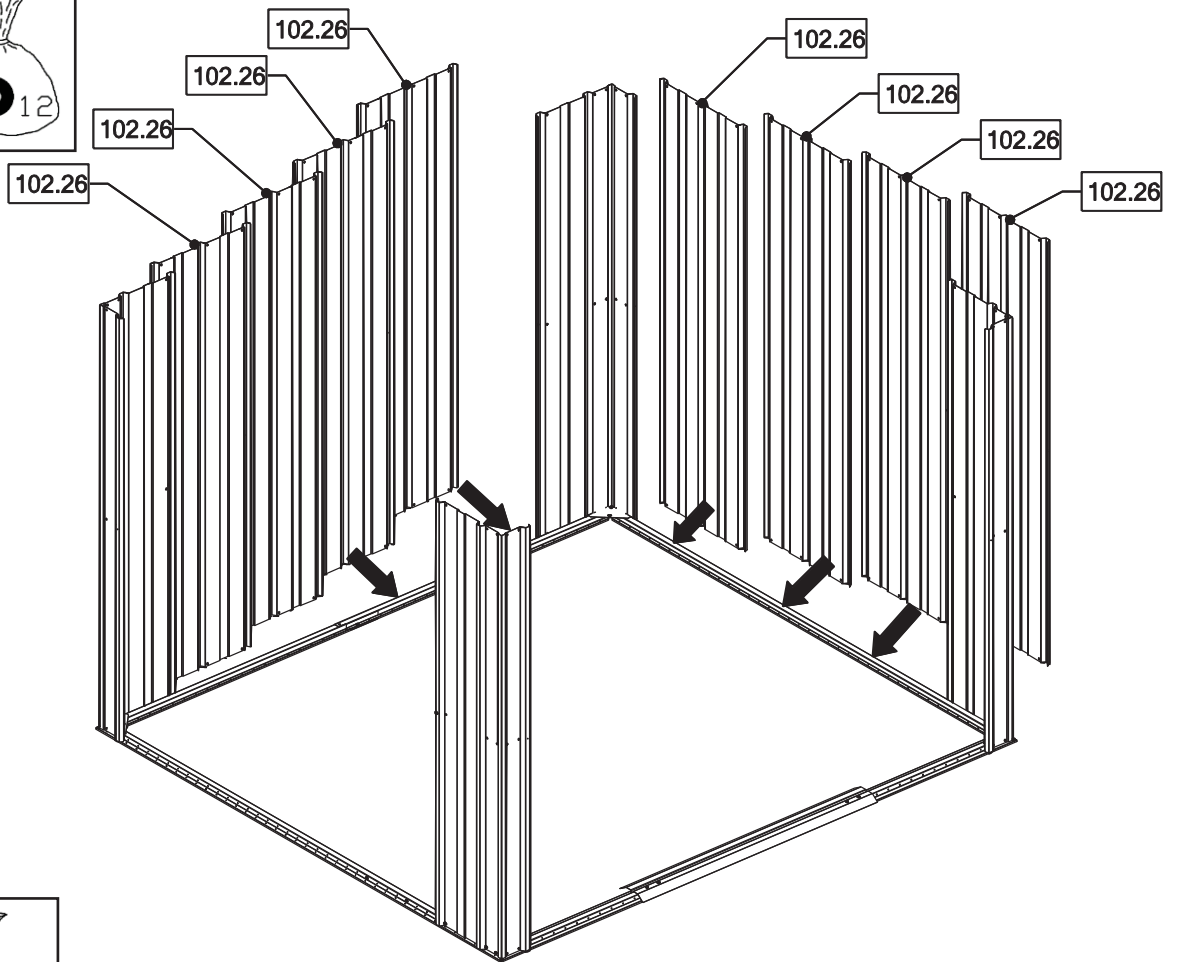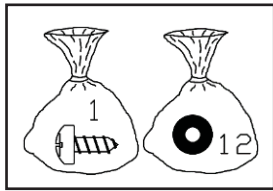


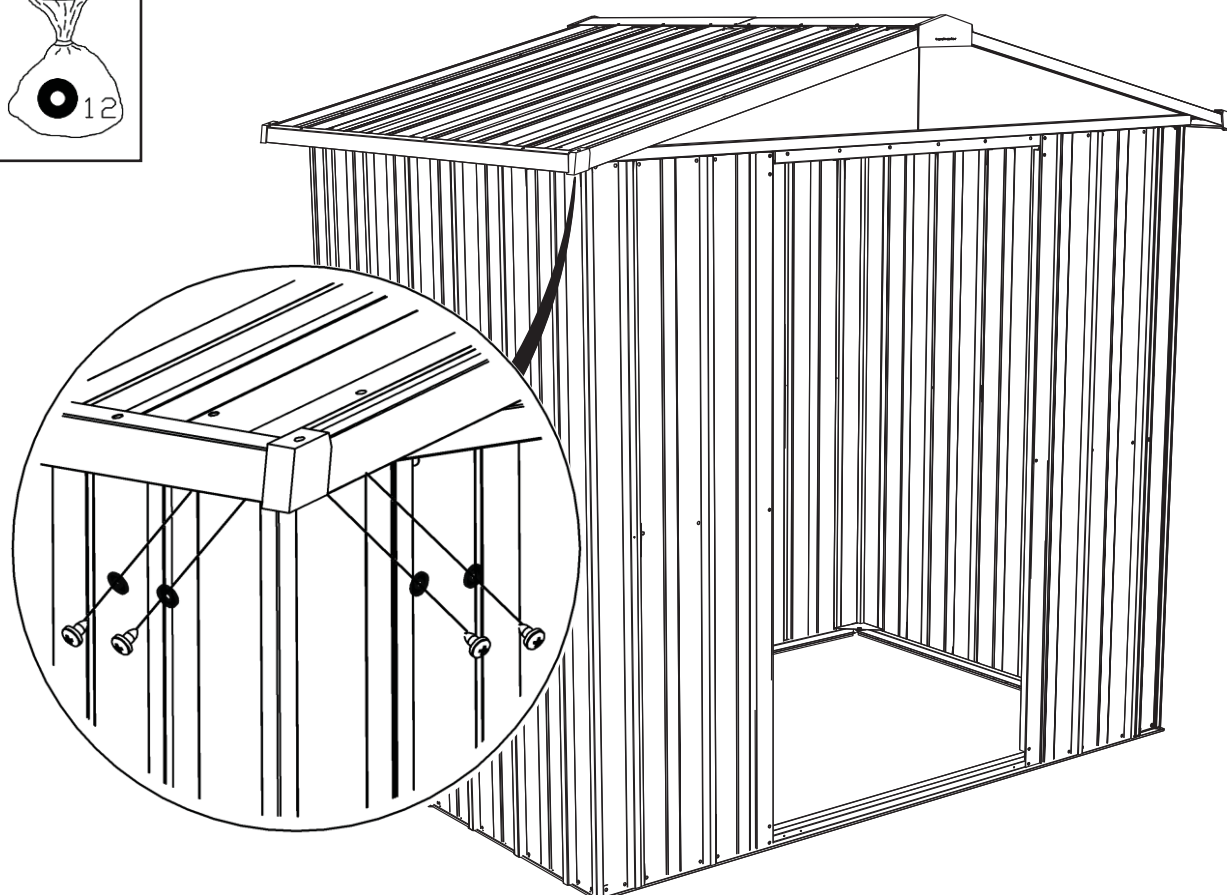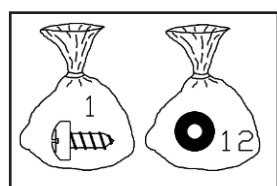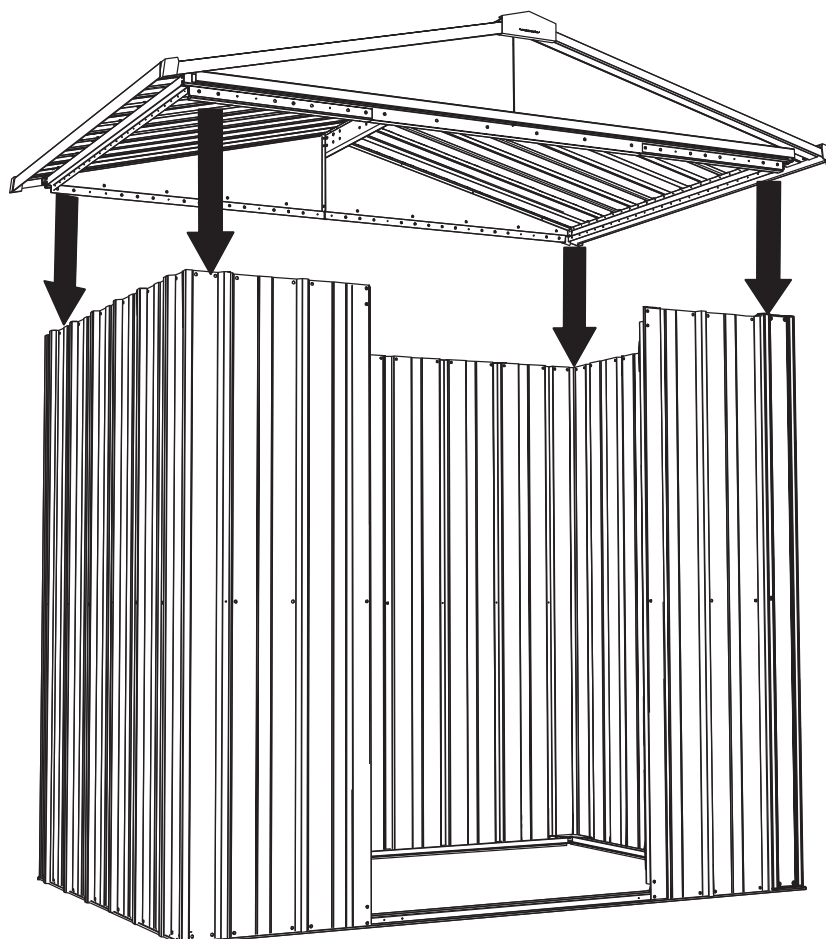

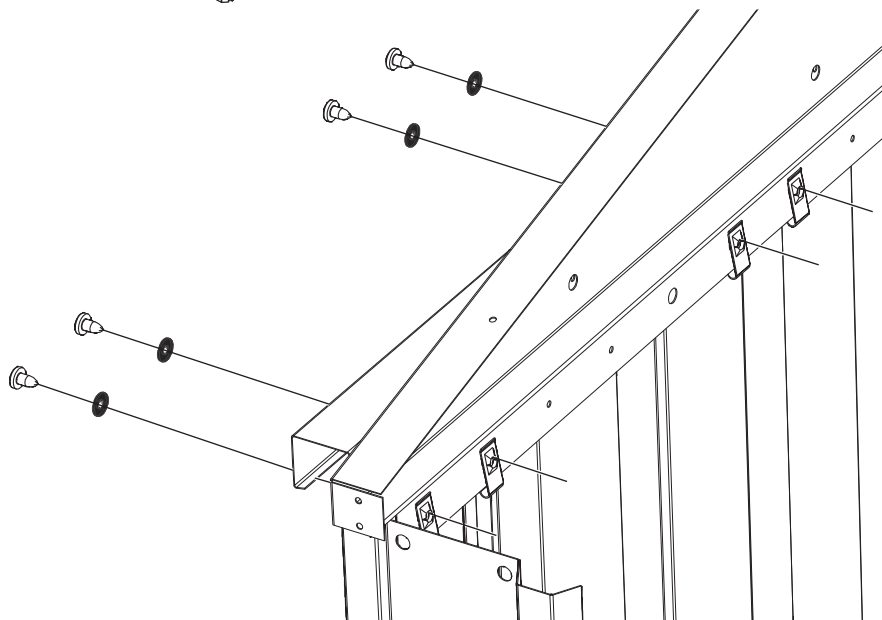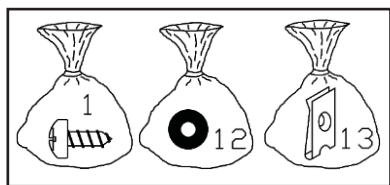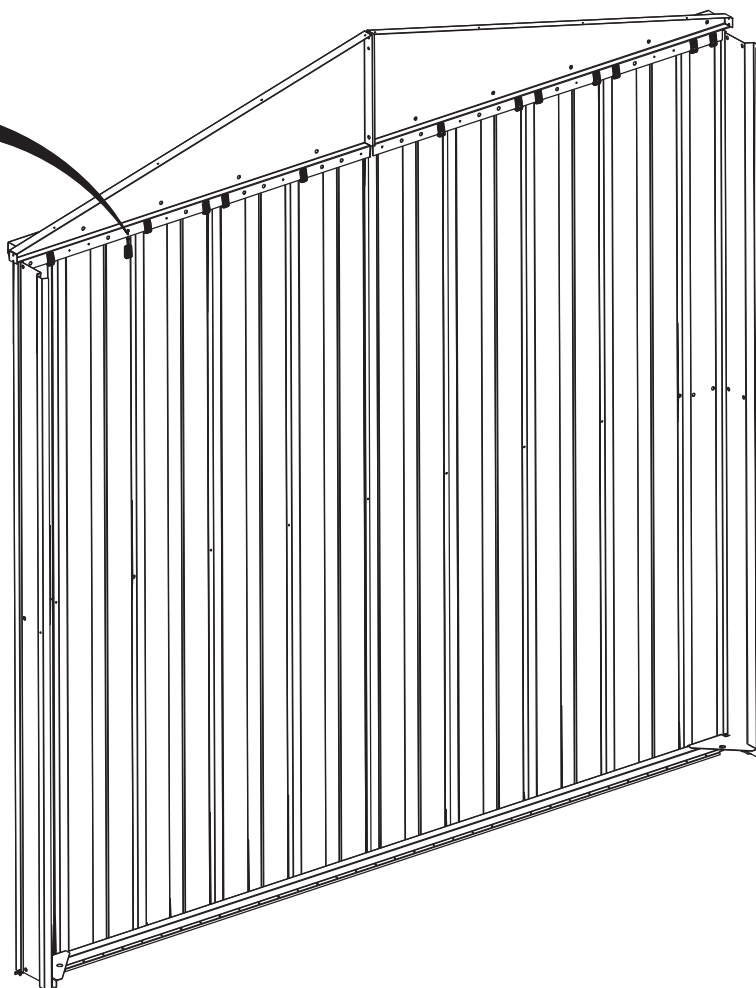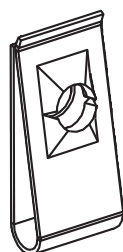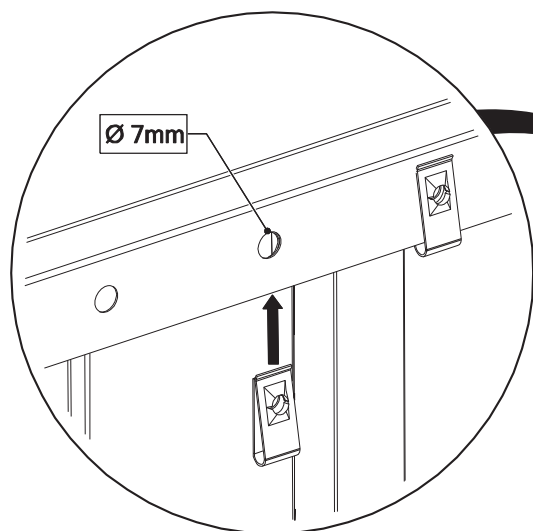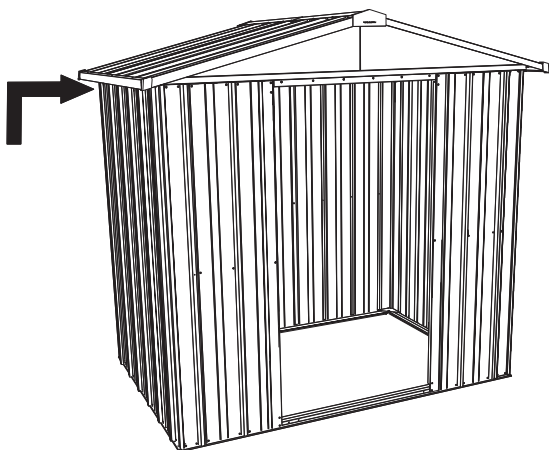

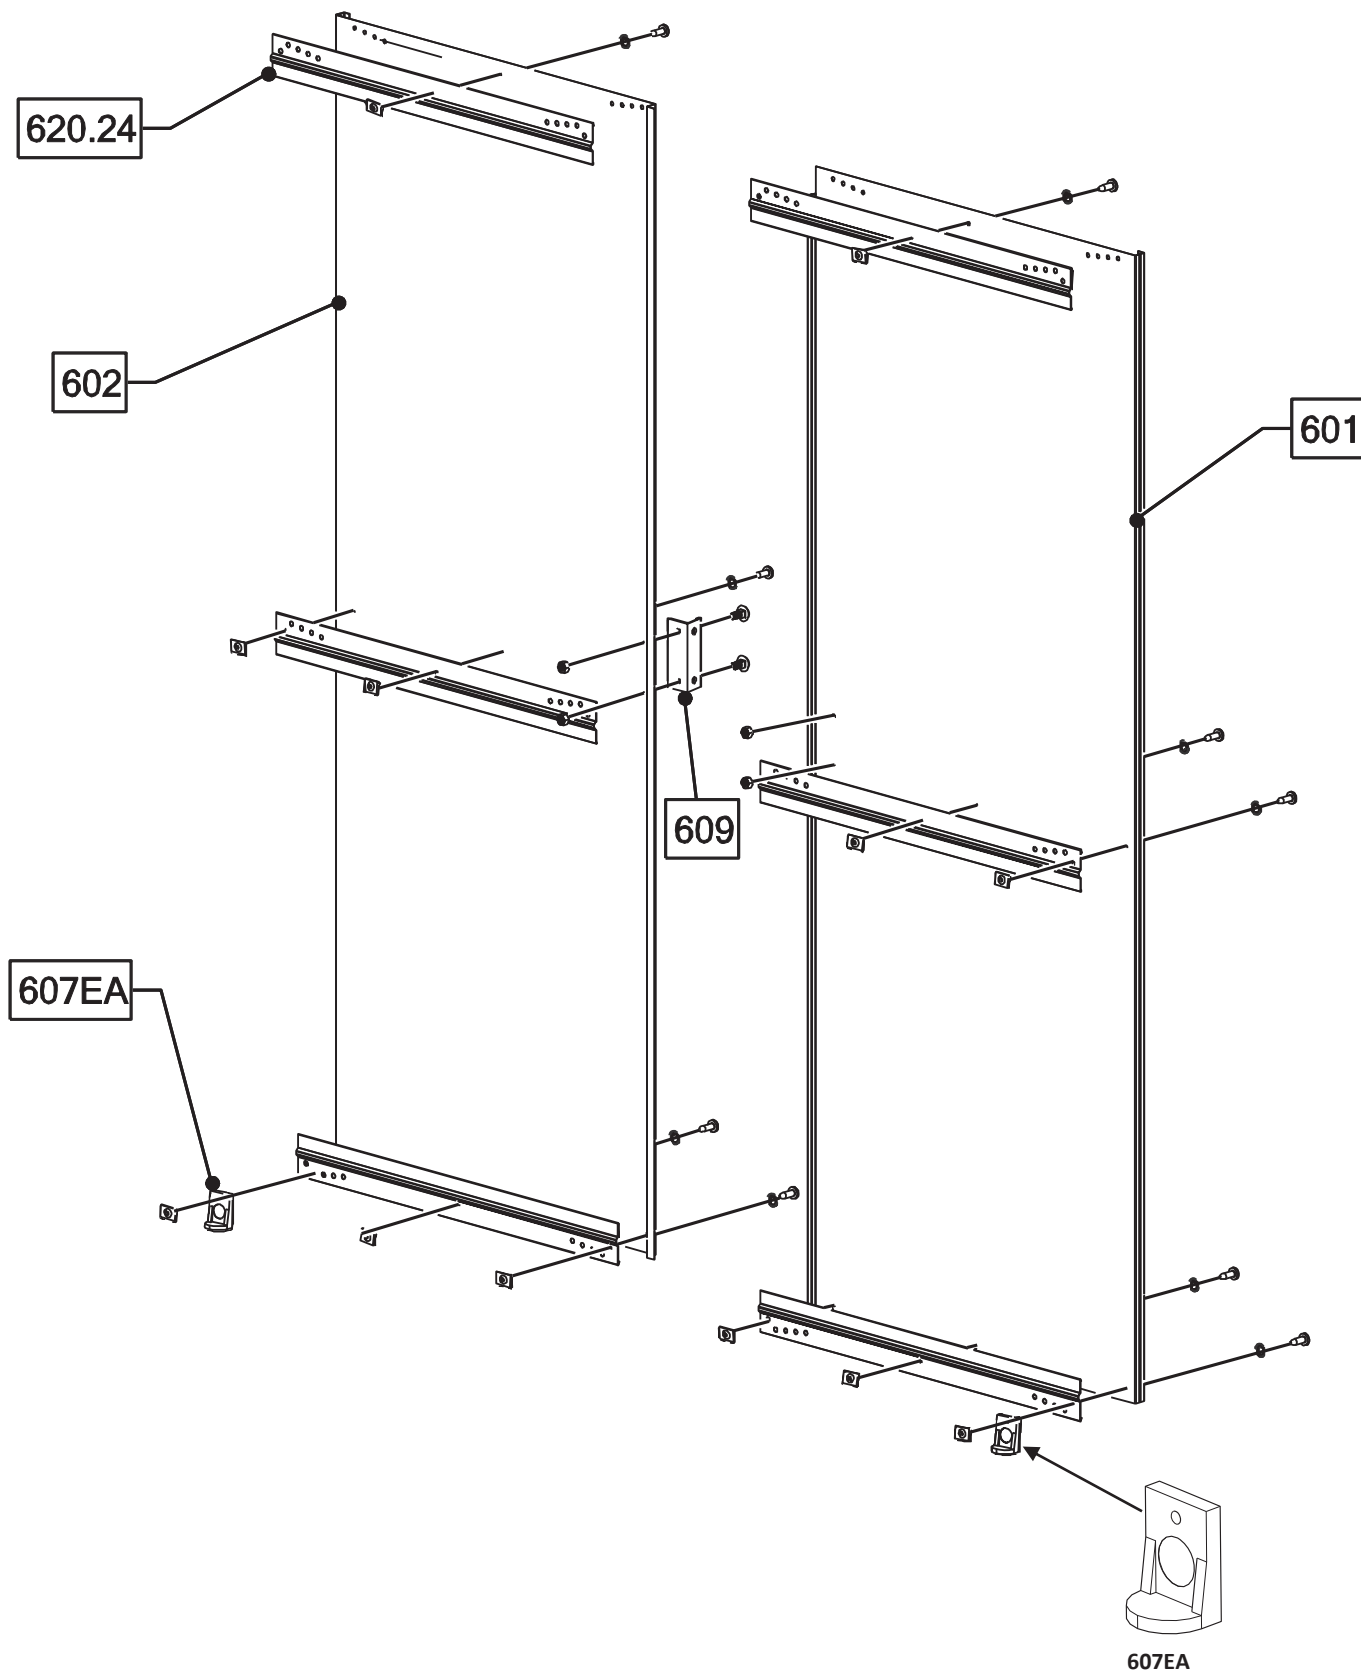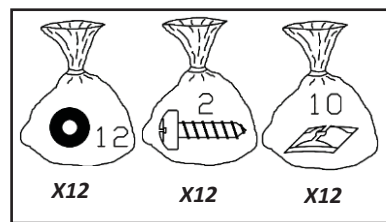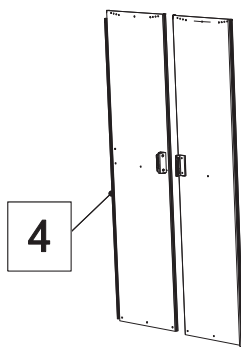

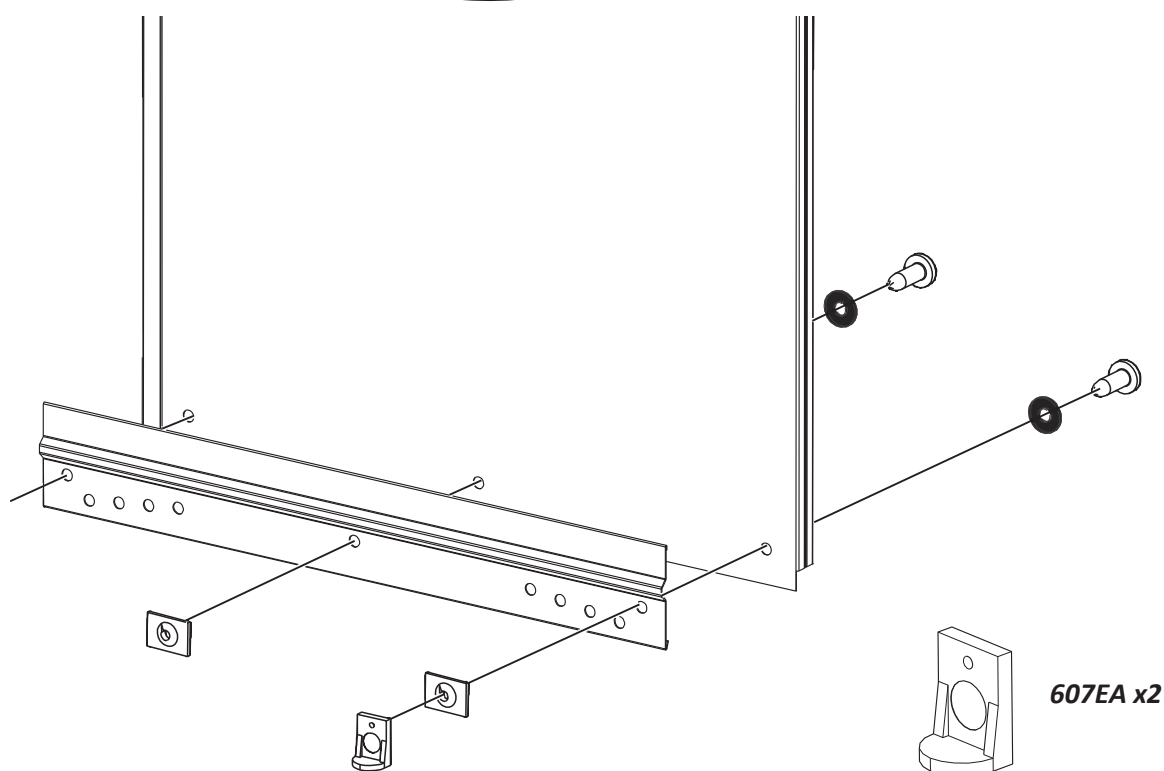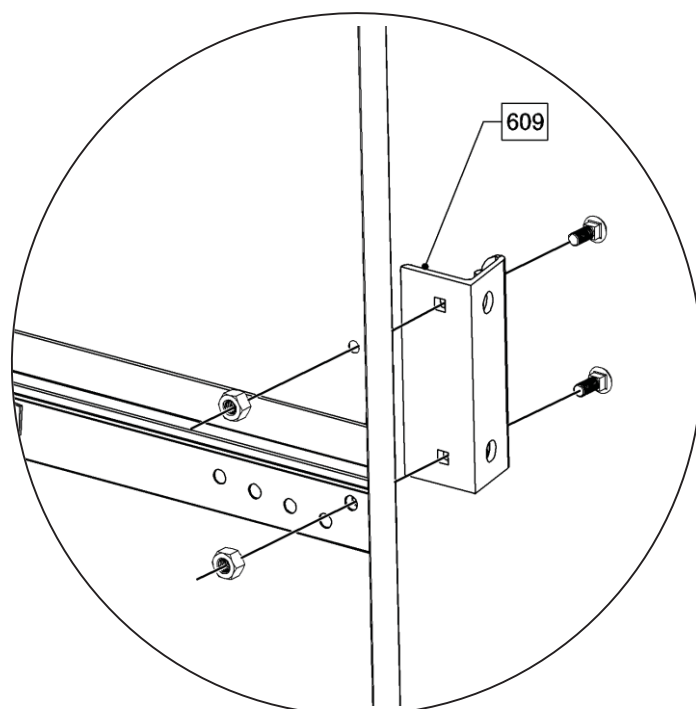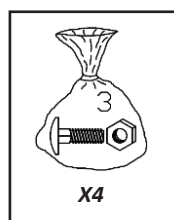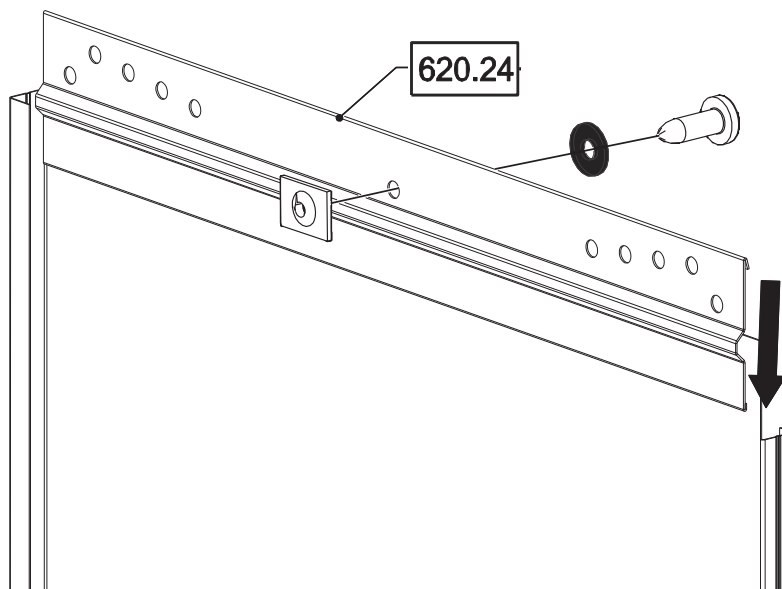

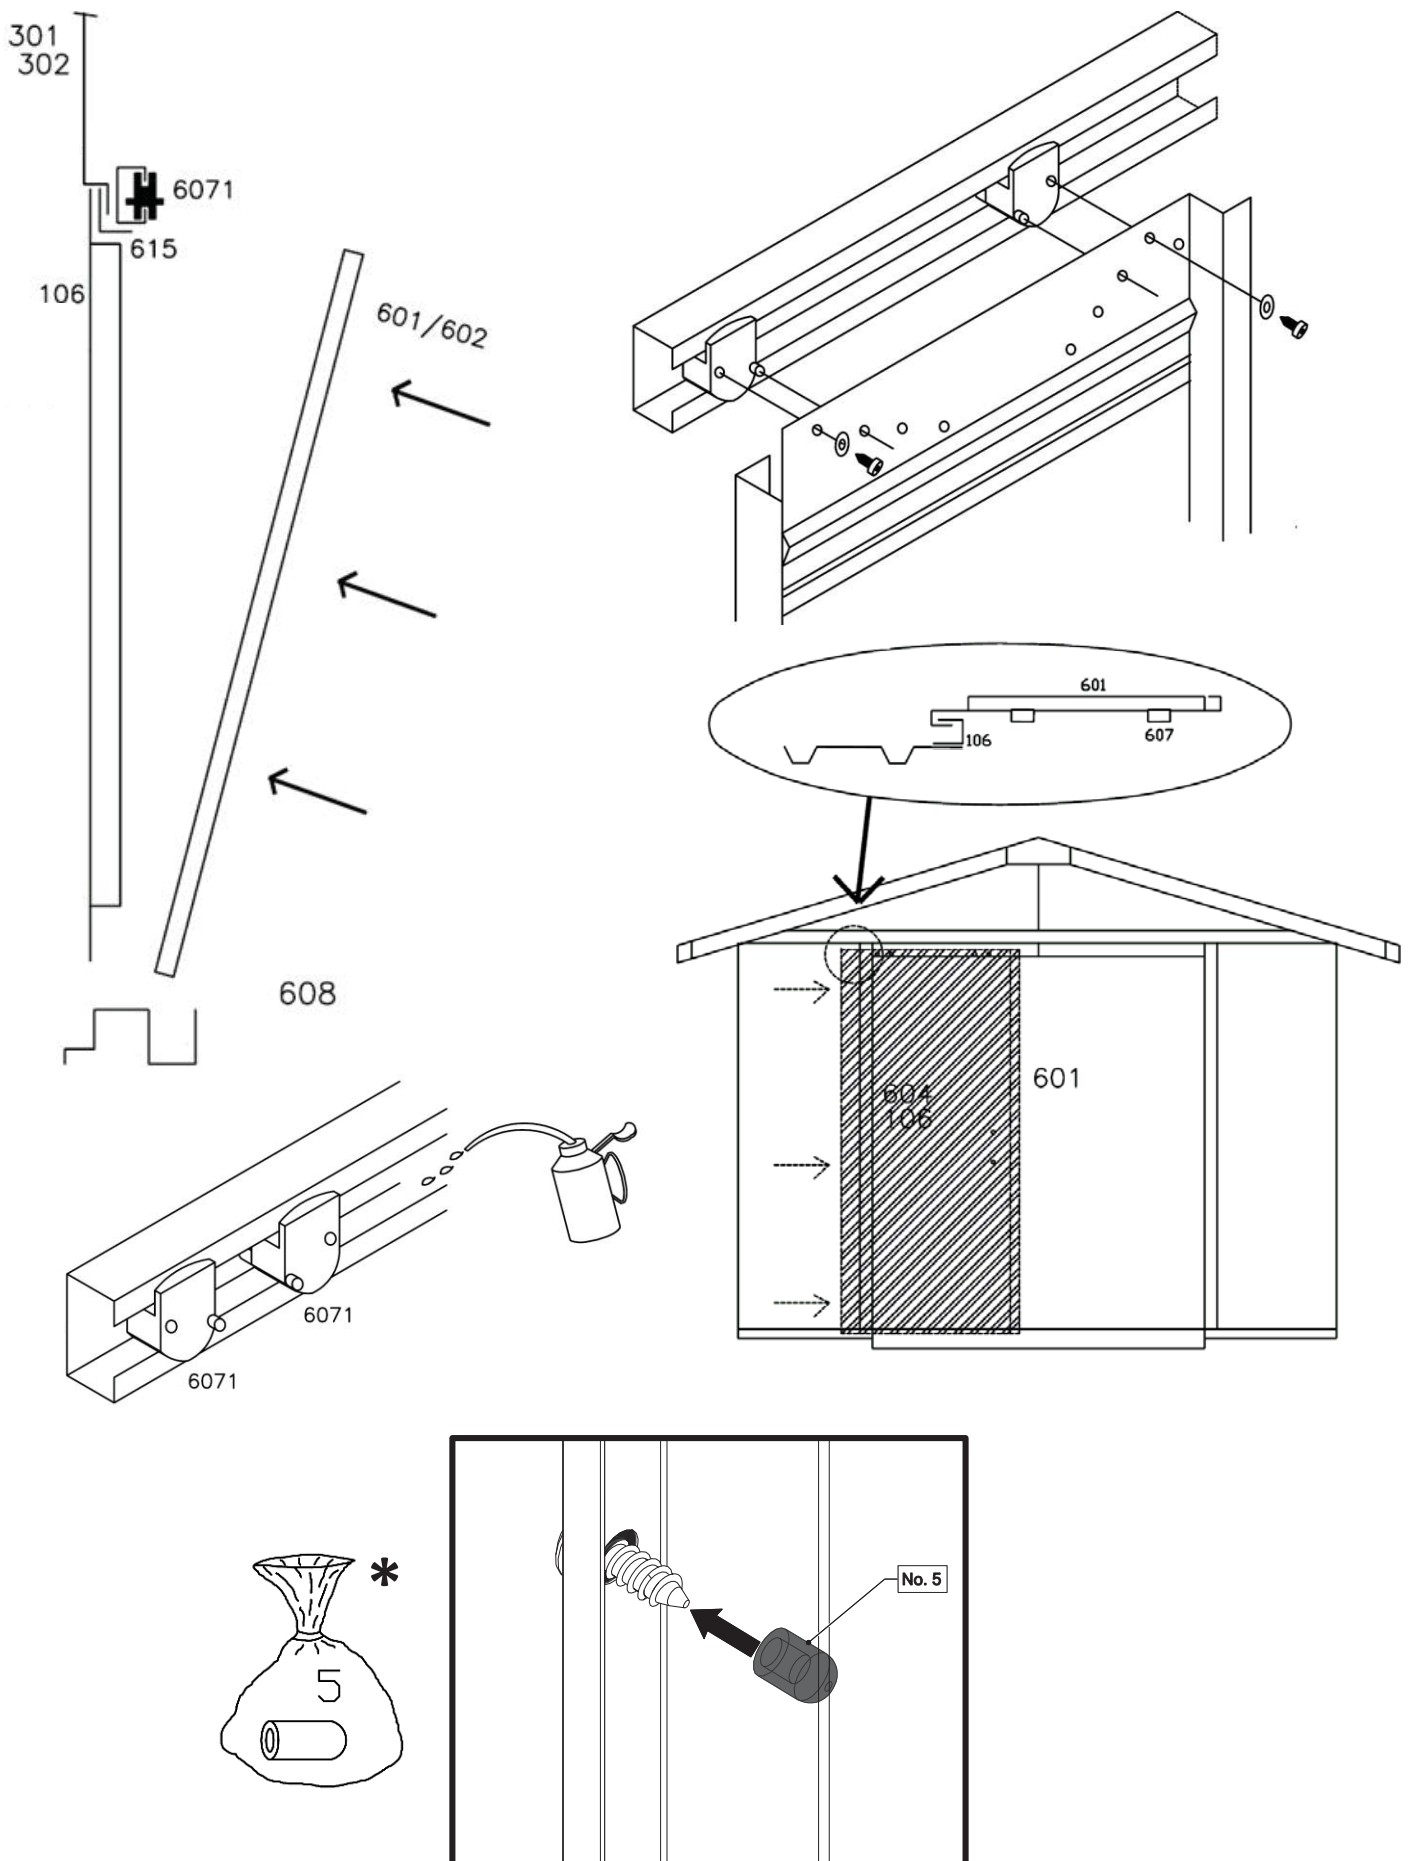

Please anchor shed appropriately after assembly is complete

S'il vous plaît ancrer versé de manière appropriée après avoir terminé l'assemblage
Sie verankern entsprechend Schuppen nach der Montage abgeschlossen ist