




Nous vous recommandons de lire intégralement la notice avant de commencer votre installation.
We recommend that you read all the instructions carefully before starting to install your shower.
Wij raden u aan de montagehandleiding aandachtig te lezen vóór u met de plaatsing begint.
Le aconsejamos que lee las instrucciones completamente antes de empezar la instalación.
Wir empfehlen Ihnen, die Montageanweisung vor Beginn der Montage vollständig zu lesen.
Recomendamos que leia totalmente o folheto informativo antes de iniciar a instalação.
Leggere le istruzioni nella loro integralità prima di procedere all'installazione.
Рекомендуем внимательно прочесть все инструкции по сборке перед началом работ.

Tout supplément !

217634_A-11/2015

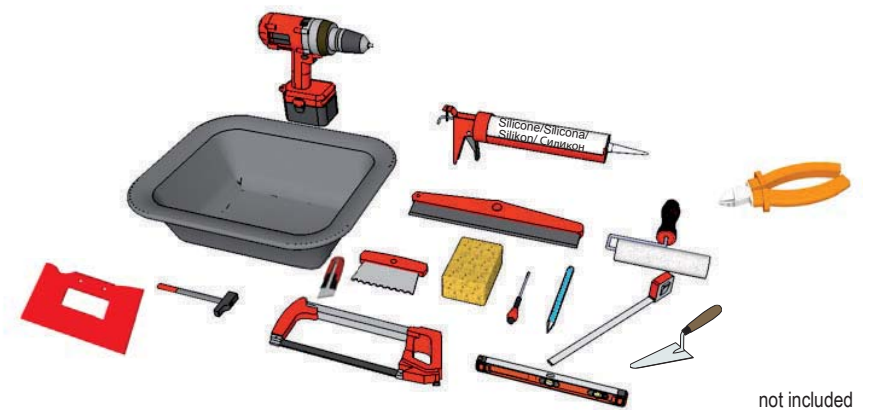

not included

- 1 Mortier/Mortar/Mörtel/Mortero/Mörtel/Cimento/Malta/
Строительный раствор
- 2 Colle PVC/PVC adhesive/PVC-lijm/Cola de PVC/PVC-Kleber/
Cola de PVC/Cola PVC/Клей ПВХ
- 3 Primaire d'accrochage/Primer coat/Hechtprimer/Impregnación de
adherencia/Grundierung/Primário de fixação/Primer per piastrelle/
Место крепления
- 4 Enduit d'imperméabilisation/Sealant/Watertichtende afdekking/
Recubrimiento de impermeabilización/Dichtungsmasse/
Camada de impermeabilização/Rivestimento di impermeabilizzazione/
Изоляционное покрытие



not included

