

BALCONY BANISTER

Installation instruction

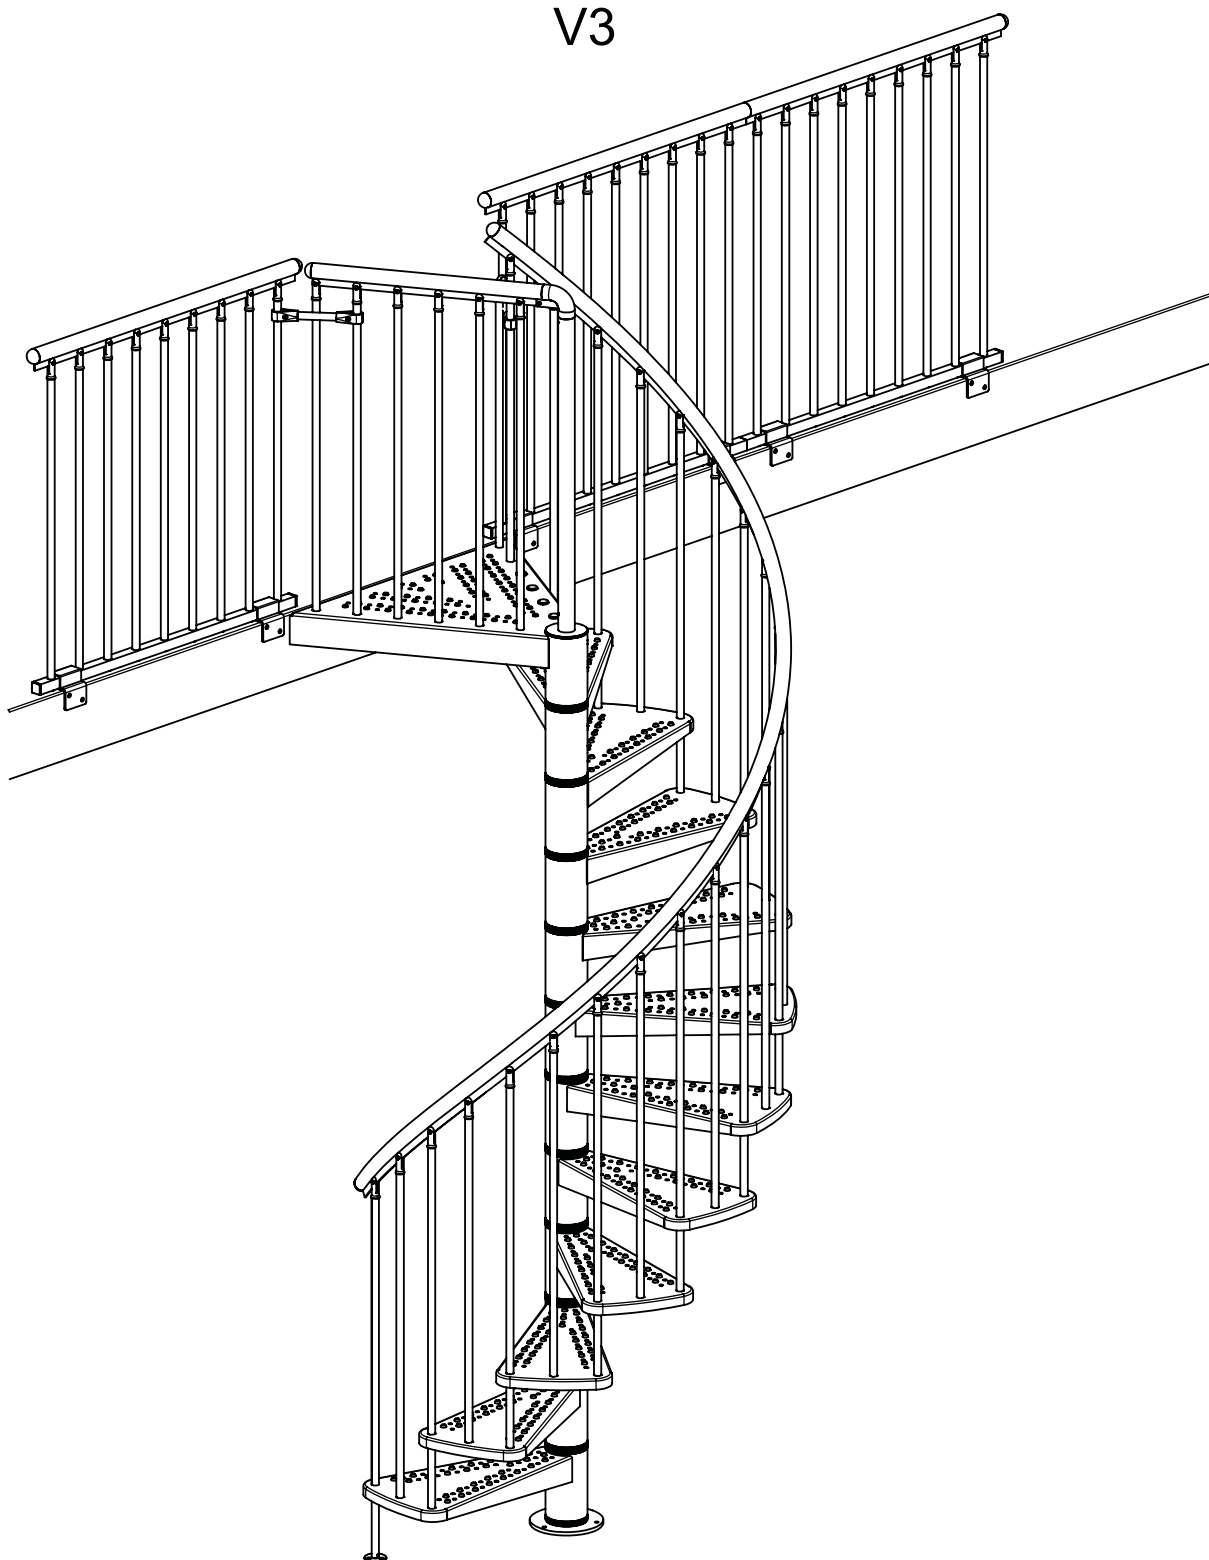
BRÜSTUNGSGELÄNDER


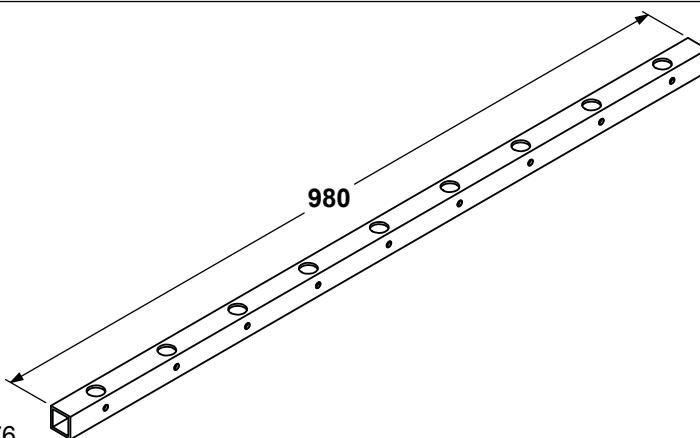

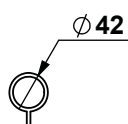
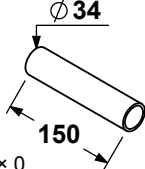
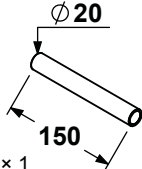

Montageanleitung

BALUSTRADE DE BALCON

Instructions de montage

V3



①  902 (I) : × 9 (II) : × 9 K1-39170	②  980 1000 (I) : × 1 (II) : × 1 K1-30276 ③  (I) : × 2 (II) : × 2 K2-30230 ④  (I) : × 2 (II) : × 0 K1-30020 ⑤  (I) : × 9 (II) : × 9 K1-39050 ⑥  (I) : × 1 (II) : × 0 K1-19340	⑦  Ø 42 (I) : × 1 (II) : × 1 K1-39110 ⑧  (I) : × 2 (II) : × 0 K1-39010 ⑨  Ø 34 150 (I) : × 0 (II) : × 1 K1-39011 ⑩  (I) : × 0 (II) : × 1 K1-39012 ⑪  (I) : × 2 (II) : × 0 K2-39190 ⑫  Ø 20 150 (I) : × 1 (II) : × 0 K1-39171	⑭  (I) : × 1 (II) : × 0 K2-30165 ⑳  (I) : × 6 (II) : × 4 K3-06068 Ø8×60 ㉑  (I) : × 6 (II) : × 4 K3-04041 Ø8 ㉒  (I) : × 6 (II) : × 4 K3-08004 Ø10×60 ㉓  (I) : × 15 (II) : × 13 K3-05020 M8×8 ㉔  (I) : × 9 (II) : × 9 K3-01201 M5×14 ㉕  (I) : × 9 (II) : × 9 K3-03050 M5 ㉖  (I) : × 1 (II) : × 1 K3-90001
---	--	---	---

I	II
Start kit	Extension kit
Kit de départ	Kit de suite
Startpaket	Extrapaket
Startpakke	Ekstrapakke

