

# BALCONY BANISTER

Installation instruction

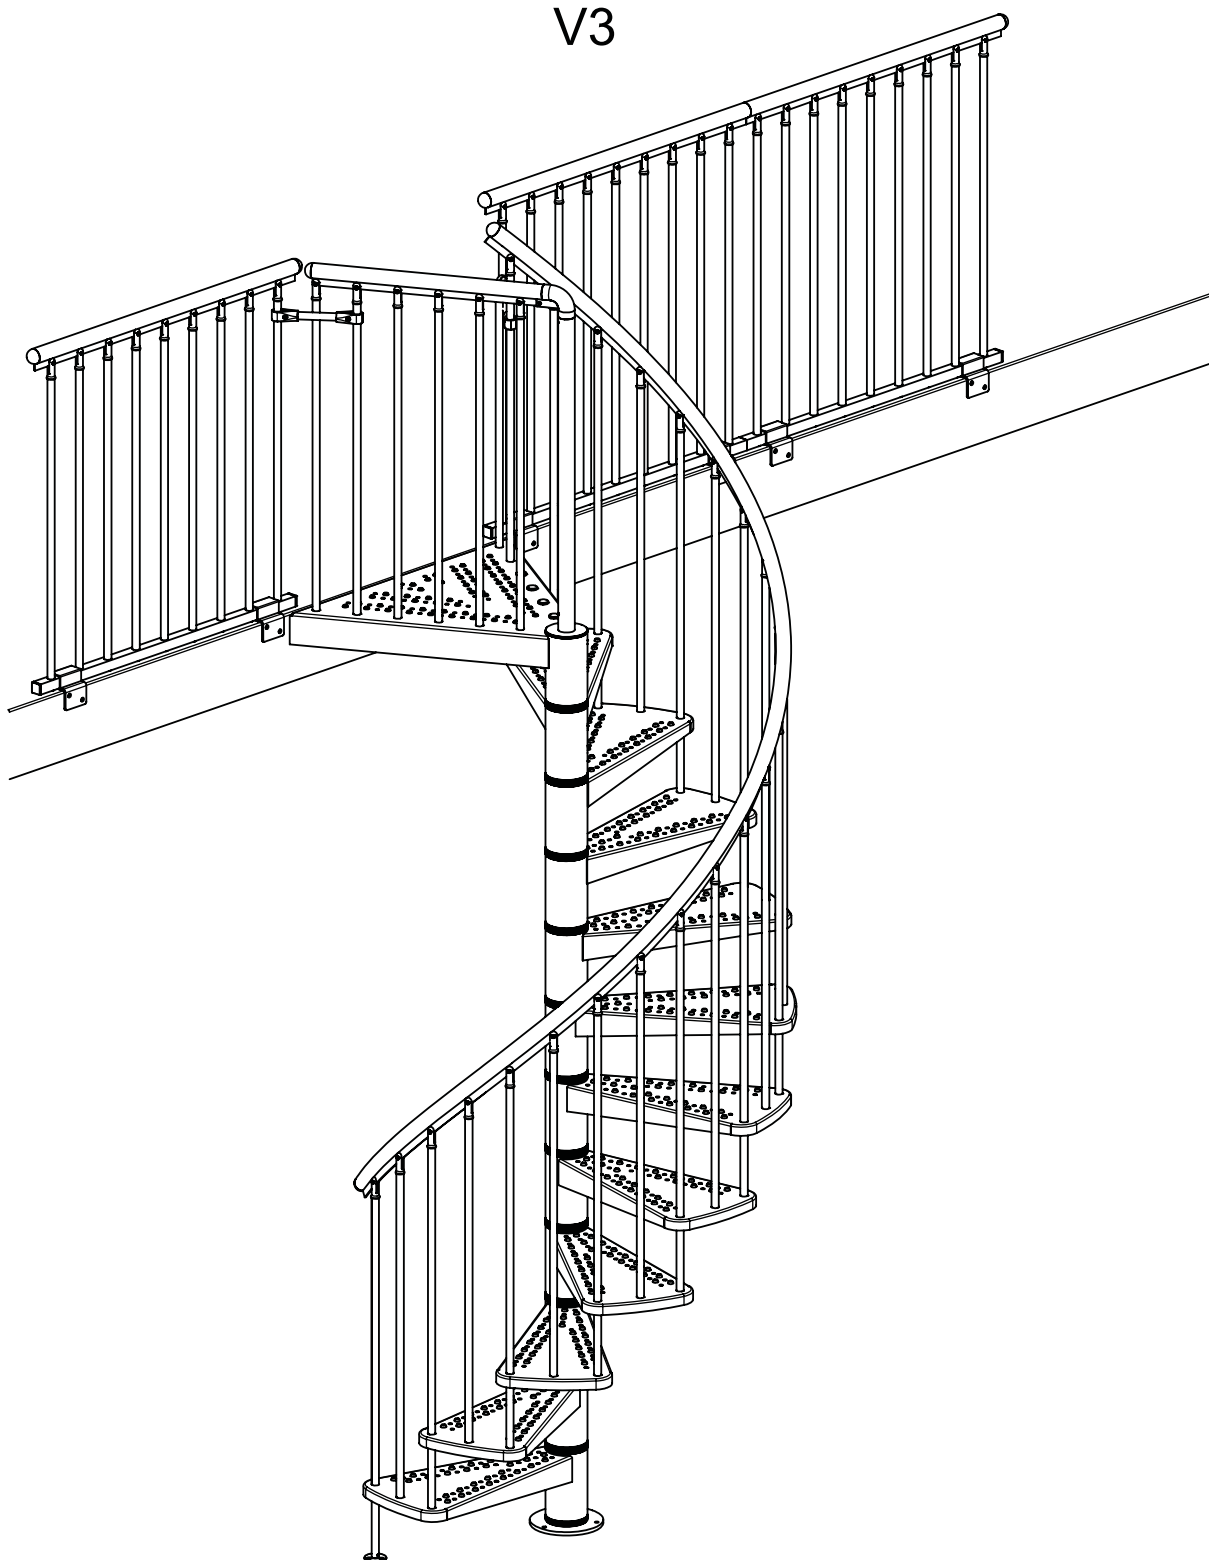
# BRÜSTUNGSGELÄNDER


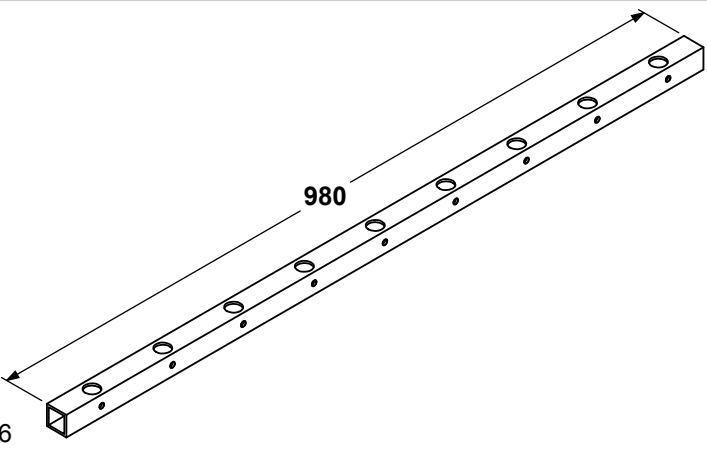


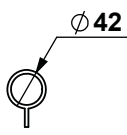



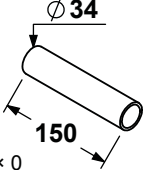


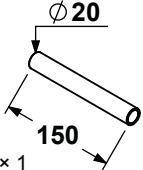








Montageanleitung

# BALUSTRADE DE BALCON

Instructions de montage

V3



<p>①</p>  <p>902</p> <p>(I) : x 9 (II) : x 9 K1-39170</p>	<p>②</p>  <p>980</p> <p>1000</p> <p>(I) : x 1 (II) : x 1 K1-30276</p>		<p>③</p>  <p>(I) : x 2 (II) : x 2 K2-30230</p>	<p>④</p>  <p>(I) : x 2 (II) : x 0 K1-30020</p>		
<p>⑦</p>  <p>∅ 42</p> <p>(I) : x 1 (II) : x 1 K1-39110</p>		<p>⑤</p>  <p>(I) : x 9 (II) : x 9 K1-39050</p>	<p>⑥</p>  <p>(I) : x 1 (II) : x 0 K1-19340</p>			
<p>⑧</p>  <p>(I) : x 2 (II) : x 0 K1-39010</p>	<p>⑨</p>  <p>∅ 34</p> <p>150</p> <p>(I) : x 0 (II) : x 1 K1-39011</p>	<p>⑩</p>  <p>(I) : x 0 (II) : x 1 K1-39012</p>	<p>⑪</p>  <p>(I) : x 2 (II) : x 0 K2-39190</p>	<p>⑫</p>  <p>∅ 20</p> <p>150</p> <p>(I) : x 1 (II) : x 0 K1-39171</p>		
<p>⑭</p>  <p>(I) : x 1 (II) : x 0 K2-30165</p>						
<p>⑳</p>  <p>(I) : x 6 (II) : x 4 K3-06068 ∅8x60</p>	<p>㉑</p>  <p>(I) : x 6 (II) : x 4 K3-04041 ∅8</p>	<p>㉒</p>  <p>(I) : x 6 (II) : x 4 K3-08004 ∅10x60</p>	<p>㉓</p>  <p>(I) : x 15 (II) : x 13 K3-05020 M8x8</p>	<p>㉔</p>  <p>(I) : x 9 (II) : x 9 K3-01201 M5x14</p>	<p>㉕</p>  <p>(I) : x 9 (II) : x 9 K3-03050 M5</p>	<p>㉖</p>  <p>(I) : x 1 (II) : x 1 K3-90001</p>

I	II
Start kit	Extension kit
Kit de départ	Kit de suite
Startpaket	Extrapaket
Startpakke	Ekstrapakke

