

BALCONY BANISTER

Installation instruction

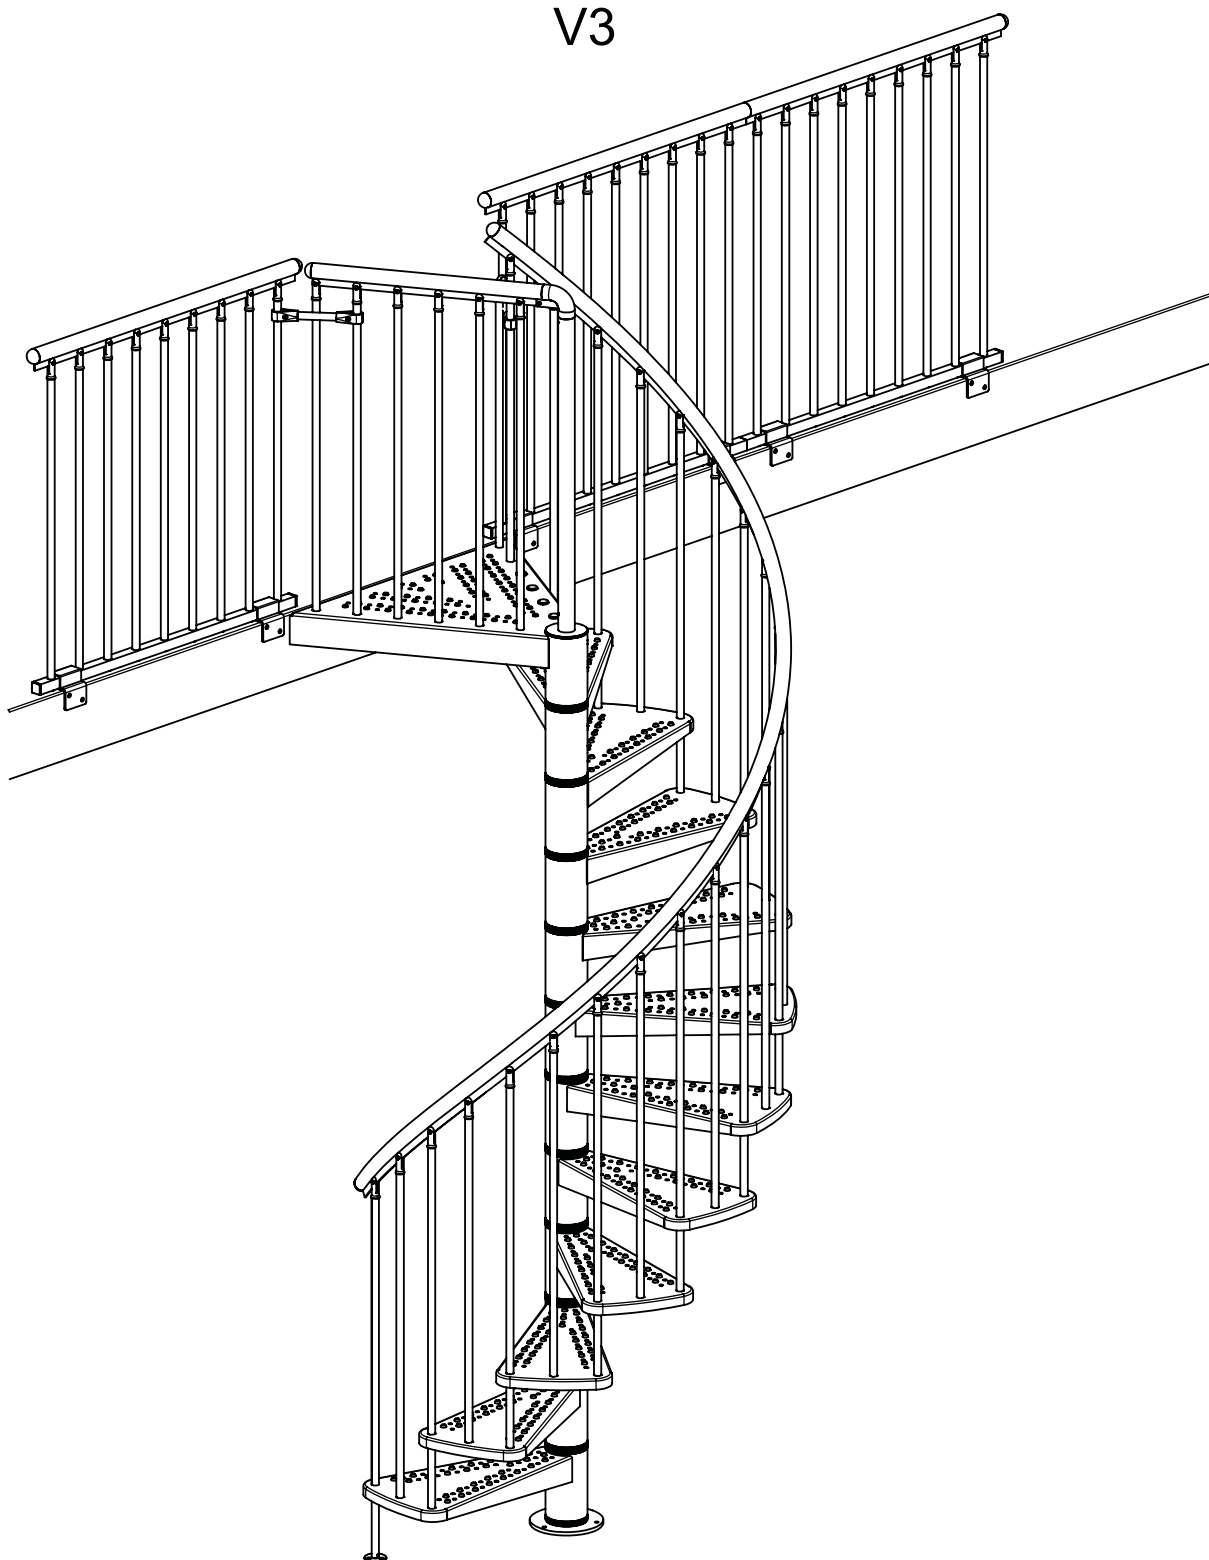
BRÜSTUNGSGELÄNDER


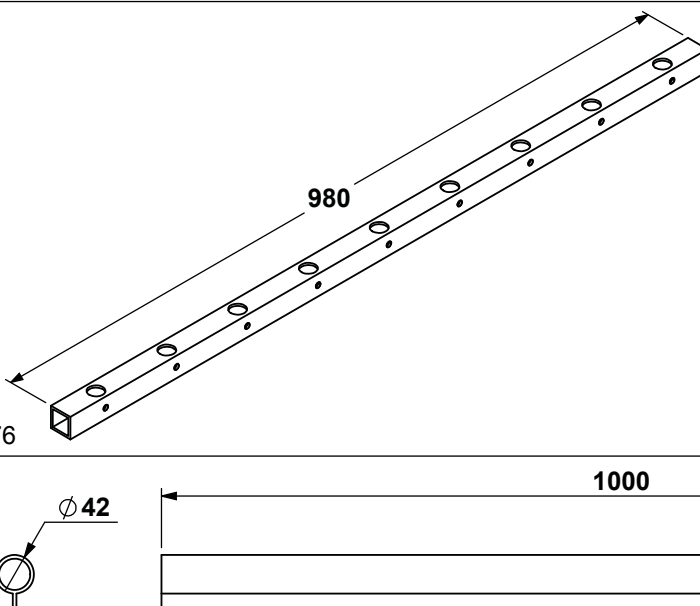
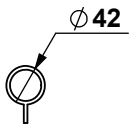

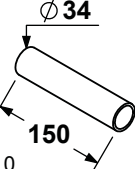
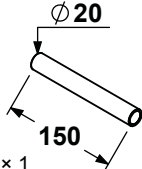

Montageanleitung

BALUSTRADE DE BALCON

Instructions de montage

V3



①  902 (I) : × 9 (II) : × 9 K1-39170	②  980 1000 ⑦  Ø 42 (I) : × 1 (II) : × 1 K1-39110 ③  (I) : × 2 (II) : × 2 K2-30230 ④  (I) : × 2 (II) : × 0 K1-30020 ⑤  (I) : × 9 (II) : × 9 K1-39050 ⑥  (I) : × 1 (II) : × 0 K1-19340 ⑧  (I) : × 2 (II) : × 0 K1-39010 ⑨  Ø 34 150 (I) : × 0 (II) : × 1 K1-39011 ⑩  (I) : × 0 (II) : × 1 K1-39012 ⑪  (I) : × 2 (II) : × 0 K2-39190 ⑫  Ø 20 150 (I) : × 1 (II) : × 0 K1-39171 ⑭  (I) : × 1 (II) : × 0 K2-30165 ⑳  Ø 8×60 (I) : × 6 (II) : × 4 K3-06068 ㉑  Ø 8 (I) : × 6 (II) : × 4 K3-04041 ㉒  Ø 10×60 (I) : × 6 (II) : × 4 K3-08004 ㉓  M 8×8 (I) : × 15 (II) : × 13 K3-05020 ㉔  M 5×14 (I) : × 9 (II) : × 9 K3-01201 ㉕  M 5 (I) : × 9 (II) : × 9 K3-03050 ㉖  K3-90001 (I) : × 1 (II) : × 1
---	--

I	II
Start kit	Extension kit
Kit de départ	Kit de suite
Startpaket	Extrapaket
Startpakke	Ekstrapakke

